



OWNER'S MANUAL

HC-3²

HW/FM



Serial No. _____

999954000-0226-D

Mailing Address:
P.O. Box 580697
Tulsa, OK 74158

Phone: 1-800-777-2760
Fax: (918) 269-6688
<http://www.autocrane.com>

Physical Address:
4707 N. Mingo Rd.
Tulsa, OK 74117-5904

At the time of publishing this manual is accurate to the best of our knowledge. Auto Crane reserves the right to change any or all items, components and parts, necessary for any reason. This right does not obligate Auto Crane to immediately update the manual. If in doubt, please call your local Auto Crane distributor for the most up-to-date information.

Auto Crane Company issues a limited warranty with each unit sold. See warranty pages at the end of the manual.

Table of Contents

SECTION		PAGE
1	Safety Tips And Precautions	5
2	Introduction	6
3	General Specifications	8
	3.1 Dimensions	8
	3.2 Capacity	8
	3.3 Reach	8
	3.4 Cable	8
	3.5 Chassis And Mounting Requirements	8
	3.6 Electrical System Requirements	8
	3.7 Rotation	8
	3.8 Hydraulic System Requirements	8
4	Load Chart	9
5	Qualifications And Operating Practices	10
	5.1 Operators	10
	5.2 Qualifications For Operators	10
	5.3 Conduct For Operators	11
	5.4 Operating Practices/Handling Of The Load	11
	5.5 Operating Near Electrical Power Lines	12
	5.6 Preparing The Crane For Operation	14
6	8 Function Pendant with ON/OFF	16
7	FM Control Transmitter	21
8	FM Control Transmitter Diagnostics	23
9	FM Control Transmitter Troubleshooting	26
	Test the Receiver-R160	26
	Test the Transmitter-T150	27
	Testing the Transmitter/Receiver Communication	28
10	FM Control Transmitter ID Code Programming	29
11	Maintenance	31
	11.1 Inspection Requirements	31
	11.2 Inspection Classification	31
	11.3 Frequent Inspection	31
	11.4 Periodic Inspection	32
	11.5 Cranes Not In Regular Use	33
	11.6 Inspection Records	33
	11.7 Testing Requirements	33
	11.8 General Repairs And Maintenance	34
	11.9 Maintenance Precautions	34
	11.10 Adjustments And Repair	34
	11.11 Lubrication	35
	11.12 Rope Replacement	35

Table of Contents

SECTION	PAGE
11.13	Rope Installation And Maintenance 35
11.14	Paint Finish Maintenance 36
11.15	Lubrication And Maintenance Schedule 37
11.16	Lubrication Points 38
11.17	Adjusting Oil Cooled Worm Brake 39
11.18	Brake Adjustment 39
11.19	Rotation Bearing Replacement 40
12	Crane Mounting And Installation 41
12.1	Stability Chart Installation 42
12.2	Emergency Crane Operation 44
13	Decal Layout 46
14	General Dimensions 48
15	General Assembly FM 50
	General Assembly HW 51
16	Pedestal Assembly FM 52
17	Pedestal Assembly HW 56
18	Boom Assembly 60
19	Winch Assembly 62
20	Hoist Actuator 63
21	Traveling Block Assembly 65
22	Junction Box Assembly 66
23	Hydraulic Control Valve 67
24	Manual Override Procedure 68
25	Hoist Proportional Valve 69
26	Electrical Schematic HW 70
27	Main Wiring Harness HW 71
28	Electrical Schematic FM 73
29	Main Wiring Harness FM 74

ANNEXES	PAGE
A	Recommended Operating Temperature 76

Safety Tips and Precautions 1

DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates information considered important, but not hazard-related.

WARNING

Federal law (49 CFR part 571) requires that the Final Stage Manufacturer of a vehicle certify that the vehicle complies with all applicable federal regulations. Any modifications performed on the vehicle prior to the final state are also considered intermediate stage manufacturing and must be certified as to compliance. The installer of this crane and body is considered one of the manufacturers of the vehicle. As such a manufacturer, the installer is responsible for compliance with all applicable federal and state regulations, and is required to certify that the vehicle is in compliance.

WARNING

It is the further responsibility of the installer to comply with the OSHA Truck Crane Stability Requirements as specified by 29 CFR part 1910.180 (C) (1). In applications, where the rotation of the load is hazardous, a tag or restraint line should be used, (ref. OSHA 1910.180(h)(3)(XVI)). To reduce the potential for the load to rotate or rope twist, operate at minimal boom angles and extension.

WARNING

Do not attempt to lift or drag a load from the side! The boom can fail far below its rated capacity.

WARNING

Do not weld, modify, or use unauthorized components on any Auto Crane unit! This will void any warranty or liability. Also failure of the crane may result.

WARNING

Failure to correctly plumb and wire crane can cause inadvertent operation and damage to crane and/or personnel!

WARNING

Auto Crane Company remote controlled cranes are not designed or intended for use for any applications involving the lifting or moving of personnel. Any such use is considered to be improper and the seller shall not be responsible for any claims arising from such use. This sale is made with the express understanding there is no warranty the goods are fit for the purpose of lifting or moving persons or other improper use. There is no implied warranty or responsibility for such uses.

2 Introduction

NOTICE

Keep this manual with the crane at all times.

Auto Crane products are designed to provide many years of safe, trouble-free, dependable service when properly used and maintained.

To assist you in obtaining the best service from your crane and to avoid untimely crane and/or vehicle failure, this manual provides the following operating and service instructions. It is specifically recommended that all operating and service personnel consider this manual as mandatory material for reading and study before operating or servicing Auto Crane products. It is highly recommended crane owners, equipment managers, and supervisors also read this manual.

Auto Crane has incorporated several safety features in the crane for your protection.

For your convenience the overall dimensions of the crane are included on the General Dimension Drawing. Rotation and turning radius are also listed on that drawing.

Remember, the crane adds weight to the vehicle. Adding weight may change the driving and riding characteristics of the vehicle unless the appropriate overload spring(s) are installed on the truck. The payload of the vehicle is reduced by the weight of the crane. The operator should exercise care when loading the vehicle. Distributing the payload on the vehicle evenly will greatly improve the driving and riding characteristics of the vehicle.

Auto Crane Company issues a limited warranty certificate with each unit sold. See last page for warranty.

The cranes are attached to your 12 volt truck electrical system. The crane is another highly efficient Auto Crane product. The use of a maintenance-free battery is not recommended on any Auto Crane product. The recommended alternator and battery that will give the longest life with the most useful duty cycle is a 125 amp alternator with a 500 cold cranking amp battery. These specifications should be considered minimum.

It has always been Auto Crane Company policy to handle all warranty claims we receive as promptly as possible. If a warranty claim involves discrepant material or workmanship, Auto Crane will take immediate corrective action. It is understandable that Auto Crane Company cannot assume responsibility of liability when it is obvious that our products have been abused, misused, overloaded or otherwise damaged by inexperienced persons trying to operate the equipment without reading the manual.

NOTICE

Auto Crane will not assume responsibility or liability for any modifications or changes made to unit, or installation of component parts without authorization.

Auto Crane maintains a strong distributor network and a knowledgeable Customer Service Department. In most cases, an equipment problem is solved via phone conversation with our customer service department. The customer service department also has the ability to bring a local distributor, a regional sales manager, or a factory serviceman into the solution of an equipment problem.

If, through no fault of Auto Crane Company, it is necessary to send an experienced factory serviceman on a field service call the rates stated in the Auto Crane Distributor's Flat Rate Manual will apply.

Auto Crane Company's extensive Research and Development Program allow our customers to use the best equipment on the market. Our Engineering Staff and our knowledgeable sales people are always available to our customers in solving crane and winch-type application problems. When in doubt, call the Auto Crane factory.

Should you require any assistance not given in this manual, we recommend that you consult your nearest Auto Crane Distributor. Our distributors sell authorized parts and have service departments that can solve almost any needed repair. This manual does not cover all maintenance, operating, or repair instructions pertinent to all possible situations.

If you require additional information, please contact the Auto Crane Company at the following telephone number: **1-800-777-2760**

The information contained in the manual is in effect at the time of this printing. Auto Crane Company reserves the right to update this material without notice or obligation.

3 General Specifications

3.1 DIMENSIONS

- Width: 18.38 in. (0.46 m)
- Height: 24 in. (0.60 m)
- Length: 9 ft. 2-3/4 in. (2.81 m), stored length.
- Weight: 640 lbs. (290 kg)

3.2 CAPACITY

- 10,000 ft-lbs (1.38 ton-m)
- Ft-lbs = horizontal distance from center line of rotation to free hanging weight (feet) x amount of weight (pounds).

3.3 REACH

- Second boom reach: 7 ft. 4 in. to 11 ft. 4 in.
- Third boom reach: 11 ft. 4 in. to 15 ft. 4 in.

3.4 CABLE

- 62 ft. (18.9 m) of 7/32 in. (5.56 mm) diameter aircraft quality cable. This cable has a single line breaking strength of 5,600 lbs. (2,540 kg).

3.5 CHASSIS AND MOUNTING REQUIREMENTS

- 8,800 lbs. (3,992 kg) GVWR minimum.
- 201,600 in-lbs. Resistive Bending Moment (RBM)
- 3/4", Grade 8-UNF Bolts. Tightened to 315 ft. lbs.
- 9" Mounting hole to run electrical lines to the crane from the body.

3.6 ELECTRICAL SYSTEM REQUIREMENTS


- Voltage: 12 VDC
- Alternator: 60 amps minimum
- Battery: 100 minute reserve capacity minimum. Maintenance Type battery

3.7 ROTATION

- 370° continuous rotation

3.8 HYDRAULIC SYSTEM REQUIREMENTS

- Flow: 5 GPM
- Pressure: 2100 PSI

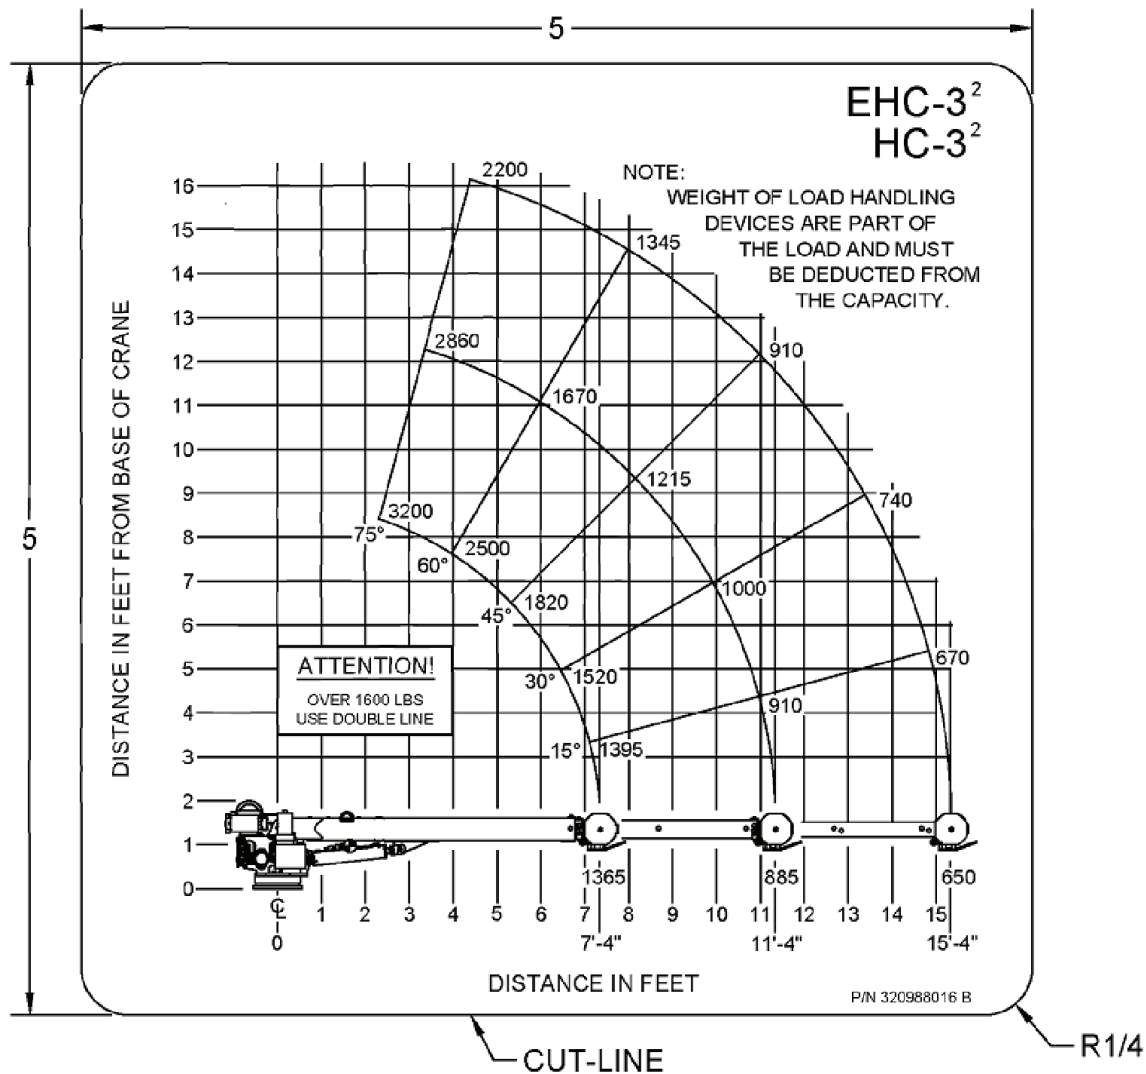

Note: Max lifting capacity is 3,200 lbs.

⚠ WARNING

All load ratings are based on crane capacity, not the vehicle stability. When lifting a heavy load, the weight can create enough tipping moment to overturn the vehicle. **DO NOT USE** the overload shutdown device to determine maximum rated loads, if the crane is equipped with this type of device.

⚠ WARNING

Always comply with load chart capacities.

5 Qualifications and Operating Practices

THIS IS ONLY AN OVERVIEW OF ALL APPLICABLE QUALIFICATION REQUIREMENTS. REFERENCE ASME B30.5A AND OSHA 1910.180 FOR COMPLETE QUALIFICATION REQUIREMENTS.

5.1 OPERATORS

1. Crane operation shall be limited to personnel with the following minimum qualifications:
 - A. Designated persons.
 - B. Trainees under the direct supervision of a designated person.
 - C. Maintenance and test personnel (when it is necessary in the performance of their duties).
 - D. Inspectors (crane).
2. No one other than the personnel specified above shall enter the operating area of a crane with the exception of persons such as oilers, supervisors, and those specified persons authorized by supervisors whose duties require them to do so and then only in the performance of their duties and with the knowledge of the operator or other persons.

5.2 QUALIFICATIONS FOR OPERATORS

1. Operators shall be required by the employer to pass a practical operating examination.
2. Qualifications shall be limited to the specific type of equipment for which examined.
3. Operators and operator trainees shall meet the following physical qualifications:
 - A. Vision of at least 20/30 snellen in one eye and 20/50 in the other, with or without corrective lenses.
 - B. Ability to distinguish colors, regardless of position, if color differentiation is required for operation.
 - C. Adequate hearing with or without hearing aid for the specific operation.
4. Evidence of physical defects or emotional instability, which render a hazard to operator or others, which in the opinion of the examiner could interfere with the operator's performance, may be sufficient cause for disqualification. In such cases, specialized clinical or medical judgment and tests may be required.
5. Evidence that operator is subject to seizures or loss of physical control shall be sufficient reason for disqualification. Specialized medical Tests may be required to determine these conditions.
6. Operators and operator trainees should have normal depth perception, coordination, and no tendencies to dizziness or similar undesirable characteristics.
7. In addition to the above listed requirements, the operator shall:
 - A. Demonstrate the ability to comprehend and interpret all labels, operator's manuals, safety codes, and other information pertinent to correct crane operations.
 - B. Possess the knowledge of emergency procedures and implement it.
 - C. Demonstrate to the employer the ability to operate the specific type of equipment.
 - D. Be familiar with the applicable safety regulations.
 - E. Understand the operating procedures as outlined by the Auto Crane.
 - F. Be thoroughly familiar with the crane and its control functions.

5.3 CONDUCT OF OPERATORS

1. The operator shall not engage in any practice, which will divert his attention while actually operating the crane.
2. Each operator shall be responsible for those operations under the operator's direct control. Whenever there is any doubt as to safety, the operator shall consult with the supervisor before handling the loads.
3. The operator should not leave a suspended load unattended unless specific precautions have been instituted and are in place.
4. If there is a warning sign on the switch or engine starting controls, the operator shall not close the switch or start the engine until the warning sign has been removed by the appointed person.
5. Before closing the switch or starting the engine, the operator shall see that all controls are in the "OFF" or neutral position and all personnel are in the clear.
6. If power fails during operation, the operator shall:
 - A. Move power controls to the "OFF" or neutral position.
 - B. Land the suspended load and boom, if practical.
7. The operator shall be familiar with the equipment and its proper care. If adjustments or repairs are necessary, the operator shall report the same promptly to the appointed person, and shall also notify the next operator.
8. The operator at the start of each shift shall test all controls. If any controls do not operate properly, they shall be adjusted or repaired before operations are begun.
9. Stabilizers shall be visible to the operator while extending or setting unless a signal person assists operator.

5.4 OPERATING PRACTICES/HANDLING THE LOAD



CAUTION

Never use two cranes to support a load too large for either crane.

1. Size of load.
 - A. No crane shall be loaded beyond the rated load except for test purposes
 - B. The load to be lifted is to be within the rated load of the crane and its existing configuration.
 - C. Know the weight of the rigging and deduct from the load rating to prevent overloading the crane.
 - D. When loads that are not accurately known are to be lifted, the person responsible for the job shall determine the weight of the load does not exceed the crane rated load at the radius at which the load is to be lifted.
2. Attaching the load.
 - A. Ensure the load is properly attached to the hook by means of slings or other devices of sufficient capacity.
 - B. Ensure the vehicle is in a level position when loading or unloading.
 - C. Hoist rope shall not be wrapped around the load.
3. The operator shall determine that:
 - A. The crane is level and, where necessary, the vehicle/carrier is blocked properly.
 - B. The load is well secured and balanced in the sling or lifting device before it is lifted more than a few inches.
 - C. Means are provided to hold the vehicle stationary while operating the crane.
 - D. Before starting to lift, the hook shall be positioned over the load in such a manner as to minimize swinging.
4. During lifting care shall be taken that:
 - A. There is no sudden acceleration or deceleration of the moving load.


5 Qualifications and Operating Practices

- B. When rotating the crane, sudden starts and stops shall be avoided. Rotational speed shall be such that the load does not swing out beyond the radius at which it can be controlled.
 - C. Load, boom or other parts of the crane do not contact any obstruction.
 - D. Cranes shall not be used for dragging loads sideways.
 - E. This standard recognizes that telescopic boom cranes are designed and intended for handling materials. They do not meet personnel lift or elevator requirements. Therefore, no lifting, lowering, swinging or traveling shall be done while a person is on the hook or load. Hook attached suspended work platforms (baskets) shall not be used with cranes covered by this standard.
 - F. The operator should avoid carrying loads over people.
5. When the crane is so equipped, the stabilizers shall be fully extended and set. Blocking under stabilizers shall meet the requirements as follows:
- A. Strong enough to prevent crushing.
 - B. Of such thickness, width and length as to completely support the stabilizer pad.
 - C. Firm footing under all tires, or individual stabilizer pads should be level. Where such a footing is not otherwise supplied, timbers, cribbing, or other structural members to distribute the load so as to not exceed allowable bearing capacity or the underlying material should provide it.
6. In transit, the boom shall be carried in stowed position.
7. The crane shall not be transported with a load on the hook.

5.5 OPERATING NEAR ELECTRICAL POWER LINES



Never operate the crane near electrical lines or in the danger zone area.

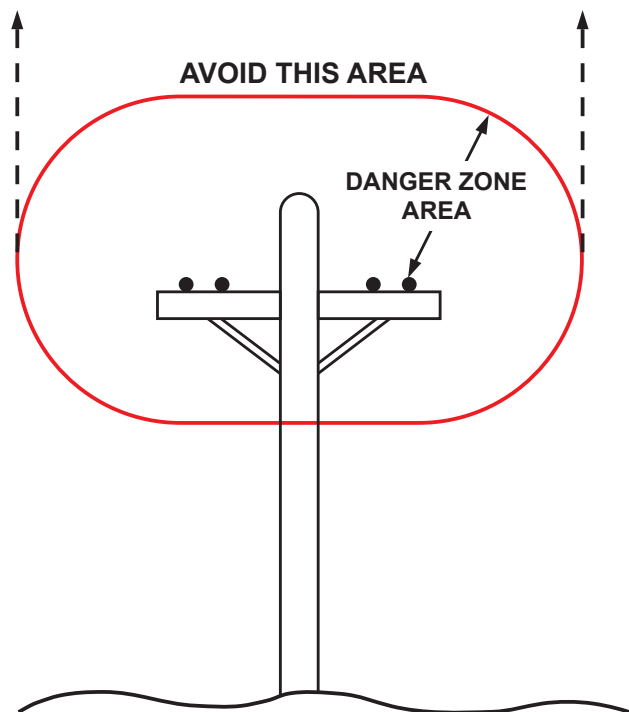

Qualifications and Operating Practices 5

1. Do not place any part of the crane or load inside the Danger Zone.

EXCEPTIONS:

- A. The Danger Zone may be entered after confirmation by an appointed person the electrical distribution and transmission lines are de-energized and visibly grounded at the point work.
 - B. The Danger Zone may be entered if insulating barriers are erected to prevent physical contact with the lines. These can't be a part of or attached to the crane.
2. For the minimum safe distance between electrical lines and any part of the crane or load (including handling appendages), or while in the transit with the boom stowed, see below Table Safe Operating Distance.
 3. Exercise caution when working near overhead lines. They can move horizontally and vertically due to wind, shifting the location of the Danger Zone.
 4. Assign a qualified, signal person observe the clearance and warn the crane operator before approaching the Safe Operating Distance limits.
 - A. Treat all overhead wires as energized until the person or utility owning the line verifies it is not energized.
 - B. Exceptions ensuring equivalent protection are allowed, if approved by the administrative or regulatory authority in writing.
 - C. Install durable signs at the operator's station and on the outside of the crane, warning that electrocution or serious bodily injury may occur if the table Safe Operating Distance limits aren't adhered to.

Safe Operating Distance for Cranes Near Electrical Lines		
When operating near high voltage power lines		
Normal Voltage, kV - (phase to phase)	Minimum Required Clearance	
	Ft.	(m)
0 - 50	10	(3.5)
50 - 200	15	(4.6)
200 - 350	20	(6.1)
350 - 500	25	(7.62)
500 - 750	35	(10.67)
750 - 1000	45	(13.72)
When in transit with no load and boom stowed		
0 - 0.75	4	(1.22)
0.75 - 50	6	(1.83)
50 - 345	10	(3.83)
345 - 750	16	(4.87)
750 - 1000	20	(6.1)

5 Qualifications and Operating Practices

5.6 PREPARING THE CRANE FOR OPERATION

1. Ensure the manual has been thoroughly read by all crane operating and maintenance personnel and supervisors.
2. Perform a routine inspection of the crane before operation each day. Correct any defects immediately.
3. At the job site, position the vehicle so the crane can reach the load within the rated capacity (center line of rotation to hoist hook).
4. Keep the vehicle as level as possible during operation.
5. Allow the vehicle engine to warm up before operation.
6. For Auto Crane units using only electric operation:
 - A. Engage the emergency brake.
 - B. Leave the ignition on with the transmission in neutral (or park for automatic transmissions).
 - C. Activate any crane power switches.
7. For Auto Crane units using electric and hydraulic operation:
 - A. Engage the emergency brake.
 - B. Place the transmission in neutral.
 - C. Press the clutch in.
 - D. Activate PTO (Power Take Off).
 - E. Release the clutch.
 - F. Allow sufficient time for the hydraulic fluid to warm up.
 - G. Set the throttle control to the proper engine speed.
8. For all outrigger usage:
 - A. Always extend the outriggers from the vehicle to the ground before crane operation. Ensure they are firmly positioned on solid ground.
 - B. Stand clear of outriggers while being extended.
 - C. If a curb or other object prevents the outrigger from beginning fully extended, shorten the bearing or fulcrum point and reduce the maximum load accordingly.
 - D. If an outrigger will not reach the ground because of holes or grades, block up the outrigger pad to provide level and firm support to the vehicle.
 - E. If working in soft ground, use wide pads under the outrigger feet to prevent sinking.
 - F. Always store the outriggers before transportation.
 - i. For Auto Crane units with Manual Outriggers:
 1. Pull the lock pins to release the jackleg or drop down outrigger. Move to the outermost lock position.
 2. Ensure lock pins are reinstalled properly.
 3. Lower the Outrigger pad to firm ground and adjust the foot to remove slack.
 - ii. For Auto Crane units with Hydraulic Outriggers:
 1. Shift the diverter valve to the Outrigger position.
 2. Extend the Outriggers to their horizontal limit.
 3. Extend the Outriggers vertically until they make solid contact with the ground with the ground and the truck is approximately level side-to-side.
 4. With the Outriggers properly positioned, return the diverter valve to the Crane position.

Qualifications and Operating Practices 5

9. Remove the remote control from the cab or storage area. Power the remote control on. Detach the hook from the dead man.
10. The crane is now ready for operation.


DURING OPERATION

1. Always boom up before rotating so the boom will clear the boom support.
2. Always maintain clearance between the boom crown and the traveling block or hook hoist during boom extension. Always observe all relevant safe policies and procedures during crane operation.
4. Always use slow and smooth movements with the crane to avoid causing the load to swing like a pendulum.


AFTER OPERATION

1. After completing the lifting operations, return the boom to the stowed position on the boom support.
2. Replace remote control to its storage location.
3. Return the Outriggers to the stowed position. Ensure they are pinned in place or jack legs are returned to the storage compartment.
4. Always store the crane in its stowed position for transportation.
5. Release the throttle control, press the clutch in, and disengage the PTO. Deactivate any crane power switches.
6. Check vehicle surroundings before moving.
7. Record any unusual occurrence during crane operation which may indicate required maintenance or repair.

6 8 Function Pendant with ON/OFF P/N: 680040000

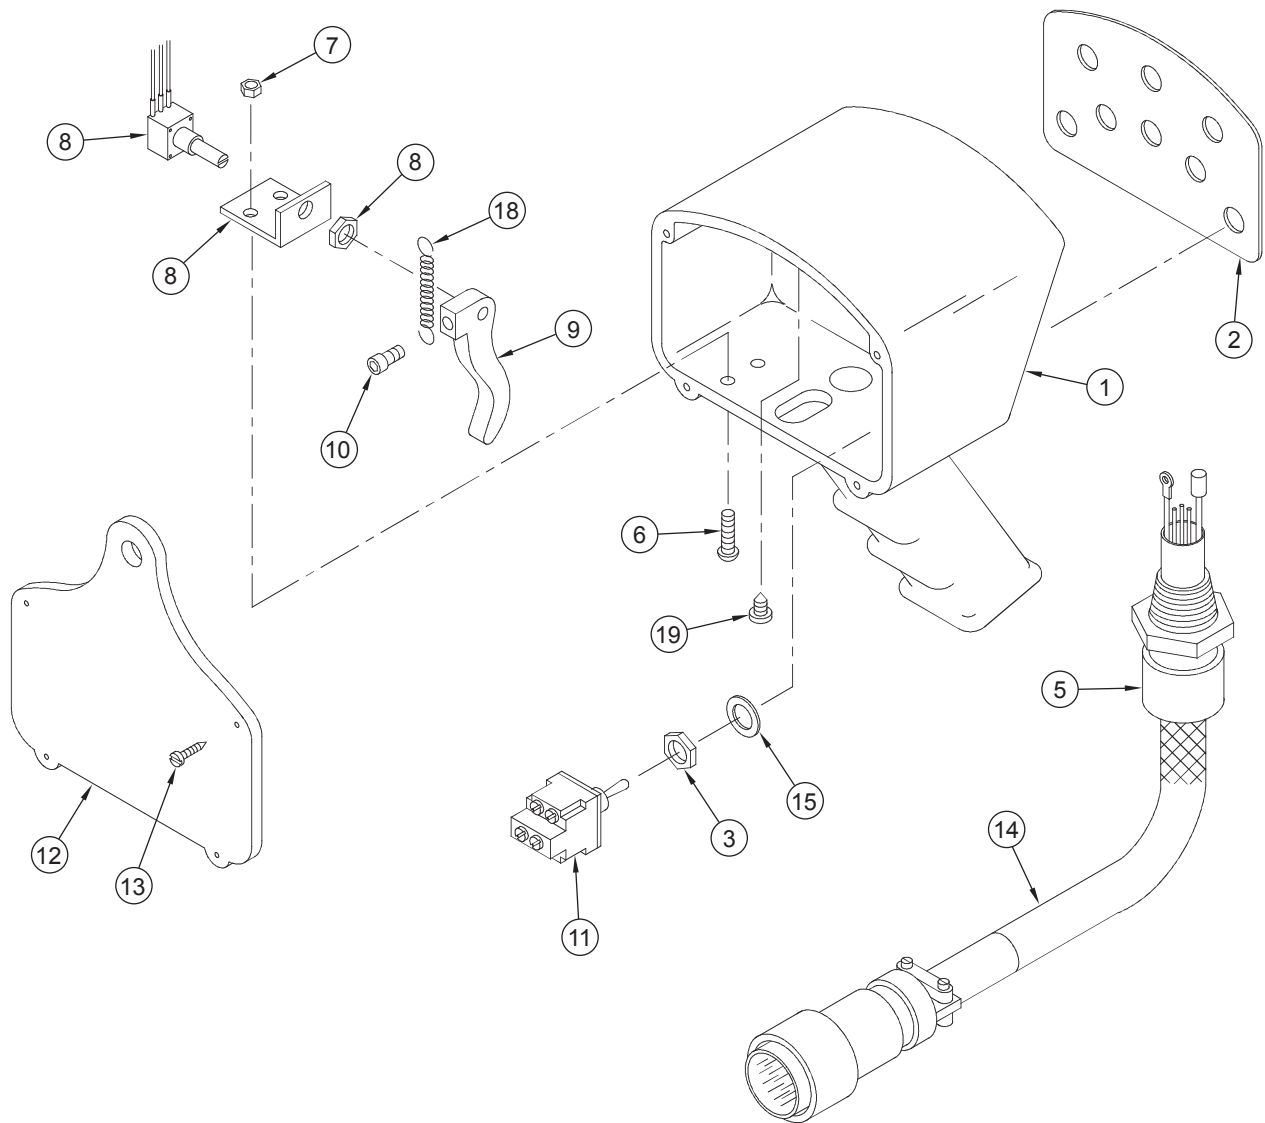

8 Function Pendant with ON/OFF P/N: 680040000 6

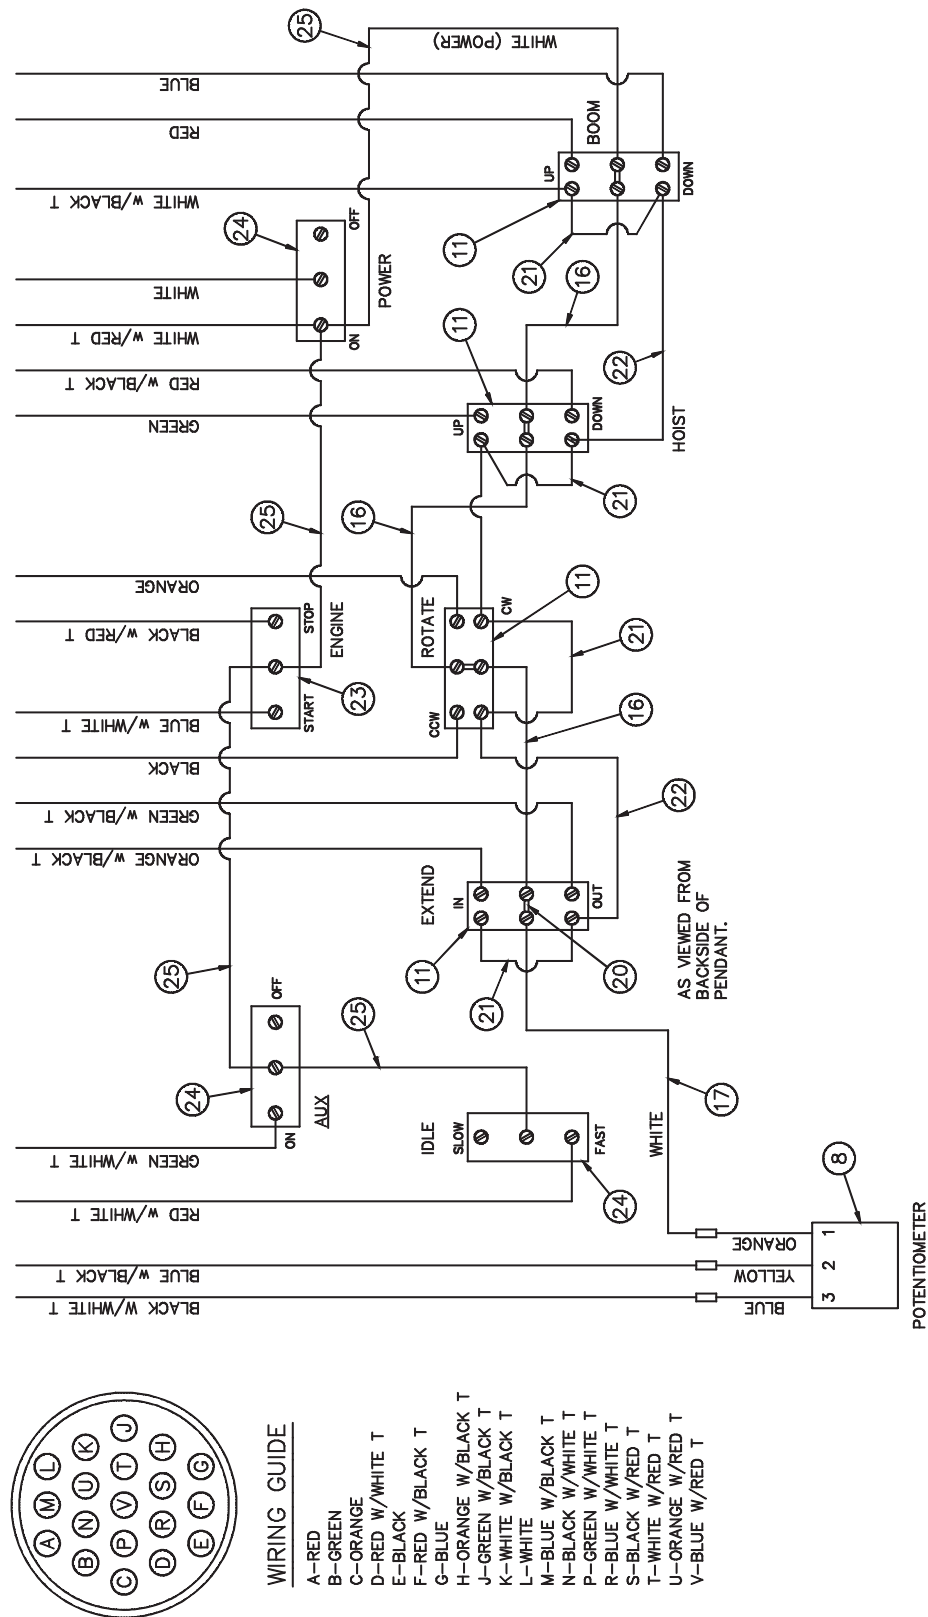


6 8 Function Pendant with ON/OFF P/N: 680040000

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	480501	HOUSING, PROP, PENDANT, MACH.
2	1	480518	DECAL/COVER PLATE
3	8	REF	NUT
4	-	-	-
5	1	480567	CORD GRIP, HUBBEL CONNECTOR
6	2	002607	SCREW, HX HD #10-24 NC X 3/4 LG.
7	2	015801	NUT, HX LK #10-24 NC
8	1	480507	POTENTIOMETER ASSEMBLY
9	1	480506	TRIGGER
10	1	480517	SCREW, SOC HD #10-32 NF X 5/8 LG.
11	4	634200	SWITCH, TOGGLE DPDT
12	1	480504	BACK PLATE, HOUSING
13	4	001004	SCREW, PAN HD #6 X 3/4 LG.
14	1	680113	CABLE ASSEMBLY, BAYONET
15	8	REF	WASHER, LOCK
16	3	660302	CONDUCTOR ASSEMBLY
17	1	480524	CONDUCTOR ASSEMBLY
18	1	480523	SPRING, TRIGGER RETURN
19	1	005003	SCREW, S.T. PAN HD #6 X 3/8 LG.
20	4	636600	JUMPER
21	4	622346	CONDUCTOR ASSEMBLY
22	3	622347	CONDUCTOR ASSEMBLY
23	1	622000	SWITCH, TOGGLE SPDT
24	3	750090	SWITCH, TOGGLE ON/OFF
25	1	480526	CONDUCTOR ASSEMBLY
26	2	750737	TIE, CABLE


8 Function Pendant with ON/OFF P/N: 680040000 6

TRANSMITTER LAYOUT

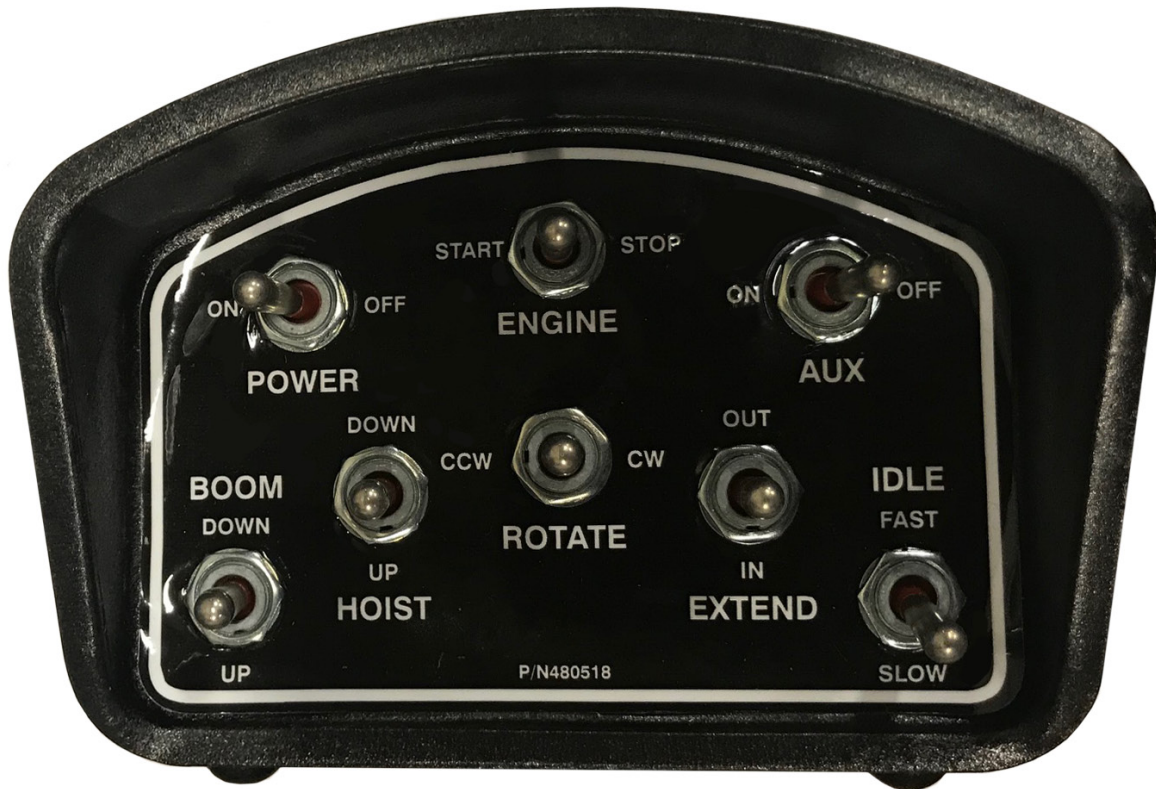

6 8 Function Pendant with ON/OFF P/N: 680040000

PENDANT CABLE BAYONET P/N: 680113000

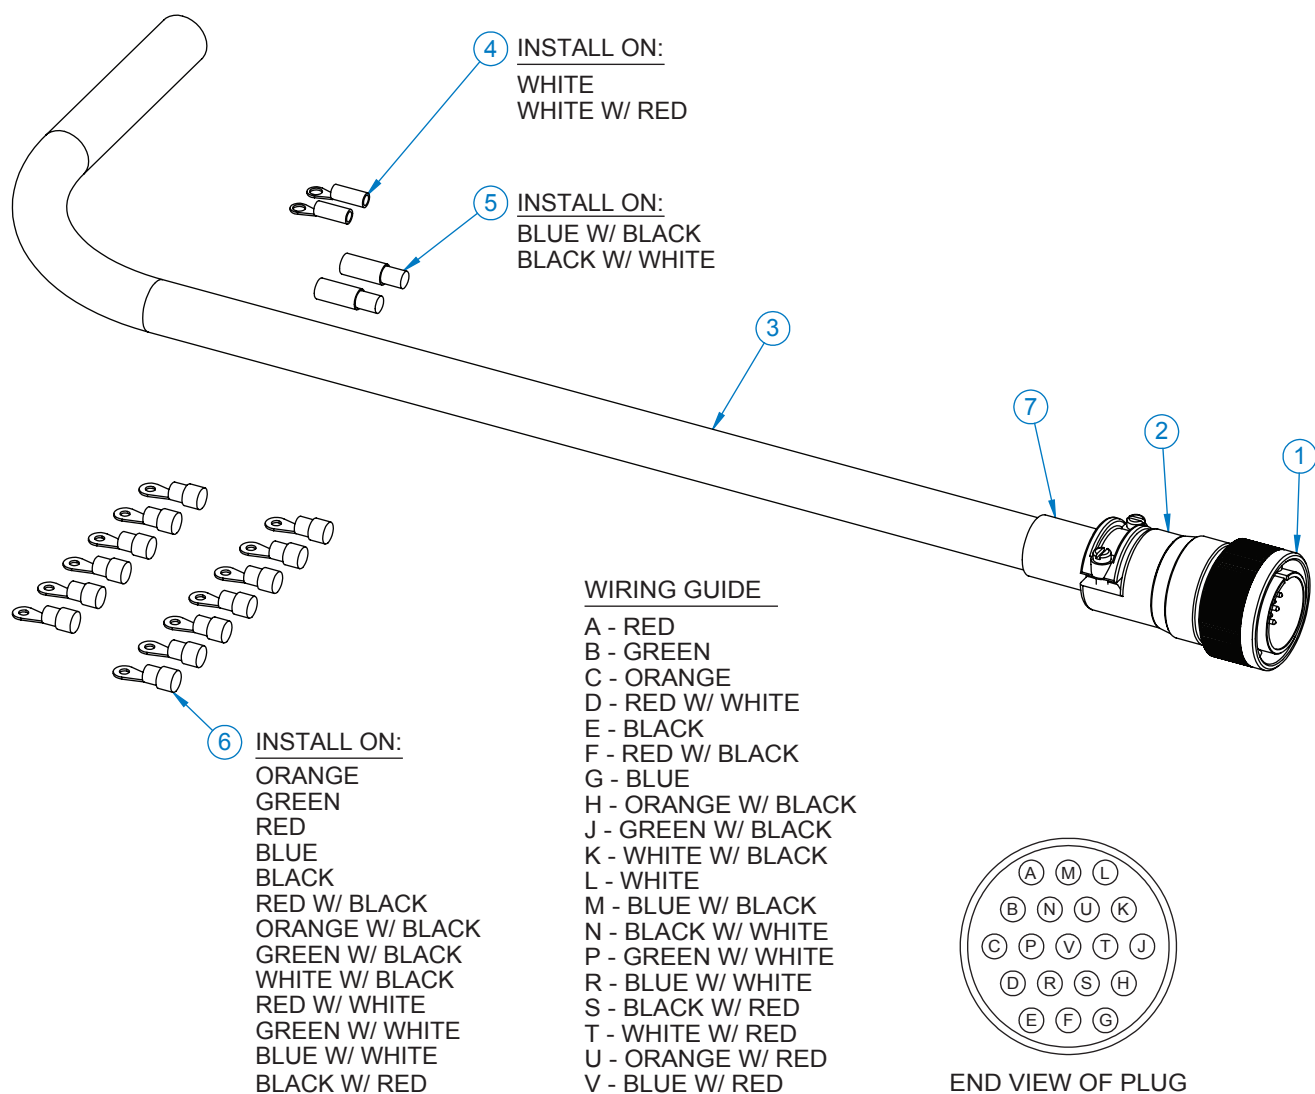

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	366098000	PLUG 19 PIN
2	1	480515000	CLAMP, CABLE
3	1	480594001	CABLE PEND (2)16GA/(17)20GA - 30 FT
4	2	000101000	TERMINAL RING, 5/32, 14-16 GA
5	2	480510000	CONNECTOR BULLET FEMALE
6	13	002012000	TERMINAL RING #6 18-22
7	1	490243000	TUBING, HEAT SHRINK

TRANSMITTER LAYOUT

There is a red light to the left of the ON/OFF Toggle switch and a yellow light to the right. As the battery runs down, the red light will begin to flash as well as the yellow light.

If the yellow light is rapidly flashing this indicates that the unit is transmitting. Refer to the Transmitter Diagnostics Section for a detailed explanation of each light combination.

In addition to the two lights mentioned above there are four function toggle switches. These functions from left to right are to be used to raise and lower the boom, raise and lower the hoist cable, rotate the crane and extend and retract the boom.



POWER ON/OFF TOGGLE SWITCH

The transmitter is powered by four AA alkaline batteries, located under the back cover of the housing. To turn the transmitter on, press and hold the Power On Toggle, release once the transmit light starts blinking. To turn the unit off, press and hold the power off toggle, release after the transmit light stops flashing.

FUNCTION SWITCHES

To operate a function, toggle one of the function switches with either the thumb of the hand holding the unit or the thumb or fingers of the opposite hand. More than one function can be activated at one time.


CARE

KEEP DRY. Do not clean the transmitter / receiver under high pressure. If water or other liquids get inside the transmitter battery or receiver compartment, immediately dry the unit. Remove the case and let the unit air dry.

WELDING

DISCONNECT THE RADIO RECEIVER BEFORE WELDING on the crane, load, or truck. Failure to disconnect will result in the destruction of the radio receiver.

7 FM Control Transmitter P/N: 460156000

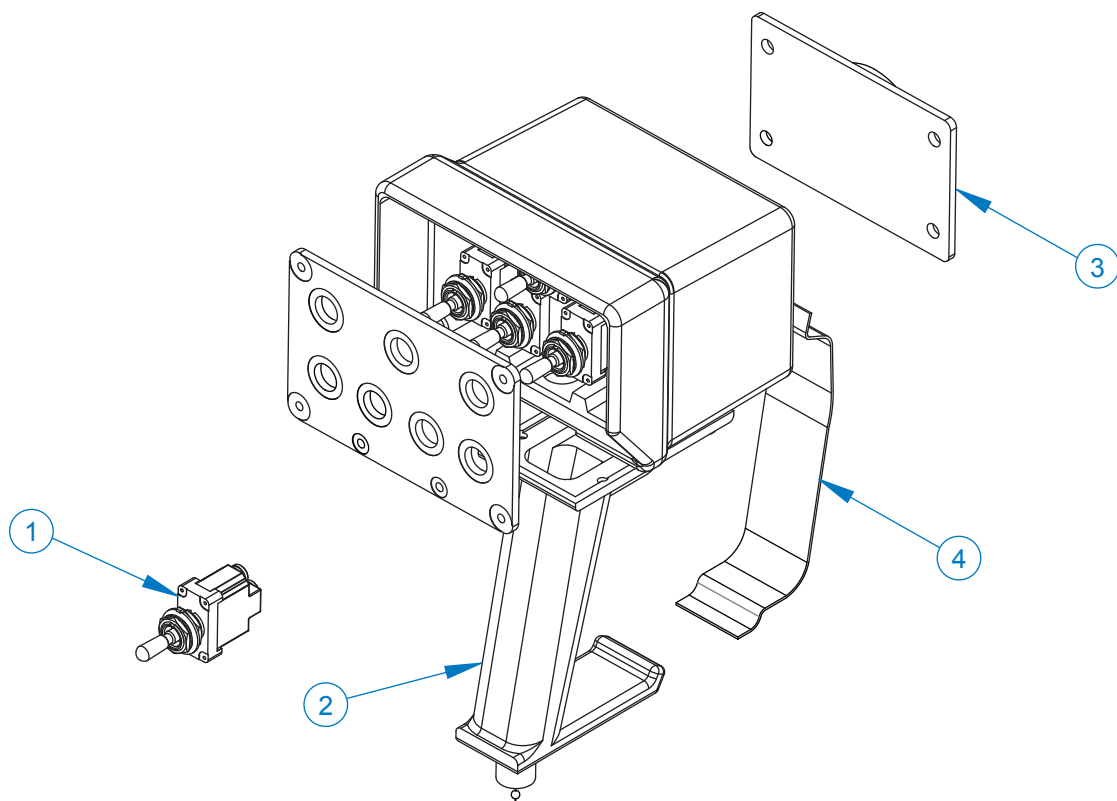

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	7	460166000	TOGGLE SWITCH KIT (OMNEX)
2	1	460168000	HANDLE, TRANSMITTER W/O TRIGGER
3	1	460163000	COVER, TRANSMITTER BATTERY W/MAGNET
4	1	460162000	GUARD, TRIGGER (OMNEX)

FM Control Transmitter Diagnostics 8

RED YELLOW	Tether connection detected
RED YELLOW	Low battery. Unit will run approximately 10 hours after Battery light starts flashing.
RED YELLOW	Flashing rapidly for 10 seconds indicates a transmitter failure.
RED YELLOW	Normal Operation The Active light will flash several times per second, indicating that the transmitter is sending signals to the receiver. The Active light will remain on momentarily whenever a function changes.
RED YELLOW	Normal Operation The transmitter is in Download Mode.
RED YELLOW	Stuck switch detected. Ensure that all switches are in a centered position. The transmitter will not power up when a function is ON.
RED YELLOW	On Power Down Unit is still powered. Check for stuck switches, as the transmitter will not power down when a function is ON. Alternating flash means that the transmitter is in Calibration Mode.

Light Legend						
Solid	Slow Flash	Fast Flash	Red Light	Green Light	Yellow Light	Alternating Red & Green Light

8 FM Control Transmitter Diagnostics

Normal Operation

ESTOP  FAULT  LINK  STATUS 	Transmitter is OFF If the transmitter is off, the receiver is operating properly.
ESTOP  FAULT  LINK  STATUS 	Transmitter is ON When the transmitter is turned on, the Link light (fast flashing) and E-Stop (GREEN) indicates the receiver is operating properly.
ESTOP  FAULT  LINK  STATUS 	Transmitter is in Operation When a function is activated on the transmitter, the Fault light will turn on GREEN. This indicates the receiver is operating properly.
ESTOP  FAULT  LINK  STATUS 	Transmitter is OFF When a latched function is activated then the transmitter is turned off, the Fault light will stay on GREEN. If the system was intentionally designed this way, the receiver is operating properly, if not call for service.

Trouble Indicators

Note: In some cases, the indicator lights will be different depending on whether the transmitter is on or off. Please note the transmitter status in the "Description" column for each case.

Indicator Lights	Description	Solution
ESTOP  FAULT  LINK  STATUS 	Transmitter is ON The reason is the transmitter is not communicating with the receiver.	Refer to Trouble Shooting Chart #3 for solutions.
ESTOP  FAULT  LINK  STATUS 	Transmitter is ON A low battery condition has been detected.	To detect intermittent conditions caused by poor or corroded ground or power circuits, the GREEN light will continue to flash for 30 seconds after the condition has been removed.
ESTOP  FAULT  LINK  STATUS 	Transmitter is ON An internal fault with the E-Stop has been detected.	Check fuse, if OK then: Inspect E-Stop wiring for short circuit. Disconnect E-Stop wire as close to the receiver output as possible. If the Status light changes to: GREEN, a short occurs after disconnection point. Stays flashing RED, send it in for service.
ESTOP  FAULT  LINK  STATUS 	Transmitter is ON A short to ground or excessive current draw on an output. It is most likely caused by a wiring fault.	Ensure transmitter is functioning properly, check status of each output connection: Press each function button and observe Fault Light. If GREEN, everything is OK. If RED, there is a short in that connection.
ESTOP  FAULT  LINK  STATUS 	Transmitter is ON E-Stop output is connected with one of the other outputs or one of the outputs is shorted to power	Turn off transmitter, if condition clears follow E-Stop wire and check for connections with other wires. If condition remains one of the outputs is shorted to power. Test all outputs wires for power.
ESTOP  FAULT  LINK  STATUS 	Transmitter is OFF A wiring short to the battery has been detected.	Refer to Trouble Shooting Chart #1 for solutions.

Light Legend

Solid 	Slow Flash 	Fast Flash 	Red Light 	Green Light 	Yellow Light 	Alternating Red & Green Light 
---	--	--	---	---	--	---


FM Control Transmitter Diagnostics 8

ESTOP  FAULT  LINK  STATUS 	Transmitter is OFF The receiver has detected an internal fault.	Refer to Trouble Shooting Chart #1 for solutions.
ESTOP  FAULT  LINK  STATUS 	Transmitter is ON Blown fuse detected. (not functional with proportional units)	Refer to Page 8 for instructions on how to open the receiver case to access fuse. Check wiring for shorts or bare spots. If fuses continue to blow, call for service.
ESTOP  FAULT  LINK  STATUS 	A setup failure has occurred.	Either hold the Setup button for 5 seconds to return to Setup mode or cycle power to return to the normal operating mode.
ESTOP  FAULT  LINK  STATUS 	Transmitter is OFF The receiver is powered incorrectly.	Most likely cause of this condition is that an output wire or the E-Stop wire has been connected to a power source while the power wire is disconnected from the Power Input (A6). I.E. Receiver is being powered from an output and not Power Input.


Light Legend													
Solid		Slow Flash		Fast Flash		Red Light		Green Light		Yellow Light		Alternating Red & Green Light	

9 FM Control Transmitter Troubleshooting

TEST THE RECEIVER - R160

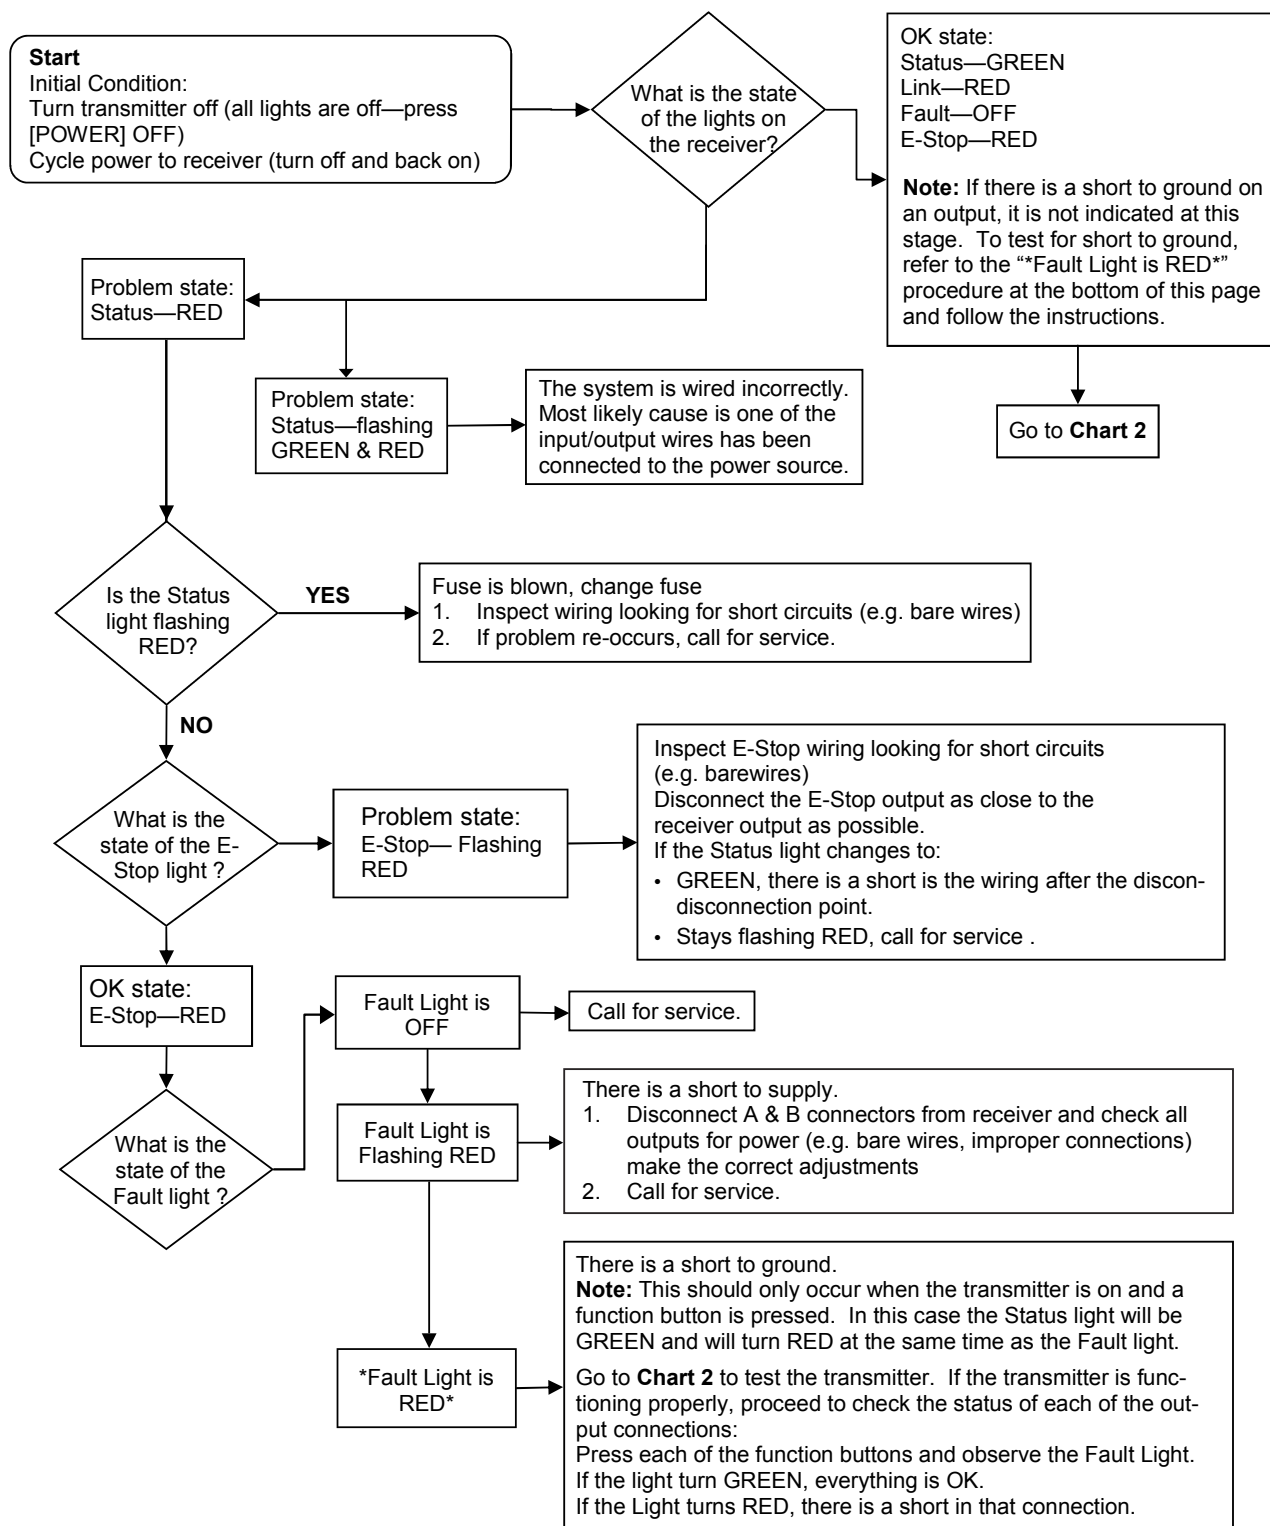


TEST THE TRANSMITTER - T150

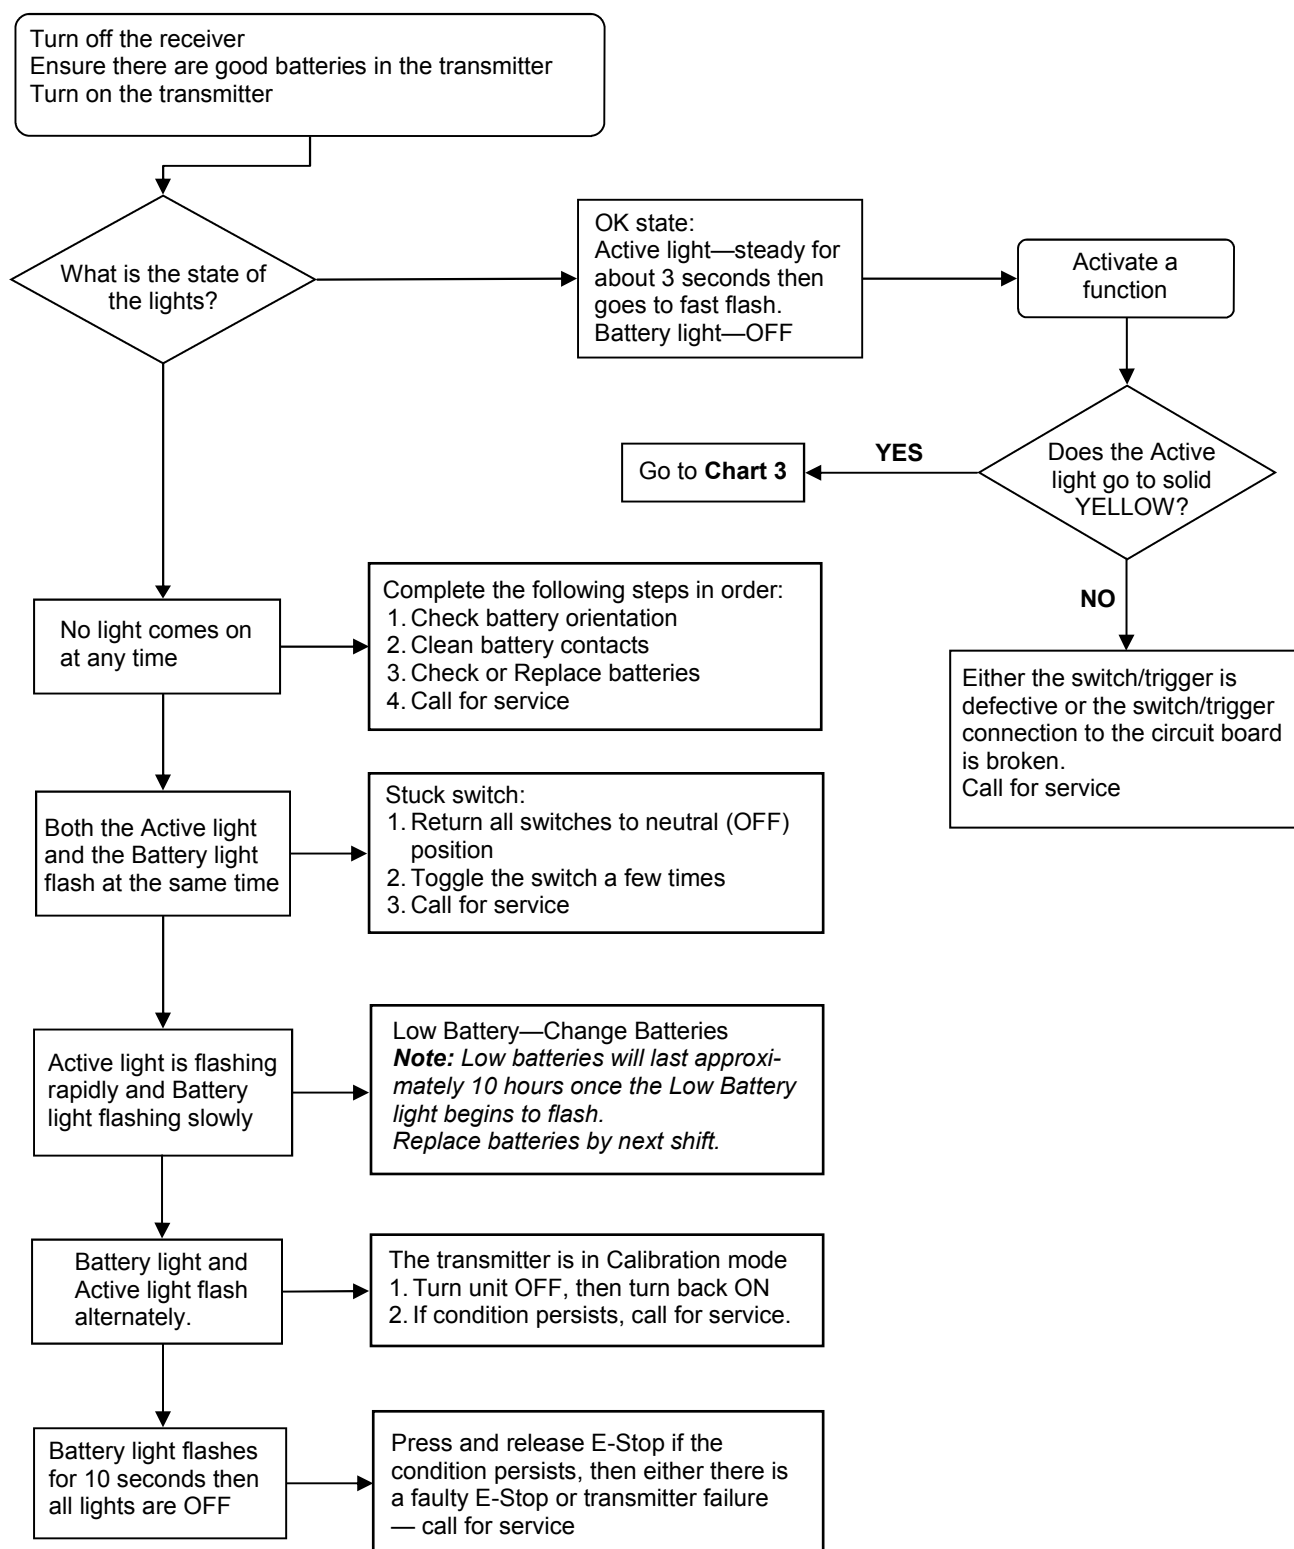

9 FM Control Transmitter Troubleshooting

TESTING THE TRANSMITTER/RECEIVER COMMUNICATION

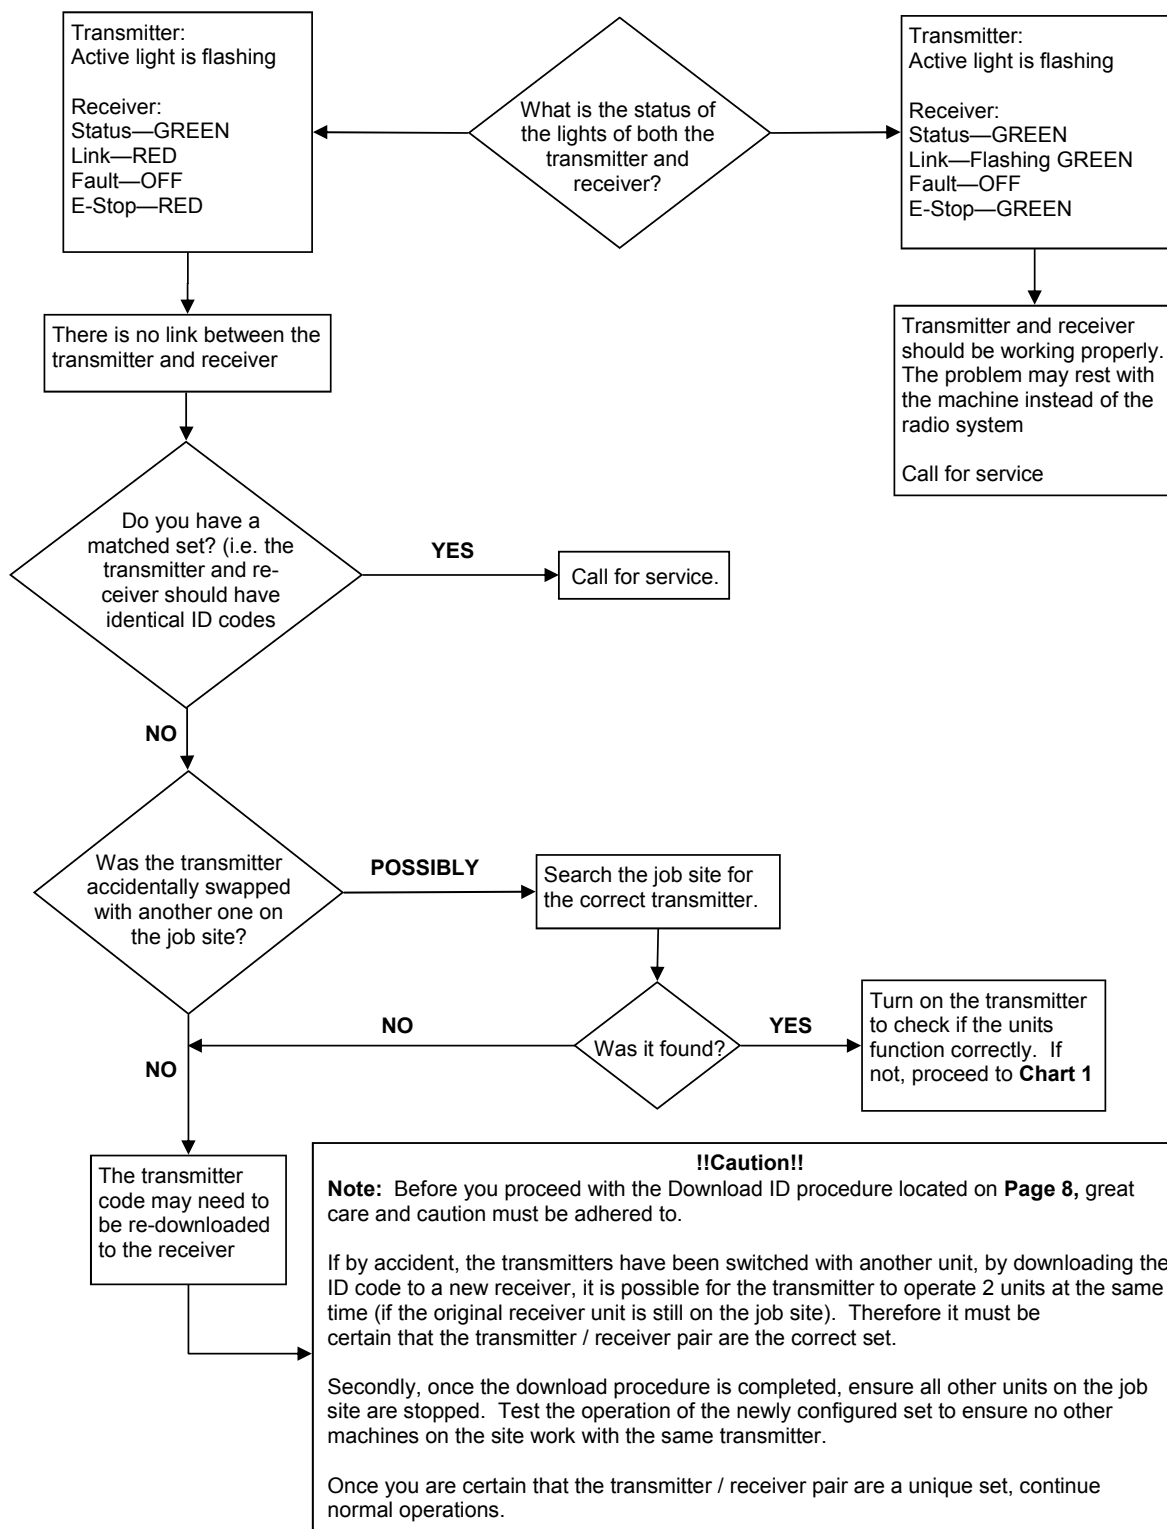


FM Control Transmitter ID Code Programming 10

Download ID Code (Use in Case of Link Test Failure)

CAUTION

Before attempting reprogramming with another transmitter, understand that reprogramming the receiver with another transmitter, could result in two receivers on the job site responding to the one transmitter. If the original transmitter was sent in for repair, disconnect the receiver (disconnect connector A) to continue using the machine without remote capability and without fear of inadvertently operating the machine with the other transmitter.

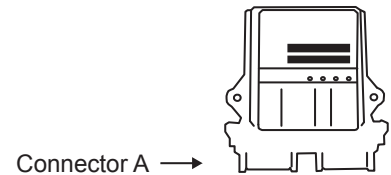

Reprogramming Tips:

1. Use a pointy instrument to depress the Setup button on the receiver (i.e. a pen) as the button is relatively small
2. Follow each step as laid out in the procedure
3. Never lay the receiver circuit board down on anything metallic (there are contact points on the back which could contact the metal and damage the receiver)


Follow these steps to download the transmitter's unique ID Code into the receiver. This will allow the receiver to establish a radio link with that transmitter. Refer to the Light Legend below for diagram details.

NOTE: It is necessary to download the ID Code when replacing either the transmitter or the receiver.

NOTE: If the transmitter is connected to the receiver with a tether cable, completing only steps 3 and 5 is necessary (it is not necessary to open the R160 case and press the Setup button).

1. Opening the Receiver Case


The cap is held on by two plastic tabs at opposing sides, which can be unlatched as shown using a screwdriver. Once the cap is free, the R160 can slide open. Use a small slotted screwdriver to press the side tabs inward

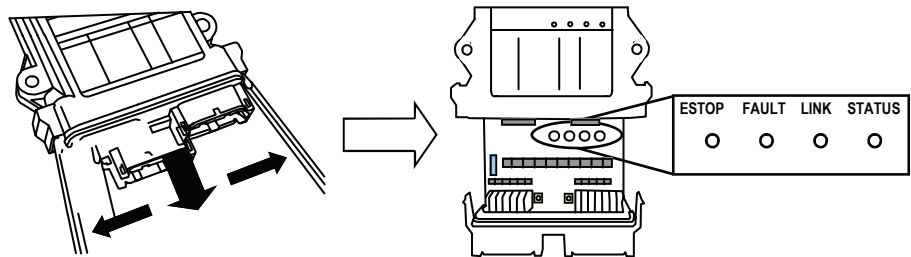


2. Prepare Transmitter, Power Receiver

- A. Press [Power] OFF
B. Supply power to the receiver

A.

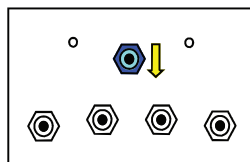

B.

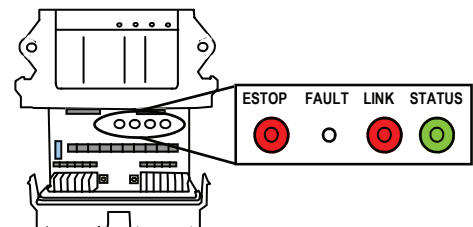

Light Legend


Solid	Slow Flash	Fast Flash	Red Light	Green Light	Yellow Light	Alternating Red & Green Light
-------	------------	------------	-----------	-------------	--------------	-------------------------------

10 FM Control Transmitter ID Code Programming

3. Power Transmitter into Configuration Mode


- Press and hold (BOOM) switch in the UP position.
- Press and release [POWER] switch in the OFF position.
- Release [BOOM] switch.

The ACTIVE LED will flash once per second

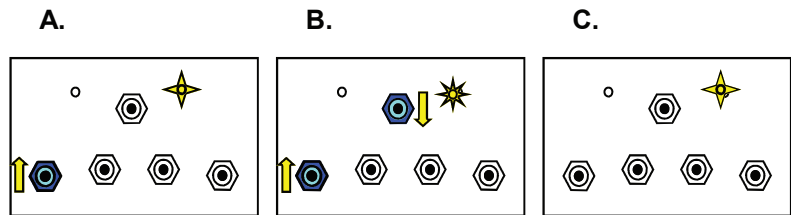

4. Put Receiver into Setup


- Press and hold [SETUP] button until (STATUS) light goes from slow flash to fast flash.
- Release [SETUP] button. (STATUS) light goes to solid GREEN. (LINK) light turns off.

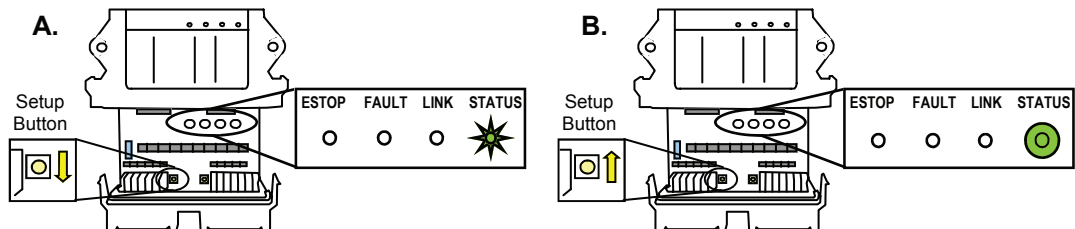

NOTE: If left idle in SETUP mode for over 30 seconds, the receiver will time out. The (LINK) light and (STATUS) light will flash RED rapidly. To return to SETUP mode, repeat step 4.

5. Download ID Code

- Press and release [BOOM] switch in the UP position.
- The R160 (LINK) light goes to GREEN. Once complete, (LINK) light goes to red as the transmitter turns off.

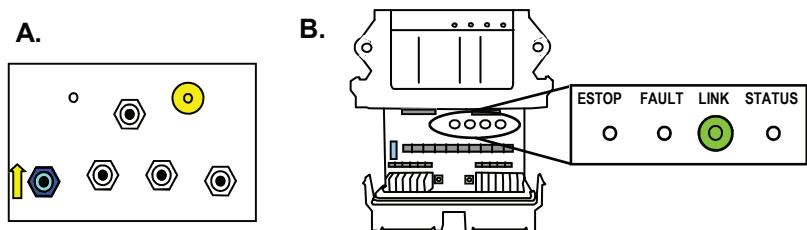

Light Legend						
Solid	Slow Flash	Fast Flash	Red Light	Green Light	Yellow Light	Alternating Red & Green Light

11.1 INSPECTION REQUIREMENTS

NOTICE

Reference ASME B30.5a and OSHA 1910.180 for complete inspection requirements.



WARNING

All inspections shall be performed by the designated personnel only.

11.2 INSPECTION CLASSIFICATION

1. Initial Inspection
 - A. Prior to initial use, all new, altered, modified, or extensively repaired cranes shall be inspected by a designated person to ensure compliance with provisions of this standard.
2. Regular Inspection
 - A. Inspection procedures for cranes in regular service are divided into two general classifications based upon the intervals at which the inspection should be performed. The intervals in turn are dependent upon the nature of the components of the crane and the degree of their exposure to wear, deterioration, or malfunction. The two general classification are herein designated as "frequent" and "periodic" with respective intervals as defined below:
 - i. Frequent Inspection – daily or before each use
 - ii. Periodic Inspection – one to twelve-month intervals or as specifically recommended by the manufacturer or qualified person.

11.3 FREQUENT INSPECTION

Inspections should also occur during operation for any deficiencies that might appear between regular inspections. Any deficiencies, such as those listed below, shall be carefully examined and a determination made as to whether they constitute a hazard:

1. Inspect control mechanisms for maladjustment that interferes with proper operation.
2. Inspect control mechanisms for excessive wear of components and contamination by lubricants or other foreign matter.
3. Inspect safety devices for malfunction.
4. Visually inspect all hydraulic hoses, particularly those that flex in normal operation of crane functions.
5. Inspect hooks and latches for deformation, chemical damage, cracks, and wear.
6. Inspect for proper rope reeving.
7. Inspect electrical wiring and components for malfunctioning, signs of excessive deterioration, dirt and moisture accumulation.
8. Inspect hydraulic system for proper oil level and leaks.
9. Inspect tires for recommended inflation pressure, cuts, and loose wheel nuts.
10. Inspect connecting pins and locking device for wear damage and loose retaining bolts.
11. Inspect rope for gross damage, such as listed below, which may be an immediate hazard.
 - A. Distortion such as kinking, crushing, un-stranding, birdcaging, main strand displacement, or core protrusion. Loss of rope diameter in a short length or unevenness of outer strands should be replaced.

11 Maintenance

- B. General corrosion.
- C. Broken or cut strands.
- D. Use care when inspecting sections of rapid deterioration around flange points crossover points, and repetitive pickup points on drums.
- E. Inspect number, distribution, and type of visible broken wires.

NOTICE

Continued use of rope depends upon good judgment by a designated person in evaluating remaining strength in a used rope after allowance for deterioration disclosed by inspection. Continued rope operation depends upon this remaining strength.

11.4 PERIODIC INSPECTION

Any deficiencies, such as those listed below, shall be carefully examined and determination made as to whether they constitute a hazard:

1. Inspect for deformed, cracked or corroded members in the crane structure and entire boom.
2. Inspect for loose bolts, particularly mounting bolts.
3. Inspect for cracked or worn sheaves and drums.
4. Inspect for worn, cracked, or distorted parts such as pins, bearings, shafts, gears, rollers and devices.
5. Inspect for excessive wear on brakes and clutch system parts and linings.
6. Inspect crane hooks for cracks.
7. Inspect travel steering, braking, and locking devices for malfunction.
8. Inspect for excessively worn or damaged tires.
9. Inspect hydraulic hose, fittings, and tubing for the following problems:
 - A. Evidence of leakage at the surface of the flexible hose or its junctions with the metal and coupling.
 - B. Blistering, or abnormal deformation to the outer covering of the hydraulic or pneumatic hose.
 - C. Leakage at threaded or clamped joints that cannot be eliminated by normal tightening or recommended procedures.
 - D. Evidence of excessive abrasion or scrubbing on the outer surface of a hose, rigid tube, or fitting. Means shall be taken to eliminate the interference of elements in contact or otherwise protect the components.
10. Inspect hydraulic pumps and motors for the following problems:
 - A. Loose bolts and fasteners.
 - B. Leaks at joints between sections.
 - C. Shaft seal leaks.
 - D. Unusual noises or vibrations.
 - E. Loss of operating speed.
 - F. Excessive heating of fluid.
 - G. Loss of pressure.
11. Inspect hydraulic valves for the following:
 - A. Cracks in valve housing.
 - B. Improper return of spool to neutral position.
 - C. Leaks at spools or joints.
 - D. Sticking spools.
 - E. Failure of relief valves to attain or maintain correct pressure setting.
 - F. Relief valve pressure shall be checked as specified by the manufacturers.

12. Inspect hydraulic cylinders for the following problems:
 - A. Driving caused by fluid leaking across piston.
 - B. Rod seals leaking.
 - C. Leaks at welding joints.
 - D. Scored, nicked, or dented cylinder rods.
 - E. Damaged case (barrel).
 - F. Loose or deformed rod eyes or connecting joints.
13. Inspect hydraulic filters for evidence of rubber particles on the filter elements indicating possible hose, O-ring, or other rubber component deterioration. Metal chips or pieces on the filter may denote failure in pumps, motors, or cylinders. Further inspection will be necessary to determine the origin of the problem before corrective action can be taken.
14. Inspect labels to confirm correct location and legibility. Reference decals layout in this manual for proper location of decals.
15. Rope inspections need not be at equal calendar intervals and should be more frequent as the rope approaches the end of useful life. A qualified person shall inspect the wire rope based on such factors as:
 - A. Expected rope life as determined by experience on the particular installation or similar installations.
 - B. Severity of environment.
 - C. Percentage of capacity lifts.
 - D. Frequency rates of operation.
 - E. Exposure to shock loads.
 - i. This inspection shall cover the entire length of the rope. Only the surface wires need to be inspected and no attempt should be made to open the rope. Any deterioration resulting in appreciable loss of original strength shall be noted and determination made as to whether use of the rope would constitute a hazard. A few notable deterioration points are listed below:
 1. Reduction of rope diameter below nominal diameter due to loss of core support.
 2. Internal or external corrosion.
 3. Wear of outside wires.
 4. Severely corroded, cracked, bent, worn, or improperly applied connections.

11.5 CRANES NOT IN REGULAR USE

A crane, which has been idle for a period of more than one month or more, shall be given an inspection conforming to the "initial" and "periodic" inspection requirements of this section.

11.6 INSPECTION RECORDS

Dated records of periodic inspection should be made on critical items such as brakes, crane hooks, rope, cylinders, and relief pressure valves.

11.7 TESTING REQUIREMENTS

NOTICE

Reference ASME B30.5a and OSHA 1910.180 for complete testing requirements.

11 Maintenance

WARNING

All testing shall be performed by designated personnel only. Prior to initial use, all new, altered, modified, or extensively repaired cranes shall be inspected by a designated person to ensure compliance with provisions of this standard.

1. Test all functions to verify speed and operation.
2. Ensure all safety devices are working properly.
3. Confirm operating controls comply with appropriate function labels.
4. Test loads shall not exceed 110% of the manufacturer's load rating.
5. Written reports shall be maintained showing test procedures and confirming the adequacy of repairs.

11.8 GENERAL REPAIRS AND MAINTENANCE

NOTICE

Reference ASME B30.5a and OSHA 1910.180 for complete maintenance and repair requirements.

WARNING

All repairs and maintenance shall be performed by designated personnel only. Establish a preventative maintenance program based on this section. Obtain all replacement parts from your local authorized distributor.

11.9 MAINTENANCE PRECAUTIONS

1. Place crane where it will cause the least interference with other equipment or operations.
2. Verify all controls are in the OFF position and all operating features secured from inadvertent motion by brakes, pawls, or other means.
3. The means for starting the crane shall be rendered inoperative.
4. The boom should be secured in place before maintenance.
5. Relieve hydraulic oil pressure from all hydraulic circuits before loosening or removing hydraulic components.
6. Warning or "OUT OF ORDER" signs shall be placed on all crane controls.
7. After adjustments and repairs have been made, the crane shall not be returned to service until all guards have been reinstalled, trapped air removed from hydraulic system (if required), safety devices reactivated, and maintenance equipment removed.

11.10 ADJUSTMENTS AND REPAIRS

1. Any hazardous conditions disclosed by the inspection requirement shall be corrected before operation of crane is resumed.
2. Adjustments shall be maintained to assure correct of functioning of components, the following are examples:
 - A. Function operating mechanism.
 - B. Safety devices.
 - C. Control systems.
3. Repairs or replacements shall be provided as needed for operation, the following are examples:
 - A. Critical parts of functional operating mechanisms which are cracked, broken, corroded, bent, or excessively worn.

- B. Critical parts of the crane structure which are cracked, bent, broke, or excessively corroded.
 - C. Crane hooks showing cracks, damage, or corrosion shall be taken out of service. Repairs by welding are recommended.
4. If bleeding the hydraulic system is required, run each crane function until smooth operation of that particular function is noticeable.

11.11 LUBRICATION

All moving parts of the crane, for which lubrication is specified, should be regularly lubricated per the manufacturer's recommendations and procedures.

11.12 ROPE REPLACEMENT

No precise rules can be given for determination of the exact time for replacement of rope, since many variable factors are involved.

Replacement rope shall have a strength rating at least as great as the original rope furnished or recommended by Auto Crane. A rope manufacturer, Auto Crane, or a qualified person shall specify any deviation from the original size, grade, or construction.

Conditions such as the following shall be reason for questioning continued the rope or increasing the frequency of inspection:

1. In running ropes, six randomly distributed broken wires in one strand in one lay.
2. One outer wire broken at the contact point with the core of the rope structure and protrudes or loops out of the rope structure. Additional inspection of this section is required.
3. Wear of one third of the original diameter of the outside individual wire.
4. Kinking, crushing, bird caging, or any other damage resulting in distortion of the rope structure.
5. Evidence of any heat damage from any cause.
6. Reduction of nominal diameter of more than:
 - A. 1/64" (0.4mm) – for diameters up to and including 5/16" (8mm)
 - B. 1/32" (0.8mm) – for diameters 3/8" (9.5mm) through and including 1/2" (13mm)
 - C. 3/64" (1.2mm) – for diameters 9/16" (14.5mm) through and including 3/4" (19mm)
 - D. 1/16" (1.6mm) – for diameters 7/8" (22mm) through and including 1-1/8" (29mm)
 - E. 3/32" (2.4mm) – for diameters 1-1/4" (32mm) through and including 1-1/2" (38mm)
7. In standing ropes, more than two broken wires in one lay in sections beyond end connections or more than one broken wire at an end connection.

11.13 ROPE INSTALLATION AND MAINTENANCE

1. Rope should be stored to prevent damage and deterioration.
2. Unreeling or uncoiling of rope shall be done as recommended by the rope manufacturer and with care to avoid kinking or inducing twist.
3. Before cutting a rope, seizing shall be placed on each of the place where the rope is to be cut to prevent unlaying of the strands. On pre-formed rope, one seizing on each side of the cut is required. On non-preformed ropes of 7/8" (22mm) or smaller, two seizings on each side of the cut are required. For non-preformed rope 1 in. (25mm) diameter or larger, three seizings on each side of the cut are required.

11 Maintenance

4. During installation care should be exercised to avoid dragging of the rope in the dirt or around objects that will scrape, nick, crush, or induce sharp bends in it.
5. Rope should be maintained in a well-lubricated condition. It is important that lubricant applied as a part of the maintenance program shall be compatible with the original lubricant and to this end the rope manufacturer should be consulted. Lubricant applied shall be the type that does not hinder visual inspection. Those sections of rope that are located over sheaves or otherwise hidden during inspection and maintenance procedures require special attention when lubricating rope. The object of rope lubrication is to reduce internal friction and to prevent corrosion.
6. When an operating rope shows greater wear or well-defined localized areas than on the remainder of the rope, rope life can be extended in some cases by shifting the wear to different areas of the rope.

11.14 PAINT FINISH MAINTENANCE

The paint finish on Auto Crane products can become damaged during normal use when chipped, scratch, exposed to harsh chemicals, cleaned with pressure washers, or similar. During periods when the truck is exposed to salt or other corrosive chemicals, wash Auto Crane products weekly. Inspect the paint finish monthly or when washed. Immediately repair any exposed bare metal or rust. Repair damaged paint on Auto Crane products with the following procedure:

1. Sand the damaged area to bare metal.
2. Use a solvent to clean the sanded area to remove sanding debris and residue.
3. Wipe dry with a clean cloth to remove any remaining debris and residue.
4. Use a primer compatible with Sherwin Williams E2W932 epoxy primer.
5. Prime the sand areas to a minimum 2 mm dry film thickness per the primer manufacturer's instructions.
6. Use a paint compatible with Sherwin Williams E2W932 epoxy primer and Sherwin Williams Genesis polyurethane top coat paint.
7. Apply the top coat paint to a minimum 2 mm dry film thickness within 24 hours of applying the primer.
8. The final primer and top coat should have approx. a 4 mm dry film thickness.


11.15 LUBRICATION AND MAINTENANCE SCHEDULE

Service Performed	Instructions	Daily	Weekly	3 Months	6 Months	Yearly
Load Hook	Inspect hook and latch for deformation, cracks, and corrosion.	X				
Cable Drum	Ensure cable is wound evenly on drum.	X				
Hoist/Boom Cable	Check for flattening, kinks, broken strands.	X				
Hyd. Hoses	Visual inspection.	X				
Hyd. Fluid	Check fluid level.	X				
Pin Retaining Bolts	Check torque to 23 ft lbs(Grade 5) 35 ft- lbs (Grade 8) as required.	X				
Mounting Bolts	Check torque to 335 ft-lbs as required.		X			
Rotating Ring Gear	Lube with MobileTac LL or Lubriplate.		X			
Sheave Bearings	Sealed bearing, replace if rough or loose.		X			
All Other Bolts	Check and tighten as required.		X			
Lift Cylinder Bearings	Grease with MobilePlex EP-2 or equivalent at zerk fittings			X		
Rotation Bearing	Grease with MobilePlex EP-2 or equivalent at zerk fittings			X		
Rotation Bearing Bolts	Check torque to 170 ft-lbs (hex head) 180 ft-lbs (socket head) as required			X		
Hydraulic Fluid	Drain, flush, and refill with Mobile DTE 13 oil					X
Hoist Main Gearbox	Drain, flush, and refill with EP-140 (capacity reference email)					X
Spur Hoist Gearbox	Drain, flush, and refill with SAE 20 (capacity reference email)					X
Boom Slide Pads	Pads greased when replaced.					
Filter, Valve Block	Replace annually or every 200 hours of operation as directed by the dirty filter sensor.					
For additional information, see OSHA 1910.180 and ASME B30.5a.						

11 Maintenance

11.16 LUBRICATION POINTS

1. Use only authorized parts. Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.
2. Once a bolt has been tightened to specification then removed, the bolt should be replaced with a new one. Auto Crane Company recommends this crane be serviced per the "Crane Inspection Log" P/N 999978. Fill these logs in at the intervals noted and kept as a permanent record. Additional copies are available from your local distributor.

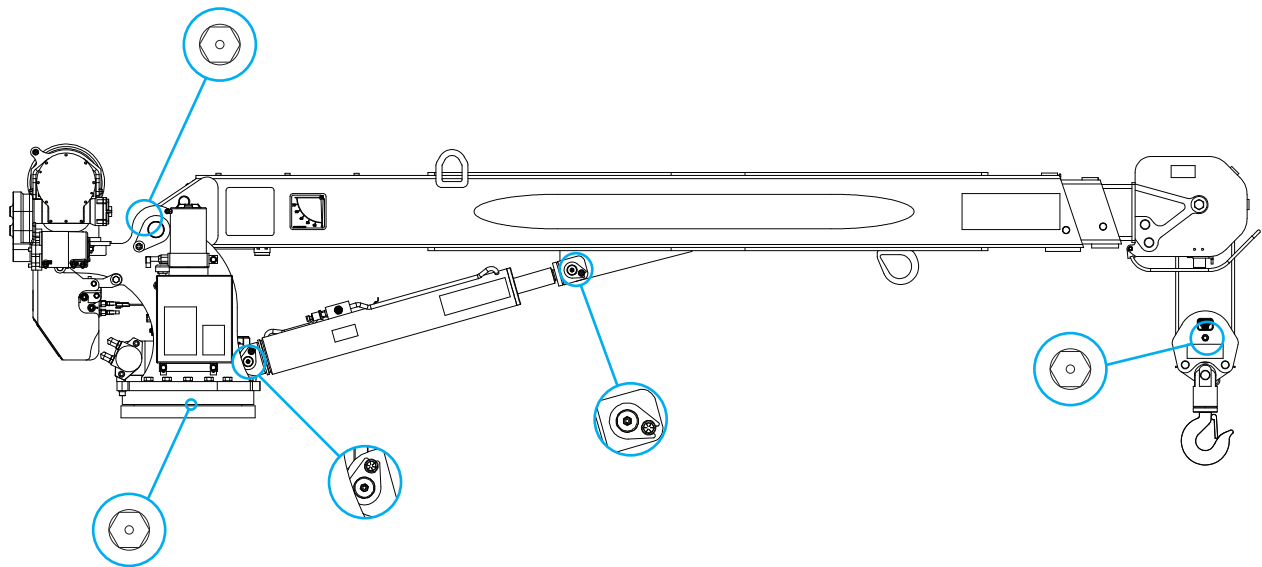

11.17 ADJUSTING OIL COOLED WORM BRAKE


The oil-cooled, fully adjustable, automatic safety brake operates in the worm housing lubricant, all part being submerged in oil. When the brake wears to the point that the load begins to drift, the brake can be adjusted as follows:

1. Loosen the lock nut on the adjusting screw.
2. Tighten the brake by turning the adjusting screw clockwise.

CAUTION: Only ¼ turn is usually required to adjust the brake. Over-tightening can cause overheating, and damage to the brake parts. Tighten the lock nut after adjustment is completed.

If the brake does not respond to adjustment then a new leaf spring and brake disc is needed. A torque wrench can be equipped with a special adapter to fit the input shaft (worm) of the winch. The adapter can be made by welding a nut to the end of a piece of tubing as shown in the following figure.

11.18 Brake Adjustment

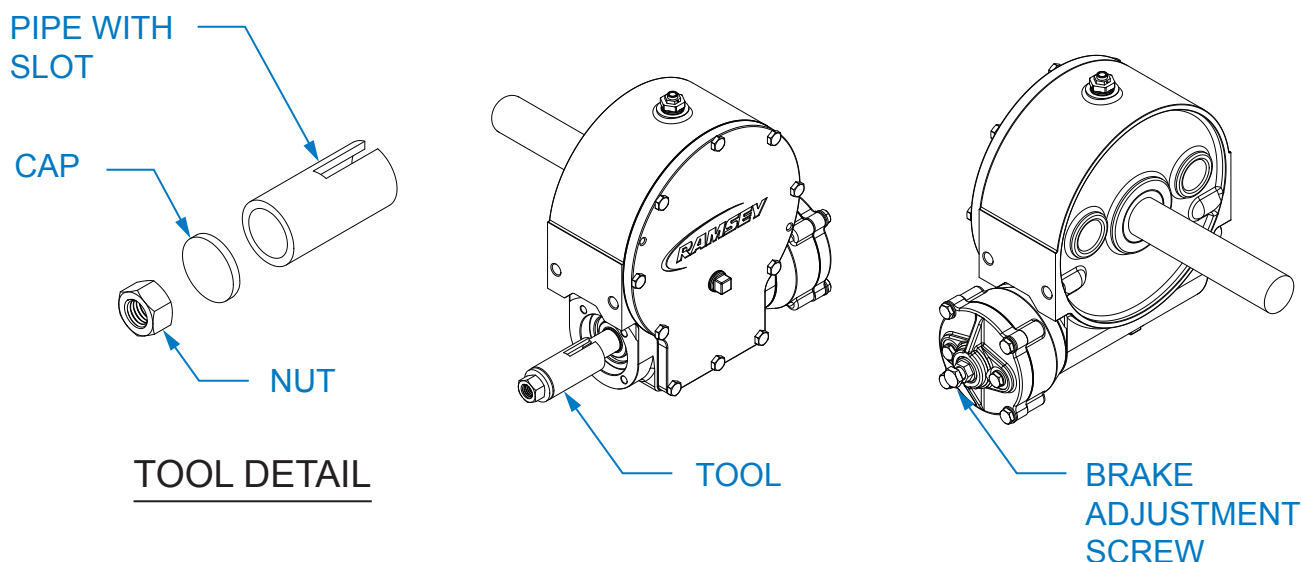

After welding the cap and nut to the tubing, slot the tubing as shown. This will allow the special adapter to slide over the keyway and then act as a large socket. A torque wrench can then be used to apply the proper torque. Turn the torque wrench so that the drum turns in the spool out direction or lowering direction. The torque ratings should be between 8-13 ft-lbs.

If the torque wrench does not show the proper value as it turns, then the worm brake adjusting bolt should be turned clockwise ¼ turn. Each time the adjusting bolt is turned, check the torque reading. Continue this procedure until the proper torque reading is achieved. Then tighten the lock nut.

11 Maintenance

11.19 ROTATION BEARING REPLACEMENT GUIDELINES—2003-4004

All bearings can wear over time. This includes the main rotation bearing on the crane. No precise rules can be given for replacement of the rotation bearing, since many factors are involved. However, there are common symptoms seen during crane operation that may be caused by rotation bearing wear. These symptoms include:

1. Excessive Noise
2. Rough rotation
3. Increased drive power required to rotate.
4. Metal particles in grease


REASONS FOR ROTATION BEARING REPLACEMENT

1. Any noticeable cracking in the bearing housing
2. Excessive axial play (reference axial play check instructions below)

⚠ WARNING Never try to repair a rotation bearing. For a replacement bearing contact your local authorized distributor.

AXIAL PLAY ALLOWANCE CHECK PROCEDURE

1. Boom up to the max boom angle and measure the clearance between base plate and the rotation bearing with a dial or filler gauge. Reference figure for location.
2. Boom down to the horizontal position and measure the clearance between the base plate and the rotation bearing with a dial indicator or feeler gauge. Reference figure for location.
3. If the difference between the two measurements exceeds 1.5 mm, replace bearing.
4. Rotate crane 45 degrees then repeat steps above until you reach 360 degrees of rotation.

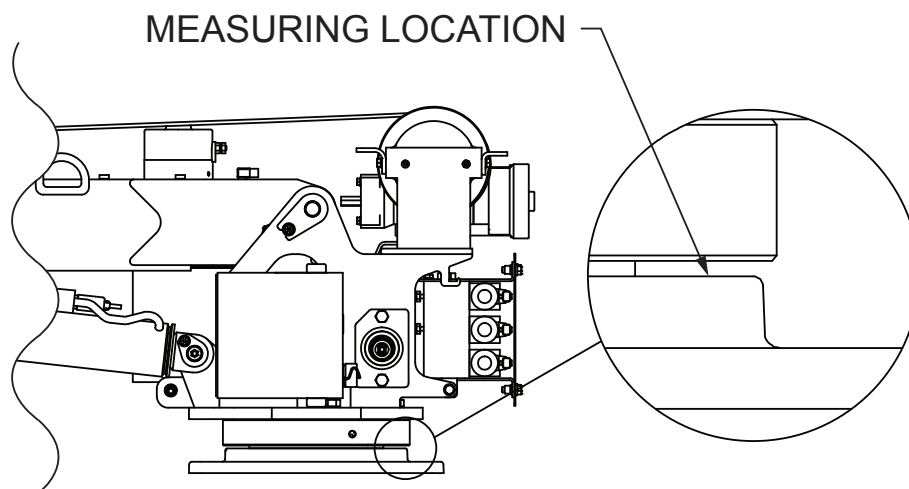

ROTATION BEARING REPLACEMENT KIT P/N: 3208878010

⚠ WARNING When replacing rotation bearing, use new hardware which is included in the kit above.

Crane Mounting and Installation 12

For information specific to your crane, such as mounting hole diameter, bolt size and grade, and hydraulic requirements, see General Dimensions.

1. Refer to the Bill of Materials included with your ship kit. Ensure all items listed on the Bill of Materials are included with your crane.

CAUTION

Failure to use clean hydraulic hoses and components may contaminate the crane and hydraulic system and void warranty.

NOTICE

Excess flow will cause erratic operation and too little flow will cause poor crane operation.

2. Vehicle shall meet minimum GVWR dependent on crane model:
3. The vehicle must be equipped with an engine speed control and tachometer.
4. Ensure the mounting surface is properly reinforced to withstand the capacity loading of the crane. Ensure the outriggers are used to provide total stability for the truck.
5. Cut the proper sized hole in the mounting location (centered with mounting bolts) for access to hydraulic connections.
6. Ensure the mounting bolts are the proper size and grade. Tighten to the correct specification. See General Dimension.
7. Use a boom support when the crane is not in operation. Connect the traveling block to the hook loop.
8. Electrical hookup:

WARNING

Failure to correctly plumb and wire crane can cause inadvertent operation and damage to crane and/or personnel.

9. Ensure the Owner's Manual is delivered to the customer.
10. Install voltage switching unit inside compartment safe from weather and contamination.
11. See following page for additional electrical installation.
12. For additional help: Call the Service Department at the Auto Crane Company, 1-800-777-2760, located in Tulsa, OK.

IMPORTANT!

FEDERAL LAW (49 CFR PART 571) REQUIRES THAT THE FINAL STAGE MANUFACTURER OF A VEHICLE CERTIFY THAT THE VEHICLE COMPLIES WITH ALL APPLICABLE FEDERAL REGULATIONS. ANY MODIFICATIONS PERFORMED ON THE VEHICLE PRIOR TO THE FINAL STAGE ARE ALSO CONSIDERED INTERMEDIATE STAGE MANUFACTURING AND MUST BE CERTIFIED AS TO COMPLIANCE. THE INSTALLER OF THIS CRANE AND BODY IS CONSIDERED ONE OF THE MANUFACTURERS OF THE VEHICLE. AS SUCH A MANUFACTURER, THE INSTALLER IS RESPONSIBLE FOR COMPLIANCE WITH ALL APPLICABLE FEDERAL AND STATE REGULATIONS, AND IS REQUIRED TO CERTIFY THAT THE VEHICLE IS IN COMPLIANCE.


IT IS THE FURTHER RESPONSIBILITY OF THE INSTALLER OF THE CRANE TO COMPLY WITH THE OSHA TRUCK CRANE STABILITY REQUIREMENTS AS SPECIFIED BY 29 CFR PART 1910.180 (C) (1).

12 Crane Mounting and Installation

12.1 STABILITY CHART INSTALLATION


There is a stability chart included in the ship kit. This decal is typically installed on the inside of the door of the crane box. This decal is to alert the user of the available crane capacities around the vehicle.

- 479824002 decal will be installed on an Auto Crane body that was outfitted with an Auto Crane crane and Auto Crane outriggers. Auto Crane has designed the body, crane and outrigger to have stability based on the chart below:

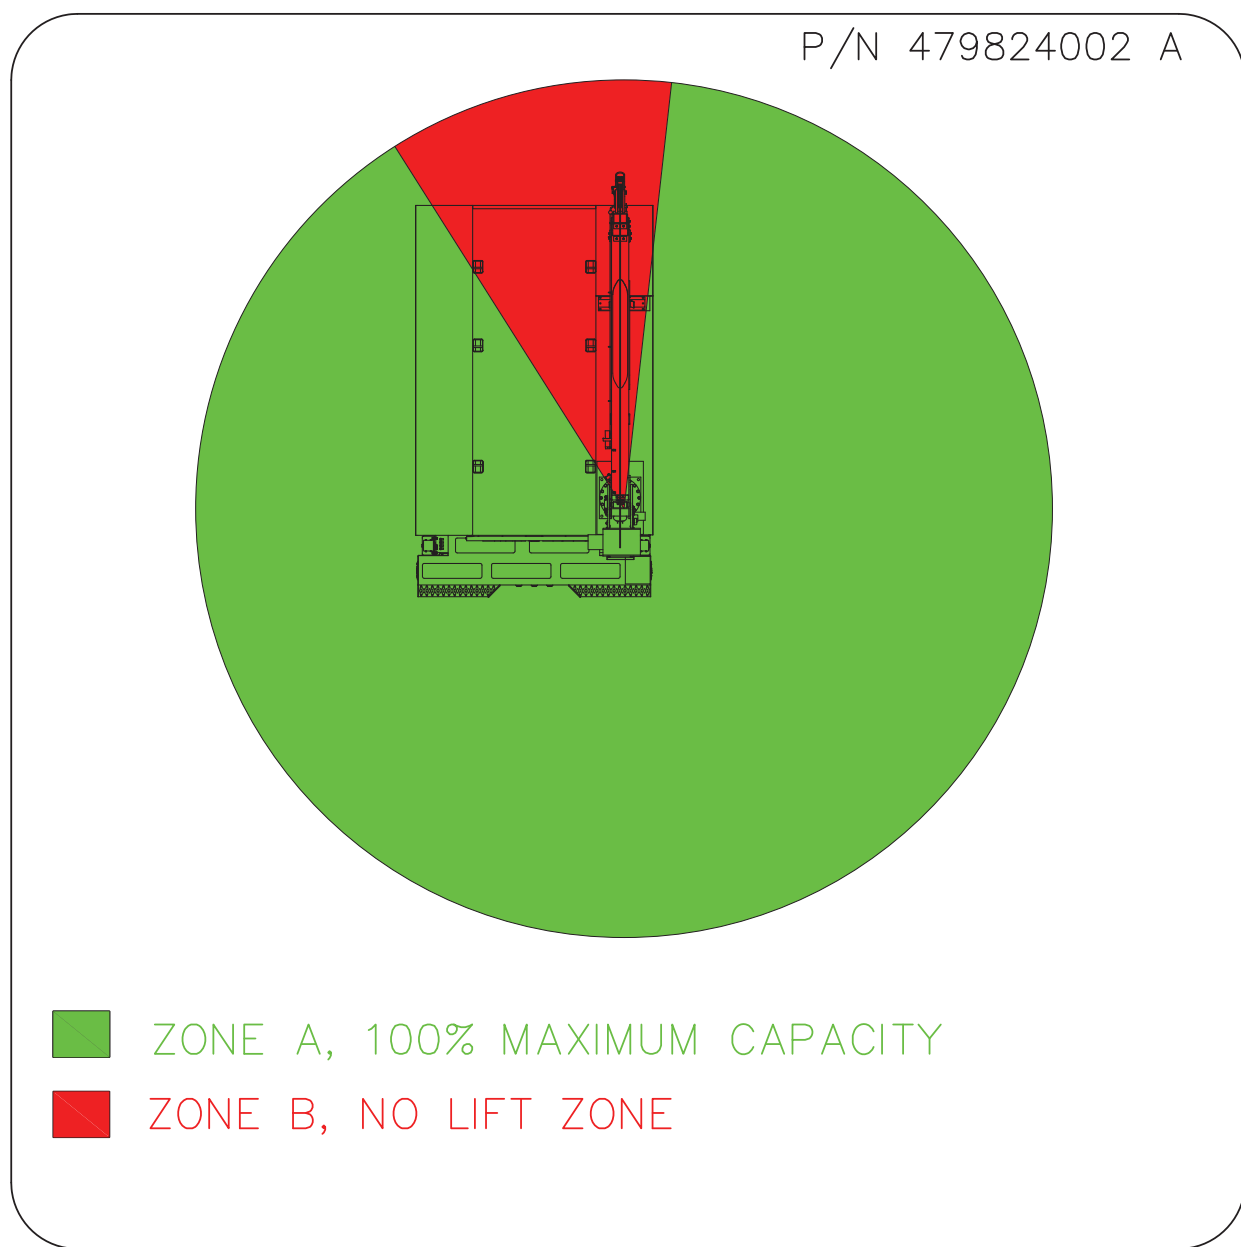

Crane Mounting and Installation 12

- 479824003 decal will be installed on an Auto Crane body that was not outfitted with an Auto Crane crane and Auto Crane outriggers. Auto Crane has designed the body, crane, and outrigger to have stability based on the chart. The stability chart provides lines to write in the tested stability percentage at each section below:

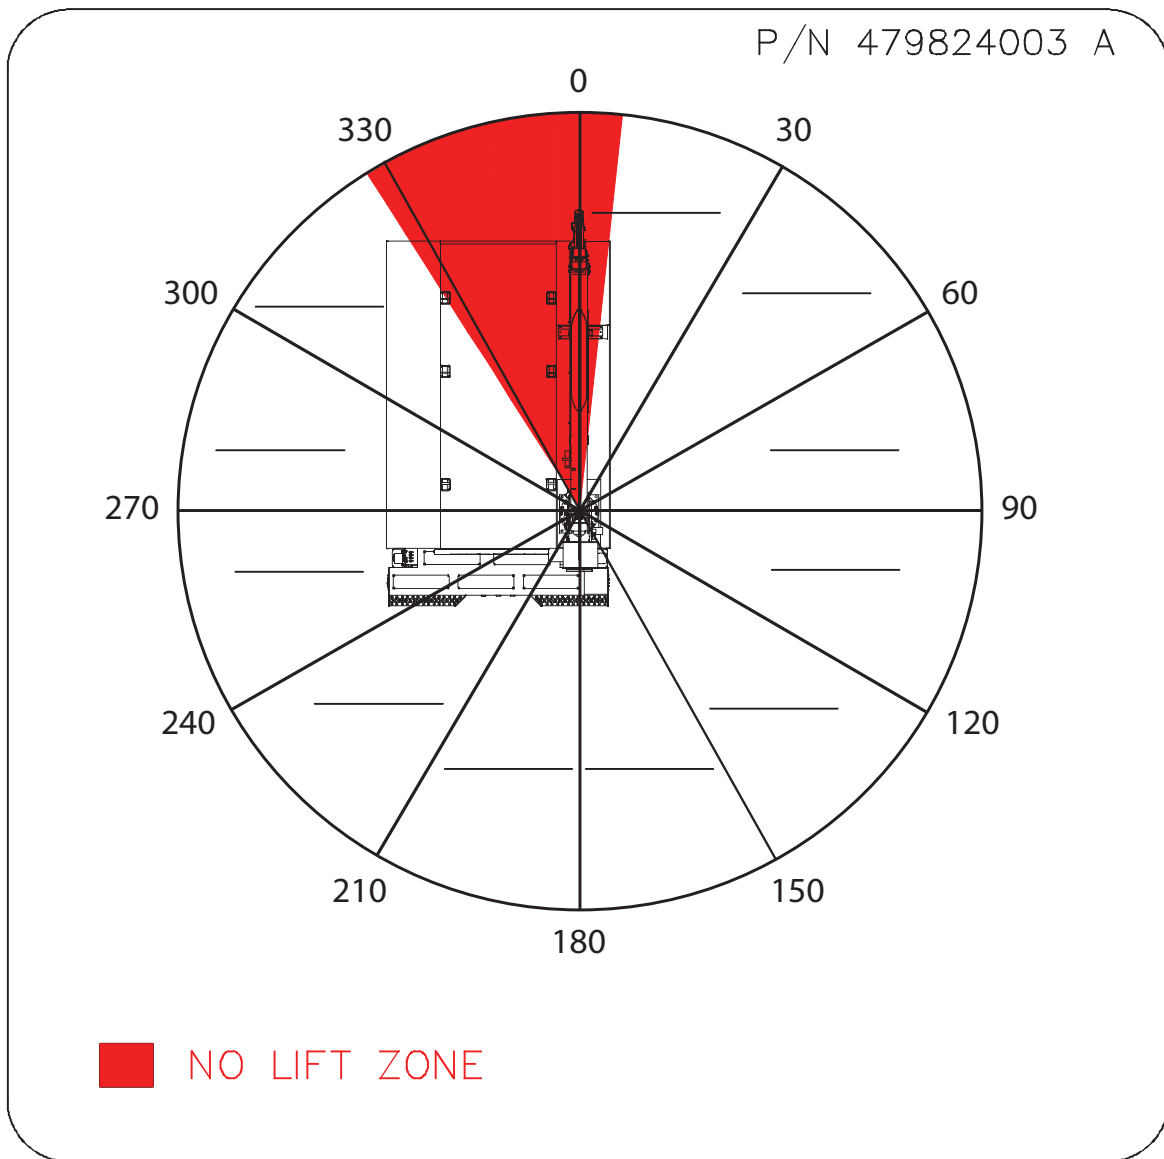

12 Crane Mounting and Installation

12.2 EMERGENCY CRANE OPERATION

If for any reason hydraulic flow or pressure is lost to the crane, use the following procedure to lower the boom until the problem can be fixed.

1. In an emergency situation when it becomes necessary to lower the boom without hydraulic assistance, the counterbalance valve can be used to lower the boom.
2. Ensure the boom will be lowered onto an appropriate support.
3. Loosen the lock nut and slowly turn the Allen head screw clockwise.
4. Count the number of turns and continue to slowly turn the Allen head screw clockwise until the boom just begins to lower.




CAUTION

Remove any personnel from near the crane as the load is lowering.

5. If the Allen head screw is turned too far, the internal valve will come apart. This condition is not repairable.
6. After the boom is lowered onto the boom support, turn the Allen head screw the same number of turns counterclockwise into the counterbalance valve.
7. After the problem is corrected, readjust the counterbalance valve to ensure proper operation.


13 Decal Layout P/N: 320989010

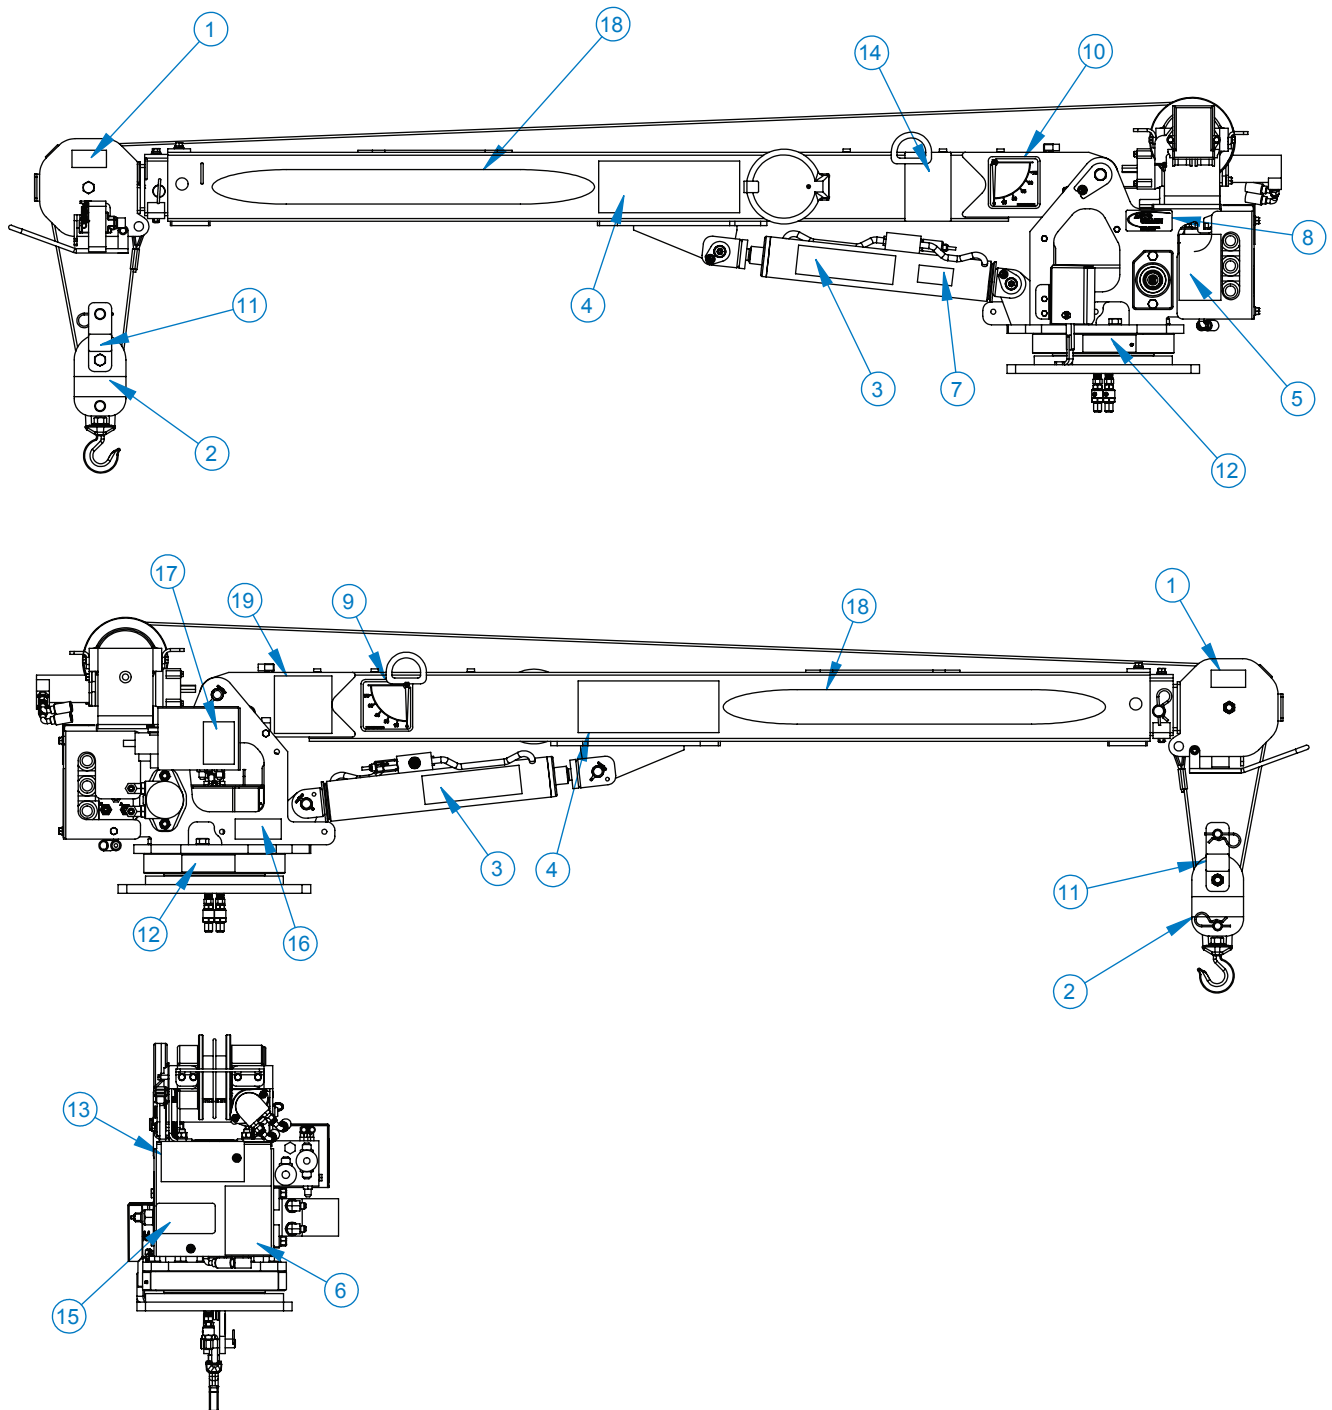

Decal Layout P/N: 320989010 13


ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	2	040517000	DECAL STAY CLEAR OF BOOM
2	2	040518000	DECAL STAY CLEAR OF LOAD
3	2	040519000	DECAL DANGER SCISSOR POINT
4	2	040529000	DECAL DANGER "ELECTROCUTION HAZARD" POWER LINE
5	1	040579000	DECAL OPERATION INSTRUCTIONS
6	1	040580000	DECAL TRAINED OPERATOR
7	1	040587000	DECAL WARNING LOAD SENSOR
8	1	040619001	DECAL AUTO CRANE LOGO
9	1	320318000	DECAL ANGLE INDICATOR CS
10	1	320318001	DECAL ANGLE INDICATOR SS
11	2	320433100	DECAL, TRAVELING BLOCK 3203
12	2	320918000	DECAL 3203 HORIZONTAL
13	1	360034000	DECAL AUTO CRANE LOGO
14	1	460169000	DECAL WARNING, REMOTE CONTROL
15	1	040824000	DECAL, AMERICAN FLAG, MADE IN THE USA
16	1	330622000	DECAL SERIAL NO
17	1	040632000	DECAL WARNING - OVERLOAD
18	2	600047018	DECAL, AUTO CRANE HC-3 ² LOGO, FLATTENED OVAL, 33.25 IN LONG
19	1	320988016	LOAD CHART, EHC-3 ²

14 General Dimensions

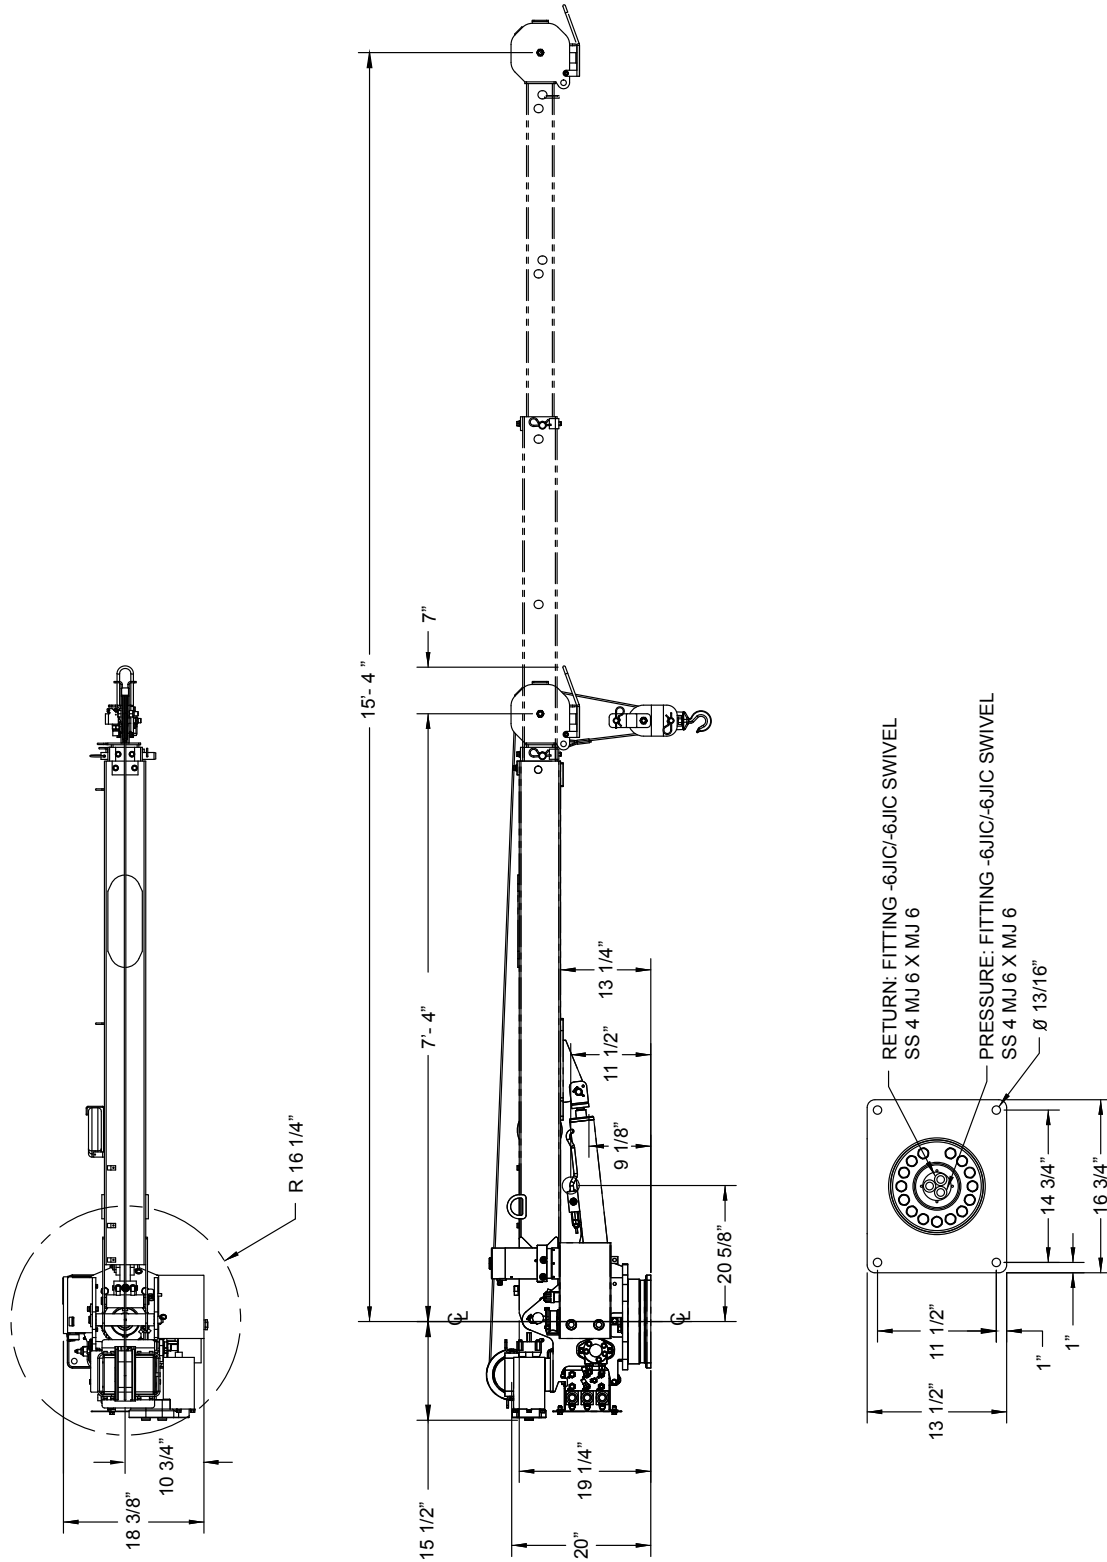

15 General Assembly P/N: 320989000


GENERAL ASSEMBLY FM

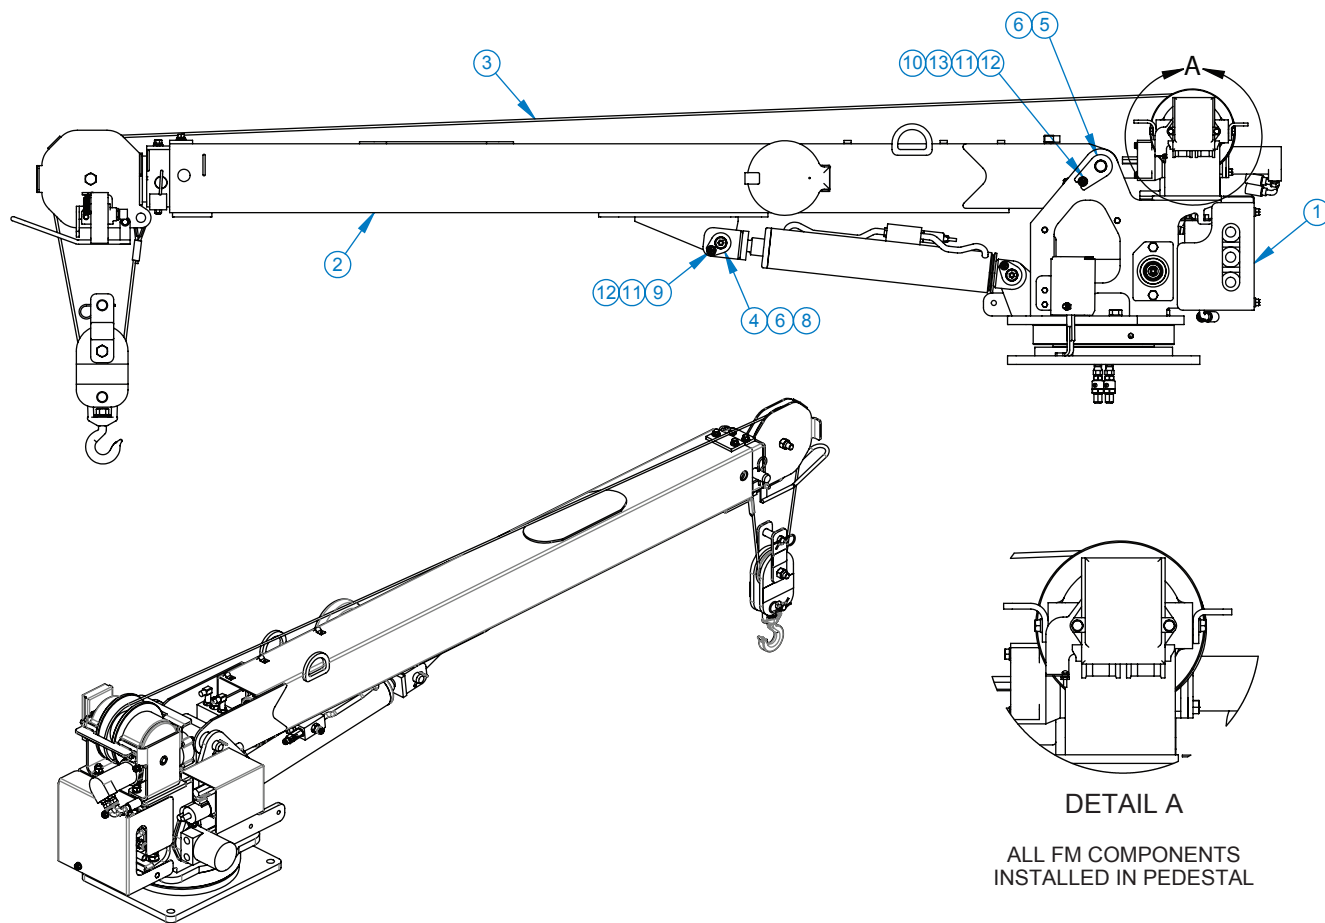

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320989200	PEDESTAL ASSEMBLY, FM, 3203H
2	1	320988102	BOOM ASSY 3203 PRX
3	1	320338002	CABLE ASS'Y, 7/32" x 62 FT, THIMBLE END
4	1	320824000	PIN, LIFT CYLINDER
5	1	404220000	PIN WDMT BOOM/PED
6	2	360678000	PIN, 3/16 COTTERLESS RING
7	1	320989011	SHIP KIT, HC-3 , FM
8	1	239300000	ZERK, GREASE
9	1	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
10	1	366159000	SCREW HX HD 3/8-16 UNC X 1-1/2 LG GR8
11	2	021100000	WASHER SP LK 3/8
12	2	021200000	WASHER FL 3/8
13	1	330372000	NUT HX 3/8 NC GR5
14	1	320989010	DECAL LAYOUT, 3203H


General Assembly P/N: 320989001 15

GENERAL ASSEMBLY HW

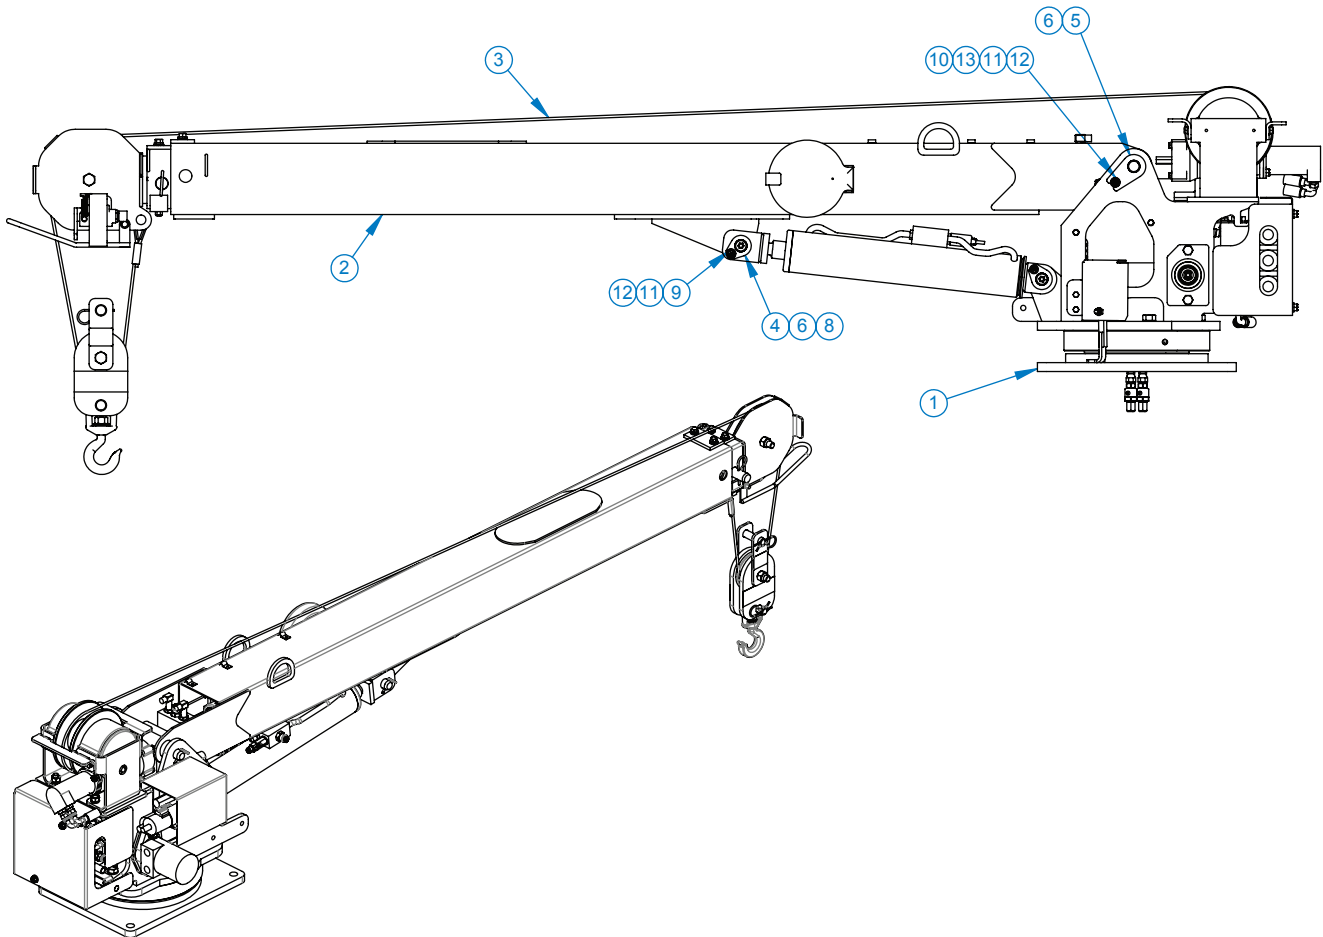


ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320989201	PEDESTAL ASSEMBLY, HARDWIRED, 3203H
2	1	320988102	BOOM ASSY 3203 PRX
3	1	320338002	CABLE ASS'Y, 7/32" x 62FT, THIMBLE END
4	1	320824000	PIN, LIFT CYLINDER
5	1	404220000	PIN WDMT BOOM/PED
6	2	360678000	PIN, 3/16 COTTERLESS RING
7	1	320989012	SHIP KIT, HC-3 , HW
8	1	239300000	ZERK, GREASE
9	1	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
10	1	366159000	SCREW HX HD 3/8-16 UNC X 1-1/2 LG GR8
11	2	021100000	WASHER SP LK 3/8
12	2	021200000	WASHER FL 3/8
13	1	330372000	NUT HX 3/8 NC GR5
14	1	320989010	DECAL LAYOUT, 3203H

16 FM Pedestal Assembly P/N: 320989200

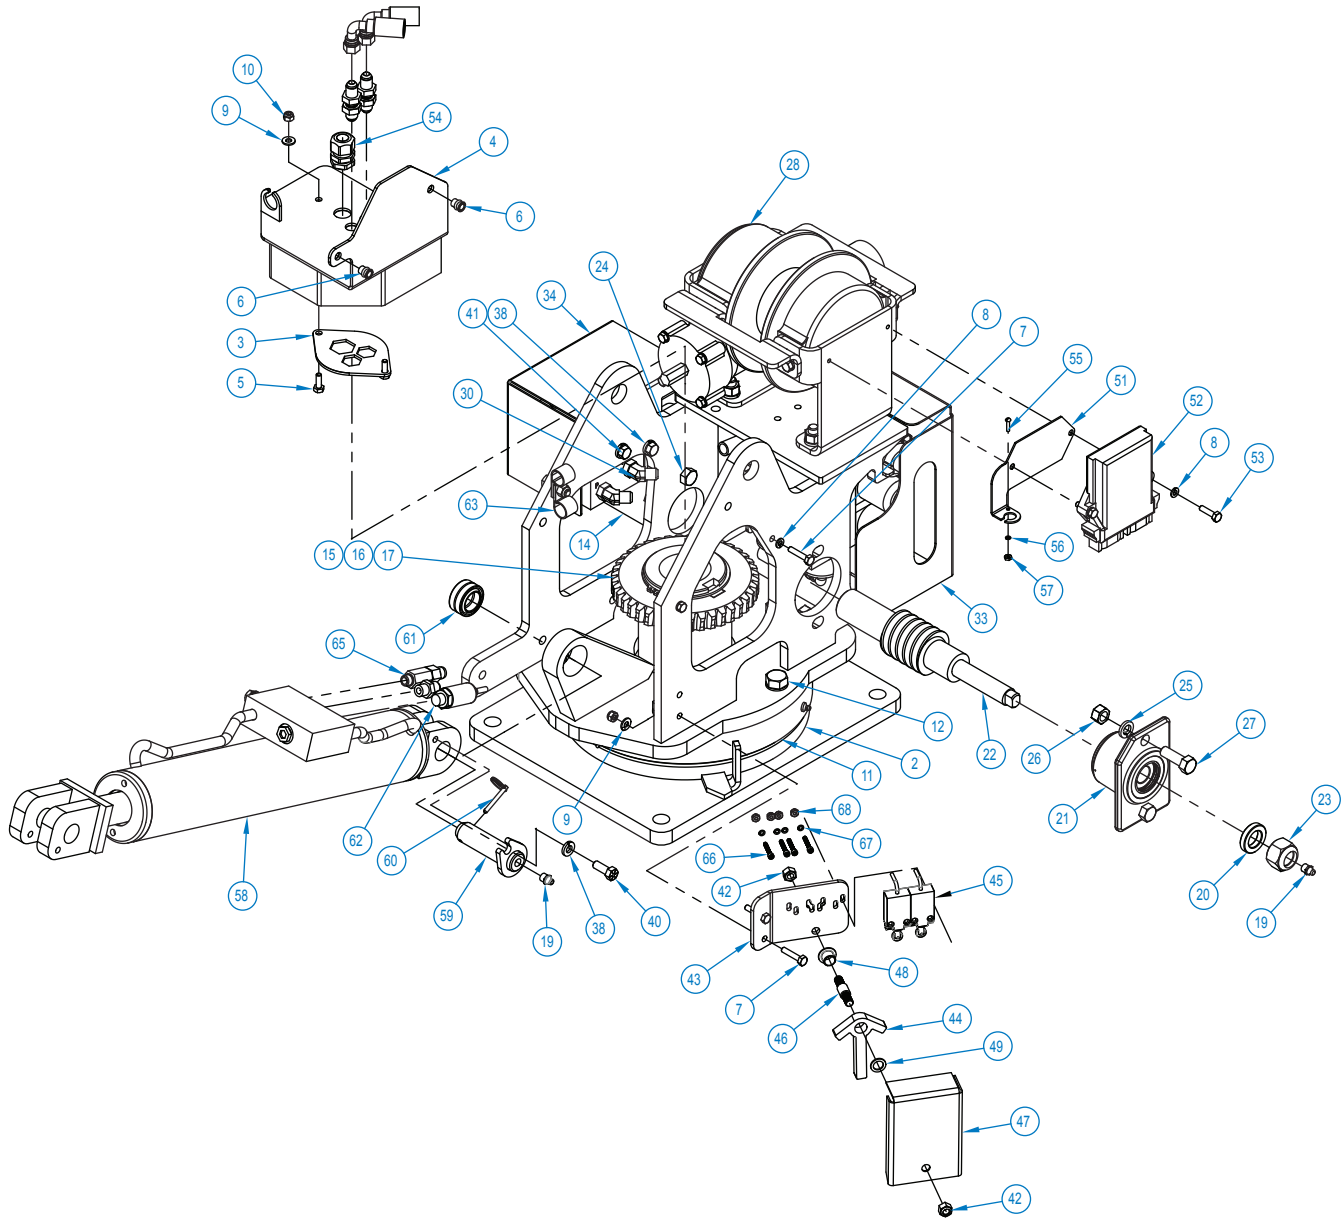

FM Pedestal Assembly P/N: 320989200 16

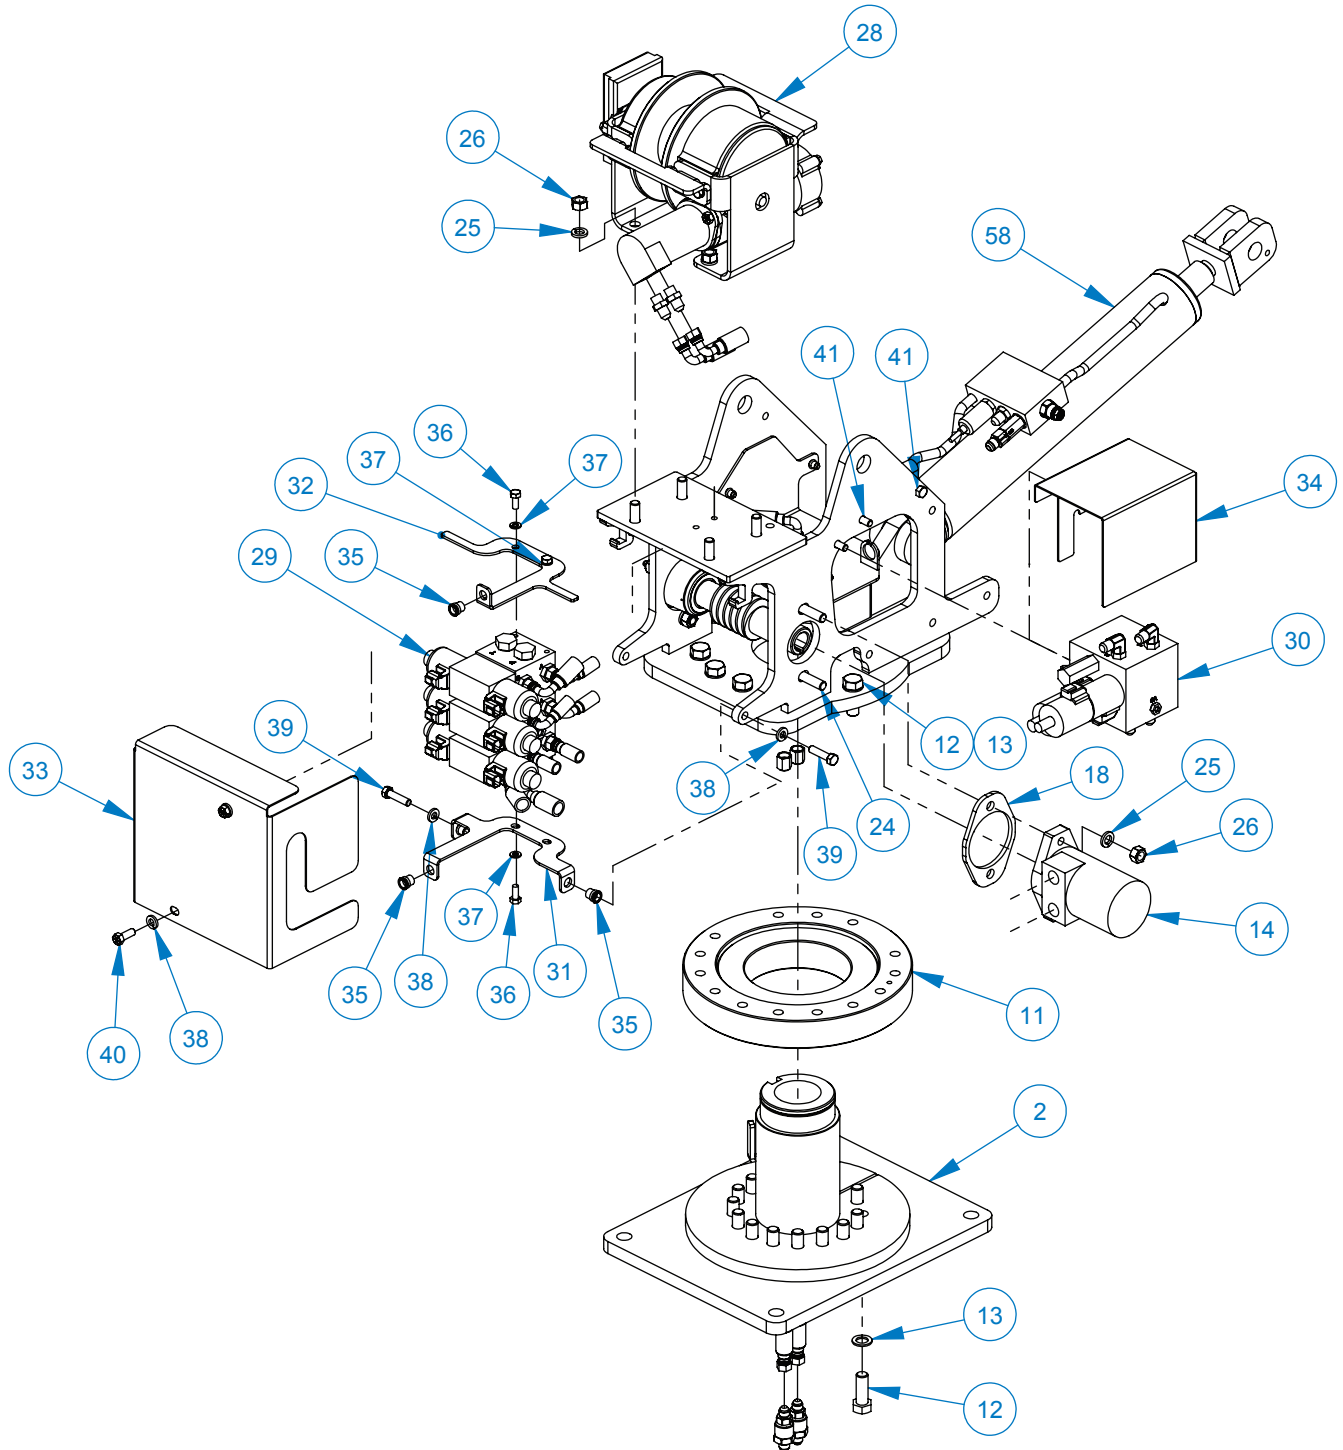


16 FM Pedestal Assembly P/N: 320989200

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988210	PEDESTAL WELDMENT, 3203 PR/PRX/H
2	1	320989220	BASE WELDMNT, 3203H
3	1	320989202	PLATE, HEX CUT, GEAR COVER, 3203H
4	1	320989230	GEAR COVER, 3203H
5	2	005500000	SCREW HX HD 1/4-20 UNC X 3/4 LG
6	2	736272000	NUTSERT 1/4-20 UNC X .027-.165 GRIP
7	4	006200000	SCREW HX HD 1/4-20 UNC X 1 1/4 LG
8	4	020200000	WASHER SP LK 1/4
9	4	020300000	WASHER FL 1/4
10	4	016300000	NUT HX NYLK 1/4-20 UNC
11	1	320878000	ROTATION BEARING
12	23	012198000	SCREW HX HD 5/8-11 UNC X 1 3/4 LG GR8
13	23	023902000	WASHER FL 5/8 HARDENED
14	1	320740000	MOTOR, HYDRAULIC, SAE 'A' -2 BOLT
15	1	340602000	KEY, 3/4 SQ X 1
16	1	404028000	RETAINING RING, SNAP RING
17	1	320988253	GEAR, WORM, 4.00 ID, .75 KEY, 3203
18	1	320879000	SPACER ROTATION
19	2	239300000	ZERK, GREASE
20	1	330483000	SPACER
21	1	330478000	BEARING HOUSING ASSY
22	1	404015000	WORM SHAFT
23	1	019000000	NUT HX NYLK 7/8-14 UNF
24	2	011608000	SCREW HX HD 1/2-13 UNC X 2 LG
25	8	021500000	WASHER, SP LK 1/2
26	8	017701000	NUT HX 1/2-13 UNC
27	6	010201000	SCREW HX HD 1/2-13 UNC x 1 1/2 LG
28	1	113004000	WINCH-HDG8RSC 3203H FOR AUTO CRANE
29	1	320989420	VALVE ASSY, 3 SPOOL, NON-PROP., 12 VOLT
30	1	320989410	VALVE, PROP, 1 SPOOL, W/RELIEF & PB, 3203H
31	1	320989203	LOWER VALVE BRACKET, 3203H
32	1	320989204	UPPER VALVE BRACKET, 3203H
33	1	320989205	COVER, VALVE, 3203H
34	1	320989212	COVER, PROPORTIONAL VALVE, 3203H
35	4	736274000	NUTSERT 3/8-16 UNC X .027-.15 GRIP
36	4	330252000	SCREW HX HD 5/16-18 UNC X 3/4 LG GR5
37	4	020601000	WASHER SP LK 5/16
38	7	021100000	WASHER SP LK 3/8
39	2	009109000	SCREW HX HD 3/8-16 UNC X 1 1/2 LG
40	3	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
41	3	008702000	SCREW HX HD 3/8-16 UNC X 1 1/4 LG GR5
42	3	017301000	NUT HX NYLK 3/8-16 UNC CP
43	1	320989206	BRACKET, SWITCH MNT, ROT STOP, 3203H
44	1	366671000	ARM, ROTATION STOP
45	1	320989214	ROTATION STOP SWITCH ASSEMBLY, 11"


FM Pedestal Assembly P/N: 320989200 16

ITEM NO.	QTY	PART NO.	DESCRIPTION
46	1	366673000	PIN, ROTATION STOP
47	1	320989207	COVER, ROTATION STOP, 3203H
48	1	460079000	BEARING, ROTATION STOP
49	1	366675000	WASHER, NYLON
50	1	320989304	MAIN HARNESS ASSEMBLY, 3203H, FM
51	1	361102001	MOUNTING BRACKET, OMNEX PENDANT PLUG
52	1	460151000	OMNEX R160 CONTROLLER
53	2	005604000	SCREW HX HD 1/4-20 UNC X 1 LG
54	1	320989209	CORD GRIP, NYLON, .39-.56 GRIP, 1/2 NPT, W/BLKHEAD NUT
55	1	000404000	SCREW RD HD #6-32 UNC X 5/8LG
56	1	019600000	WASHER SP LK # 6 CP
57	1	015400000	NUT HX #6-32 UNC
58	1	320845000	CYLINDER, LIFT
59	1	320824000	PIN, LIFT CYLINDER
60	1	360678000	PIN, 3/16 COTTERLESS RING
61	1	320858000	BEARING, SPHERICAL 1.00 ID
62	1	320917000	PRESSURE SWITCH, N.C. 1,900 PSI
63	2	480024000	MOUNT PENDANT CABLE RETAINER
64	1	813007000	HOSE KIT, 3203H
65	1	320989213	VALVE, FLOW CONTROL, 2.5 GPM
66	4	006210000	CAPSCREW-#8-32 X 7/8 LG SOC HD Z/P
67	4	019700000	WASHER SP LK #8
68	2	725321000	NUT HX NYLK #8-32 UNC

17 HW Pedestal Assembly P/N: 320989201

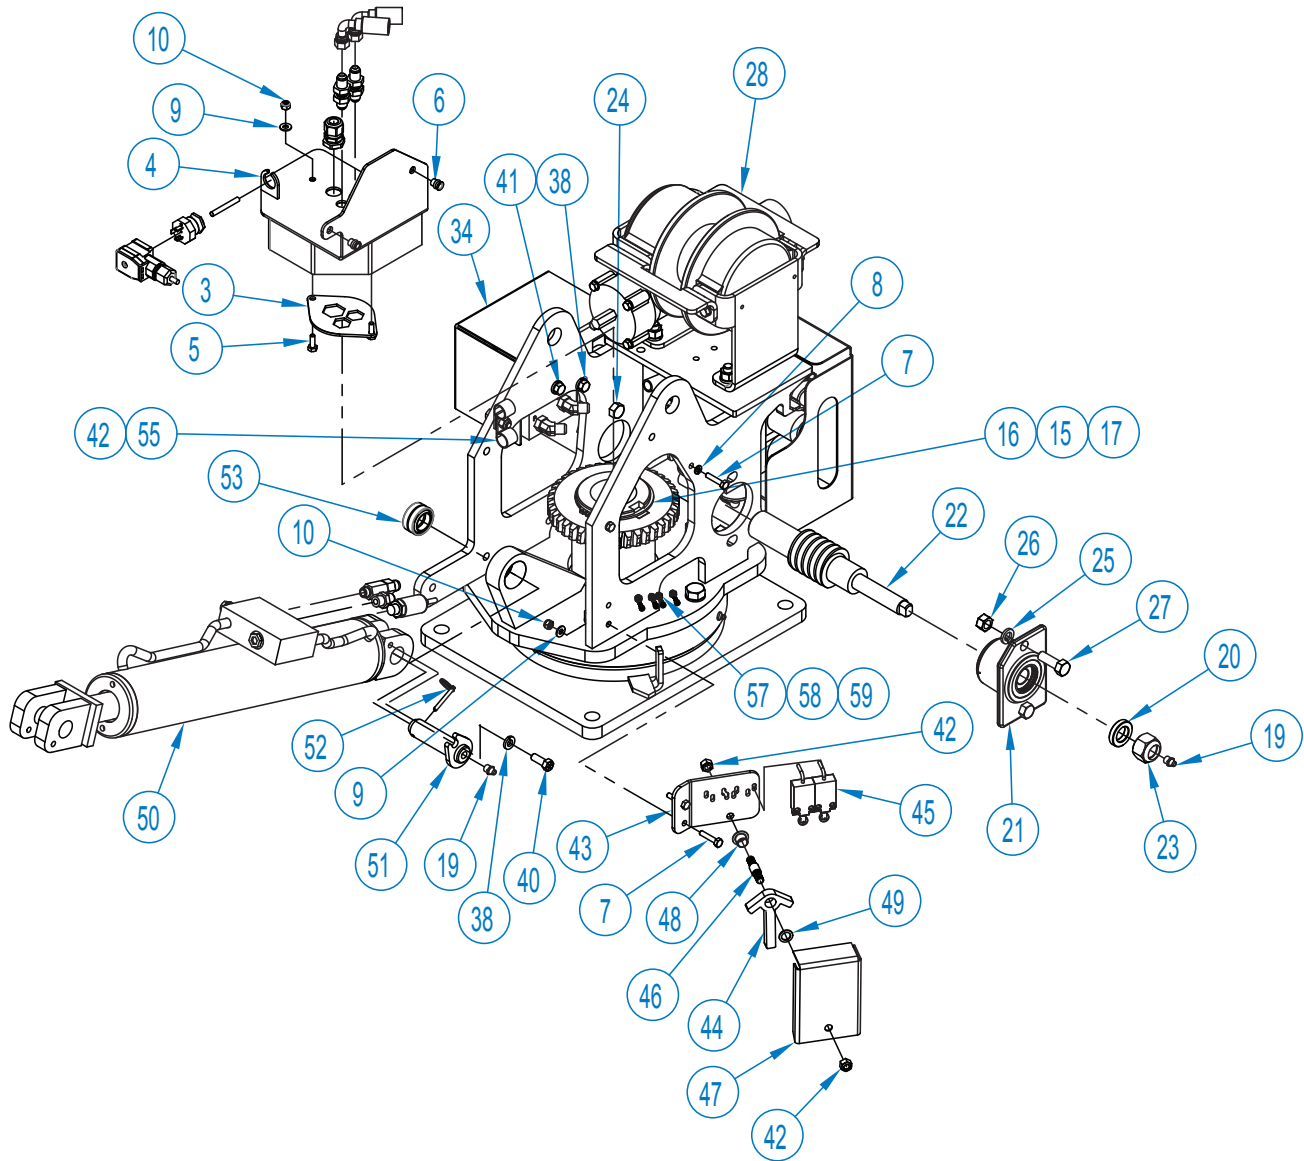

HW Pedestal Assembly P/N: 320989201 17

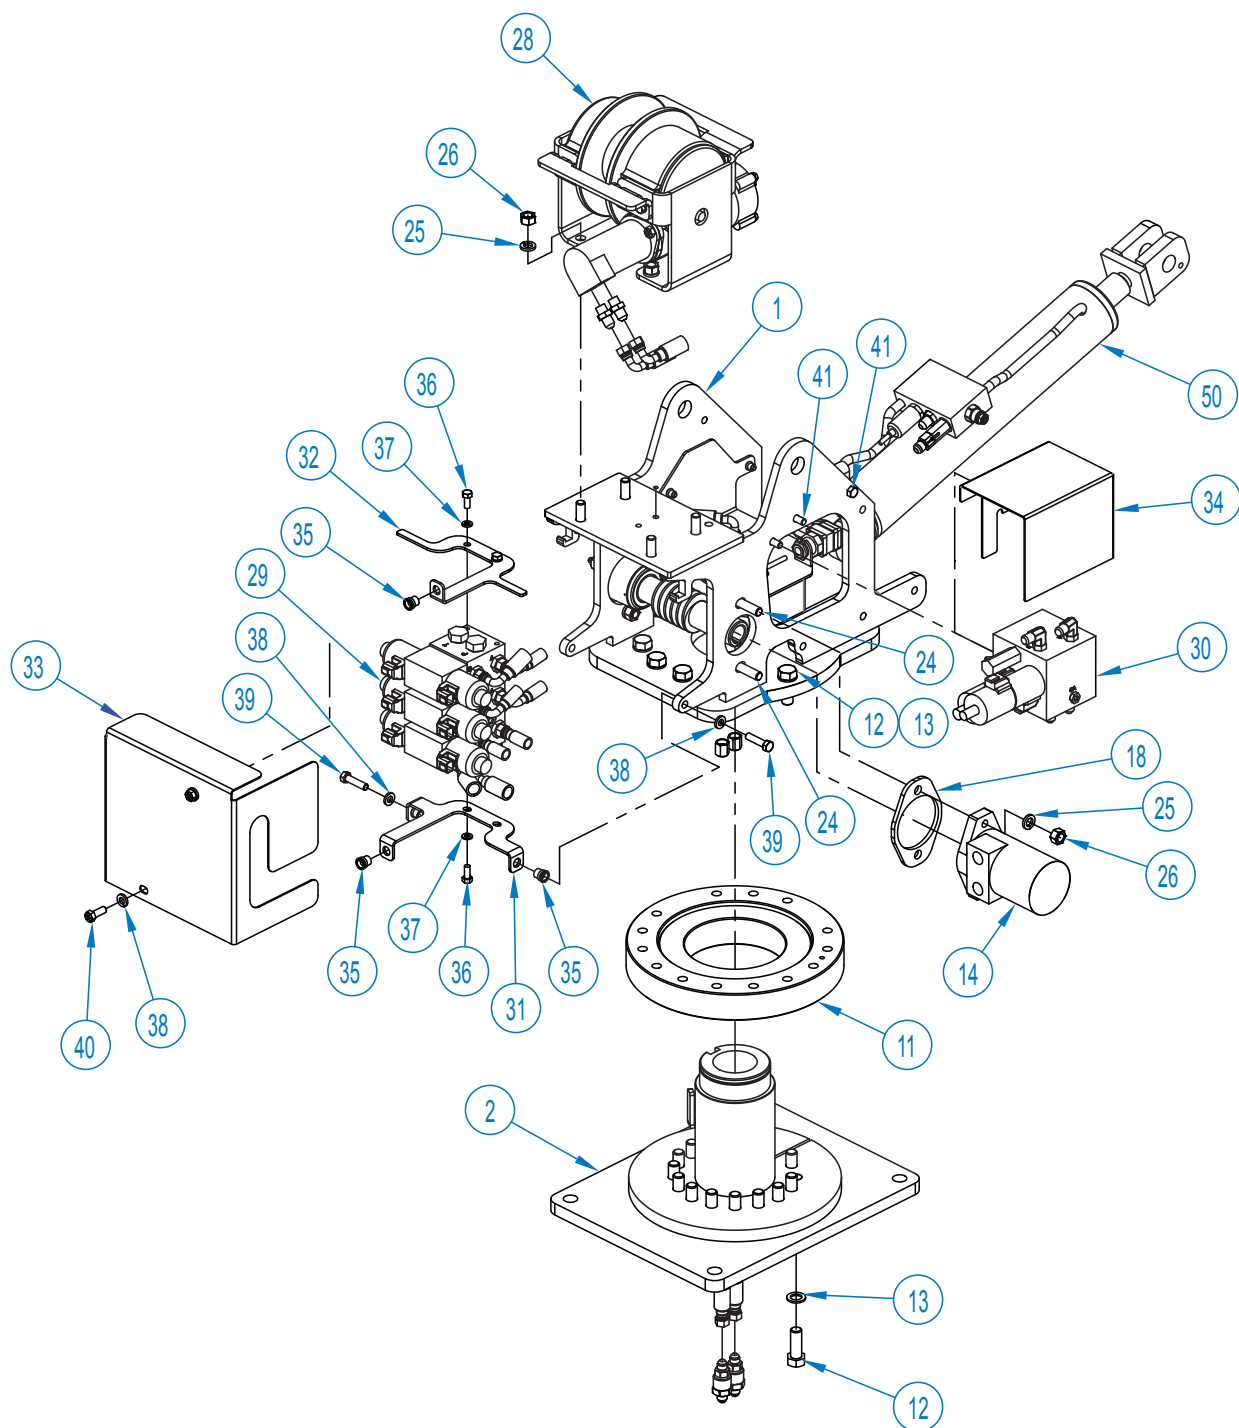


17 HW Pedestal Assembly P/N: 320989201

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988210	PEDESTAL WELDMENT, 3203 PR/PRX/H
2	1	320989220	BASE WELDMNT, 3203H
3	1	320989202	PLATE, HEX CUT, GEAR COVER, 3203H
4	1	320989230	GEAR COVER, 3203H
5	2	550000000	SCREW HX HD 1/4-20 UNC X 3/4 LG
6	2	736272000	NUTSERT 1/4-20 UNC X .027-.165 GRIP
7	4	620000000	SCREW HX HD 1/4-20 UNC X 1-1/4 LG
8	2	202000000	WASHER SP LK 1/4
9	4	203000000	WASHER FL 1/4
10	4	163000000	NUT HX NYLK 1/4-20 UNC
11	1	320878000	ROTATION BEARING
12	23	121980000	SCREW HX HD 5/8-11 UNC X 1-3/4 LG GR8
13	23	239020000	WASHER FL 5/8 HARDENED
14	1	320740000	MOTOR, HYDRAULIC, SAE 'A' -2 BOLT
15	1	340602000	KEY, 3/4 SQ X 1
16	1	404028000	RETAINING RING, SNAP RING
17	1	320988253	GEAR, WORM, 4.00 ID, .75 KEY, 3203
18	1	320879000	SPACER ROTATION
19	2	239300000	ZERK, GREASE
20	1	330483000	SPACER
21	1	330478000	BEARING HOUSING ASSY
22	1	404015000	WORM SHAFT
23	1	190000000	NUT HX NYLK 7/8-14 UNF
24	2	116080000	SCREW HX HD 1/2-13 UNC X 2 LG
25	8	215000000	WASHER, SP LK 1/2
26	8	177010000	NUT HX 1/2-13 UNC
27	6	102010000	SCREW HX HD 1/2-13 UNC x 1-1/2 LG
28	1	113004000	WINCH-HDG8RSC 3203H FOR AUTO CRANE
29	1	320989420	VALVE ASSY, 3 SPOOL, NON-PROP., 12 VOLT
30	1	320989410	VALVE, PROP, 1 SPOOL, W/RELIEF & PB, 3203H
31	1	320989203	LOWER VALVE BRACKET, 3203H
32	1	320989204	UPPER VALVE BRACKET, 3203H
33	1	320989205	COVER, VALVE, 3203H
34	1	320989212	COVER, PROPORTIONAL VALVE, 3203H
35	4	736274000	NUTSERT 3/8-16 UNC X .027-.15 GRIP
36	4	330252000	SCREW HX HD 5/16-18 UNC X 3/4 LG GR5
37	4	206010000	WASHER SP LK 5/16
38	7	211000000	WASHER SP LK 3/8
39	2	910900000	SCREW HX HD 3/8-16 UNC X 1-1/2 LG
40	3	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
41	3	870200000	SCREW HX HD 3/8-16 UNC X 1-1/4 LG GR5
42	3	173010000	NUT HX NYLK 3/8-16 UNC CP
43	1	320989206	BRACKET, SWITCH MNT, ROT STOP, 3203H
44	1	366671000	ARM, ROTATION STOP
45	1	320989214	ROTATION STOP SWITCH ASSEMBLY, 11
46	1	366673000	PIN, ROTATION STOP

HW Pedestal Assembly P/N: 320989201 17

ITEM NO.	QTY	PART NO.	DESCRIPTION
47	1	320989207	COVER, ROTATION STOP, 3203H
48	1	460079000	BEARING, ROTATION STOP
49	1	366675000	WASHER, NYLON
50	1	320845000	CYLINDER, LIFT
51	1	320824000	PIN, LIFT CYLINDER
52	1	360678000	PIN, 3/16 COTTERLESS RING
53	1	320858000	BEARING, SPHERICAL 1.00 ID
54	1	320917000	PRESSURE SWITCH, N.C. 1,900 PSI
55	2	480024000	MOUNT PENDANT CABLE RETAINER
56	1	813007000	HOSE KIT, 3203H
57	4	621000000	CAPSCREW-#8-32 X 7/8 LG SOC HD Z/P
58	4	197000000	WASHER SP LK #8
59	4	725321000	NUT HX NYLK #8-32 UNC


18 Boom Assembly P/N: 320988102

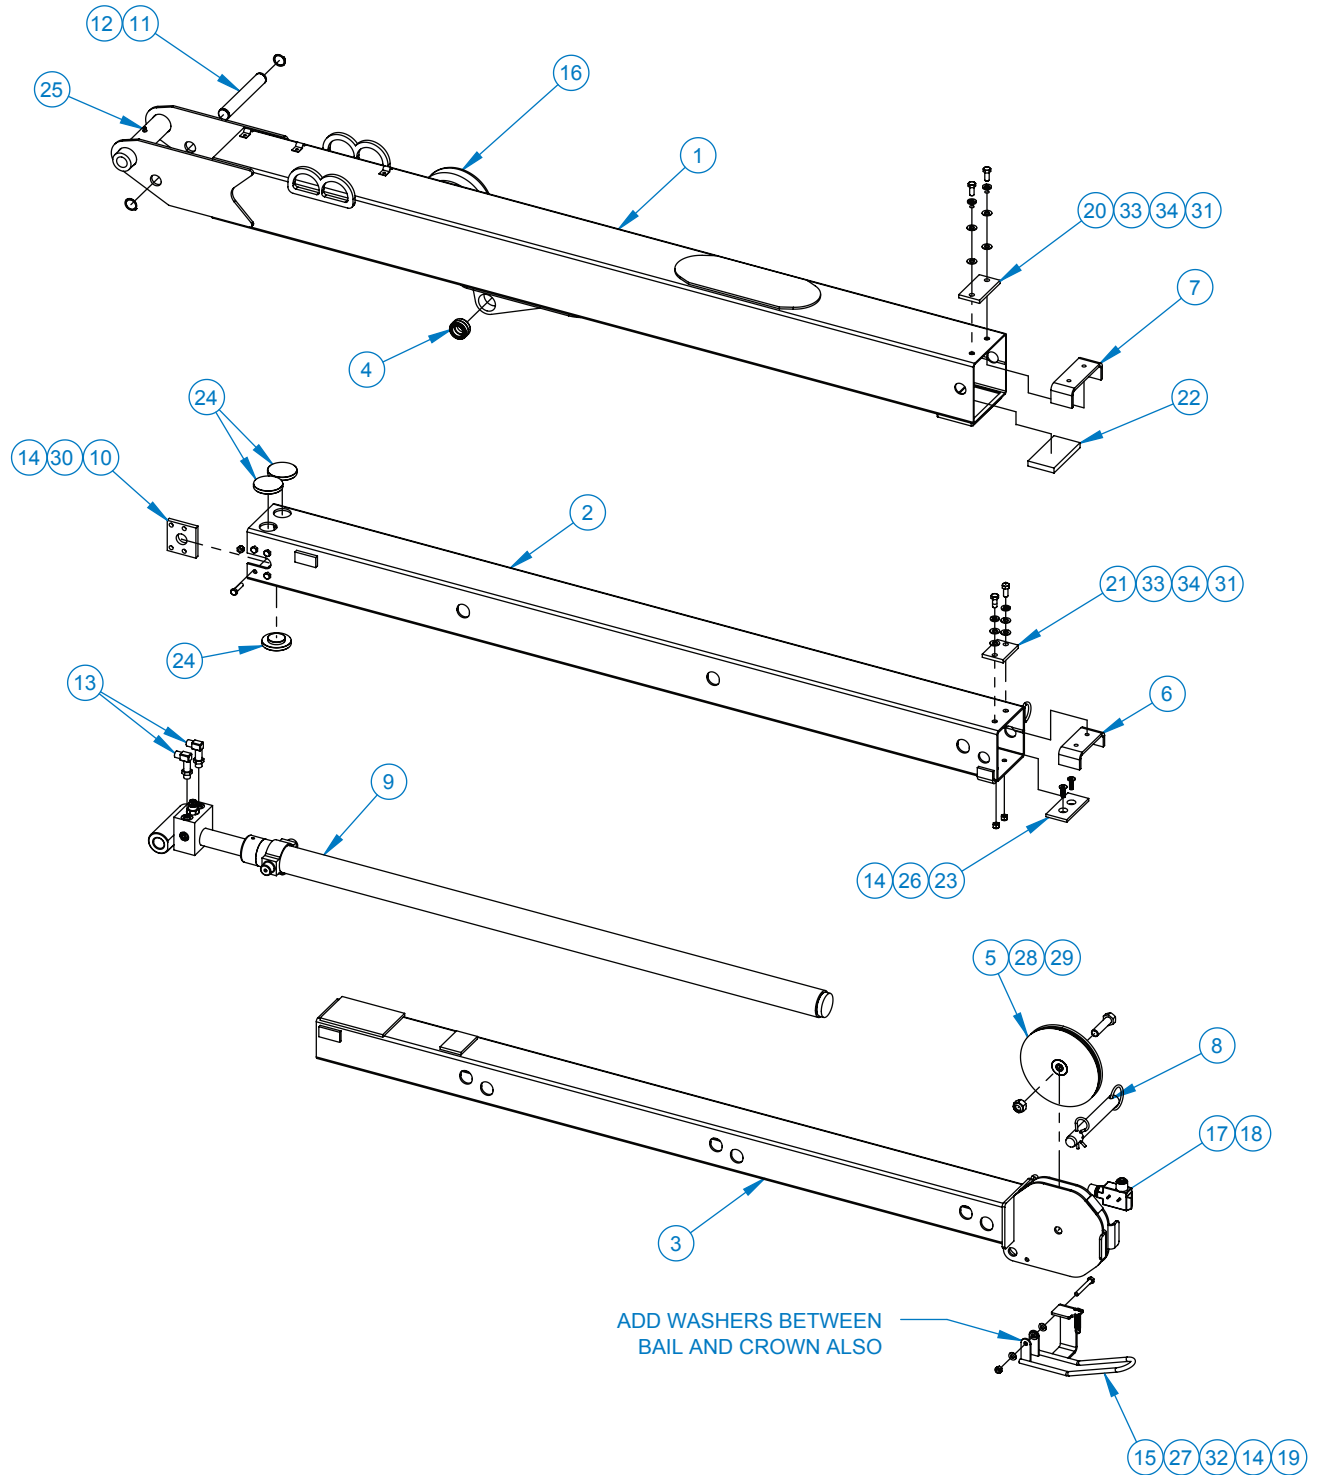

Boom Assembly P/N: 320988102 18


ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320988110	LOWER BOOM WELDMENT, 3203 PR/PRX
2	1	320988165	MID BOOM WMT, 3203
3	1	320988160	UPPER BOOM WLDMT 3203
4	1	320858000	BEARING, SPHERICAL 1.00 ID
5	1	320883000	SHEAVE ASSEMBLY
6	1	366112000	STOP UPPER BOOM
7	1	366183000	STOP CENTER BOOM
8	1	366190000	PIN ASSY W/LANYARD
9	1	320988142	EXTENSION CYLINDER, 3203
10	2	320888001	RETAINER, EXTENSION CYLINDER
11	1	320988115	PIN 1 DIA X 6.905 LG, 3203
12	2	360122000	RING RETAINING 5100-98
13	2	330645000	FITTING 90 6-SAE/6-JIC LONG
14	11	016801000	NUT HX NYLK 5/16-18 UNC CP
15	1	320871000	BAIL WELDMENT
16	1	404205000	CORD REEL ASSY
17	1	646900000	SWITCH, ANTI-TWO BLOCK
18	1	642918000	CORD CONNECTOR
19	1	366678000	SPRING, EXTENSION
20	1	366201000	WEAR PAD 3 .75 X 2.00 X .313
21	1	366202000	PAD, BOOM TOP
22	1	320988155	BOOM PAD 4.75 X 2.50 X .50, 3203
23	1	320990104	WEAR PAD, 2 X 4 X .25, W/ CSINK HOLES
24	3	407203000	PAD, BOOM, 2.50 O.D. x .563 THK
25	1	239000000	ZERK DRIVE GR
26	2	320990105	SCREW, FLAT HEAD, 5/16-18 UNC X 1, ZP
27	1	811029000	SCREW HX HD 5/16-18 UNC X 2 1/2 LG
28	1	366393000	SCREW HX HD 5/8-11 UNC X 2 1/2 LG GR8
29	1	018200000	NUT HX NY LK 5/8-11 UNC
30	8	007804000	SCREW HX HD 5/16-18 UNC X 1 1/4 LG CP
31	4	738733100	SCREW HX HD 3/8-24 UNF X 7/8 LG
32	4	020901000	WASHER FL 5/16
33	8	021200000	WASHER FL 3/8
34	4	021100000	WASHER SP LK 3/8

19 Winch Assembly P/N: 113004

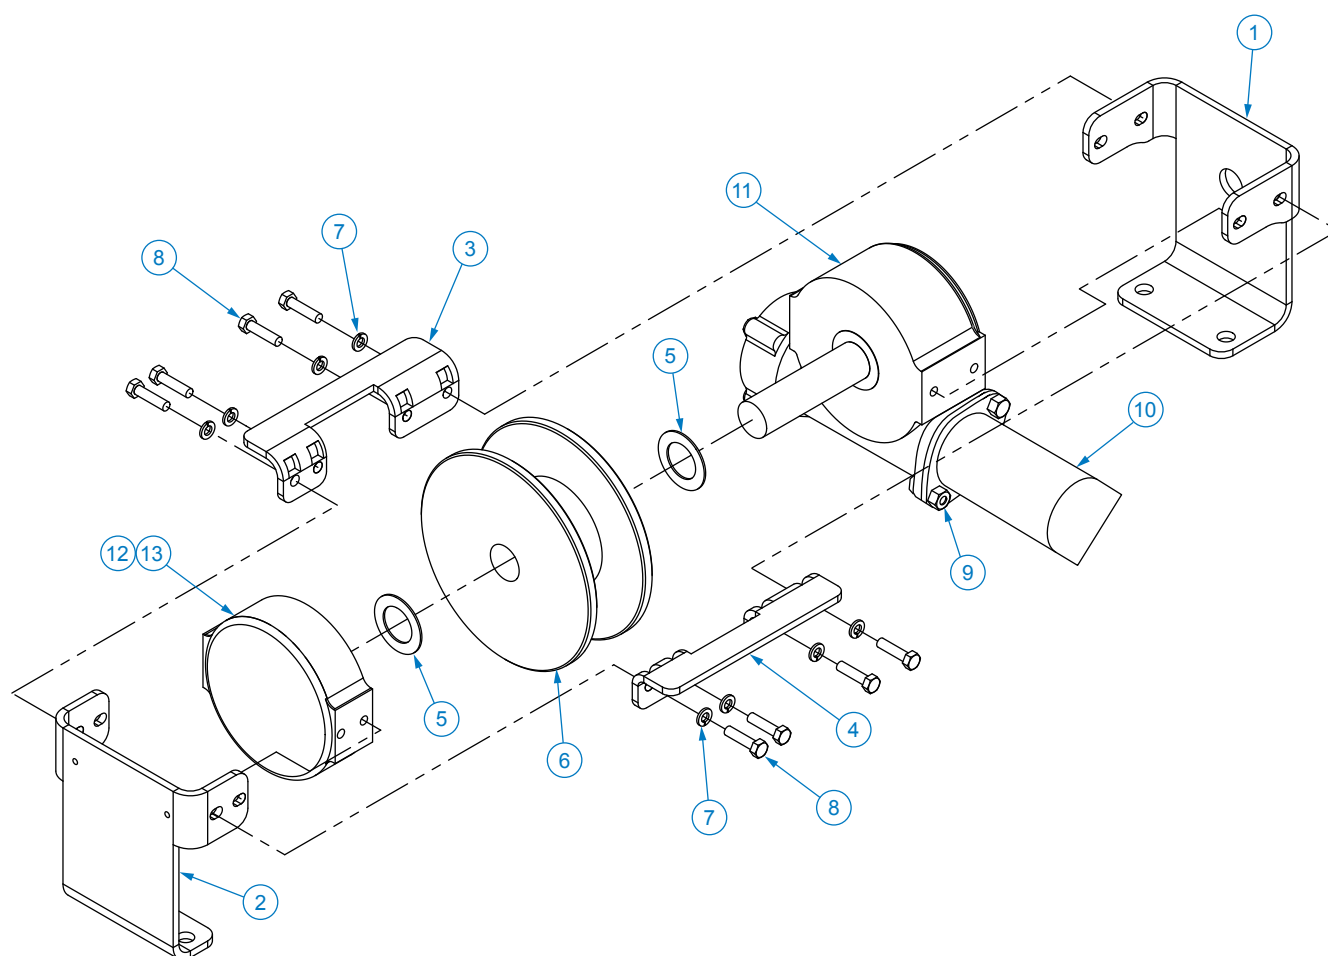

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	320836000	WINCH MOUNTING BRACKET CS
2	1	320837000	WINCH MOUNTING BRACKET SS
3	1	320838001	WINCH TIE BAR, FRONT
4	1	320839000	WINCH TIE BAR, REAR
5	2	320887000	BEARING, BRONZE
6	1	320379000	DRUM
7	8	020601000	WASHER SP LK 5/16
8	8	007804000	SCREW HX HD 5/16-18 UNC X 1 1/4 LG CP
9	2	330371000	SCREW HX HD 3/8-16 UNC X 1 LG GR8
10	1	458145	MOTOR HYD 3.0 CU IN J SERIES
11	1	296652	GEAR HOUSING SUB ASSY, HD G8RSC
12	1	338053	END BEARING
13	1	412003	FLANGE BEARING


HOIST ACTUATOR P/N: 296652 20

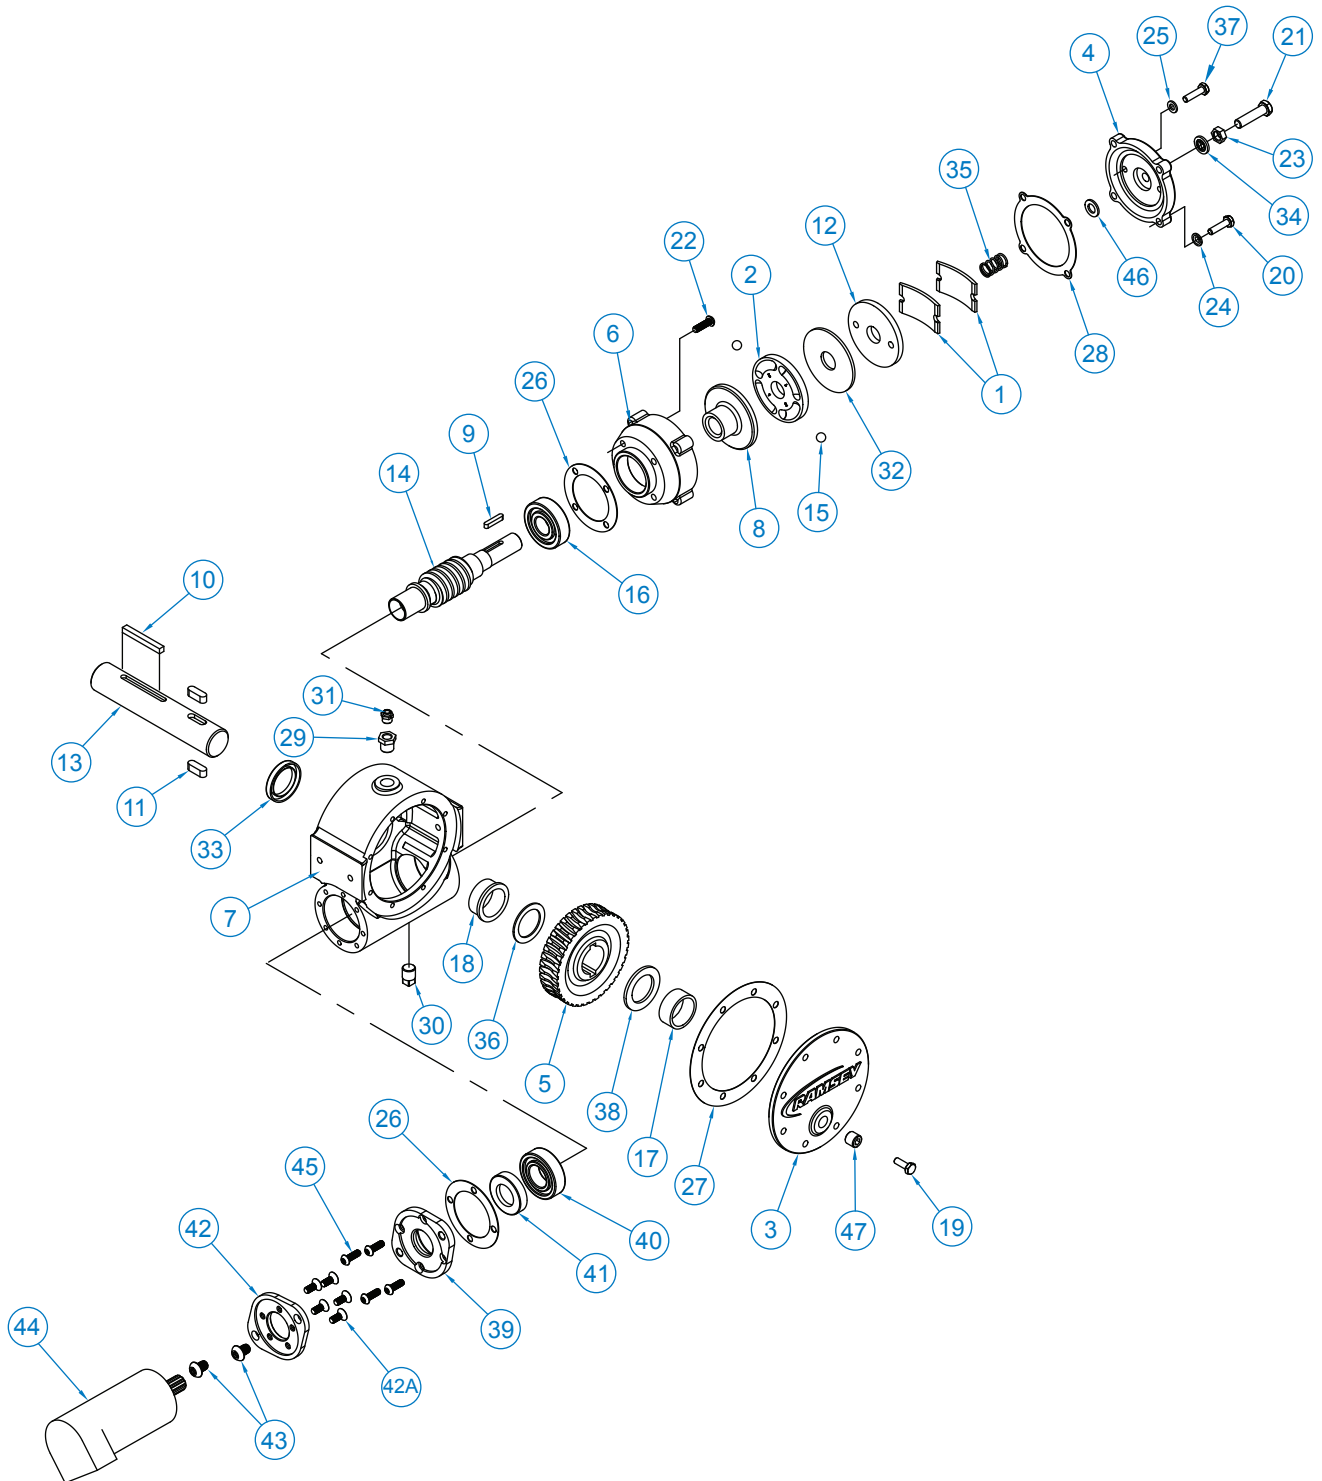

20 HOIST ACTUATOR P/N: 296652


ITEM NO.	QTY	PART NO.	DESCRIPTION
1	2	306034	SPRING FLAT
2	1	314008	PLATE CAM
3	1	328009	COVER GEAR HOUSING
4	1	328128	COVER BRAKE
5	1	334007	GEAR WORM RH
6	1	338007	HOUSING BRAKE
7	1	338368	GEAR HOUSING
8	1	340002	HUB BRAKE
9	1	342027	KEY 3/16 SQ X 1 LG
10	1	342198	KEY 1/4 SQ X 2-1/8 LG
11	2	342075	KEY RD 5/16 X 5/16 X 15/16 LG
12	1	352022	PLATE RETAINER
13	1	357515	OUTPUT SHAFT
14	1	368192	WORM R.H.
15	2	400003	BALL
16	2	402002	BEARING BALL
17	1	308091	BUSHING
18	1	412046	BUSHING
19	8	414020	SCREW HX HD 1/4-20 UNC X 3/4 LG NY LK
20	4	414039	SCREW HX HD 1/4-20 UNC X 1 LG
21	1	414224	SCREW HX HD 3/8-16 UNC X 1-1/2 LG ALL THD
22	4	414821	SCREW BTN HD 1/4-20 UNC X 7/8 LG
23	1	418036	NUT JAM 3/8-16 UNC
24	4	486070	WASHER SP LK 1/4 MED SECT
25	2	418154	WASHER FL 1/4 ALUM
26	2	442184	GASKET BEARING
27	1	442186	GASKET GEAR HOUSING COVER
28	1	442189	GASKET BRAKE COVER
29	1	456008	FITTING RELIEF
30	2	468010	PLUG PIPE -4NPT SQ HD
31	1	468024	REDUCER -4NPT/-2NPT
32	1	474001	PLATE THRUST
33	1	486017	OIL SEAL 1-1/4 ID X 1 3/4 OD X 1/4 THK
34	1	486069	THREAD SEAL
35	1	494007	SPRING
36	1	518015	WASHER THRUST
37	2	414021	SCREW HX HD 1/4-20 UNC X 1 LG NYLK
38	1	518040	WASHER THRUST
39	1	300072	ADAPTER MOTOR
40	1	402129	BEARING BALL
41	1	486083	OIL SEAL WORM SHAFT
42	1	530165	MOTOR ADAPTER PLATE
42A	5		SCREW FL HD 1/4-20 UNC X 1/16 LG
43	2	414932	SCREW SOC HD 3/8-16 UNC X 1/2 LG
44	1	458145	MOTOR HYDRAULIC, 3.0 CU IN
45	4	414023	SCREW BT SOC HD 1/4-20 UNC X 3/4 LG
46	1	418181	WASHER, FLAT 3/8 SAE
47	1	468017	PLUG PIPE 1/4-18 NPT

Traveling Block P/N: 320433000 21

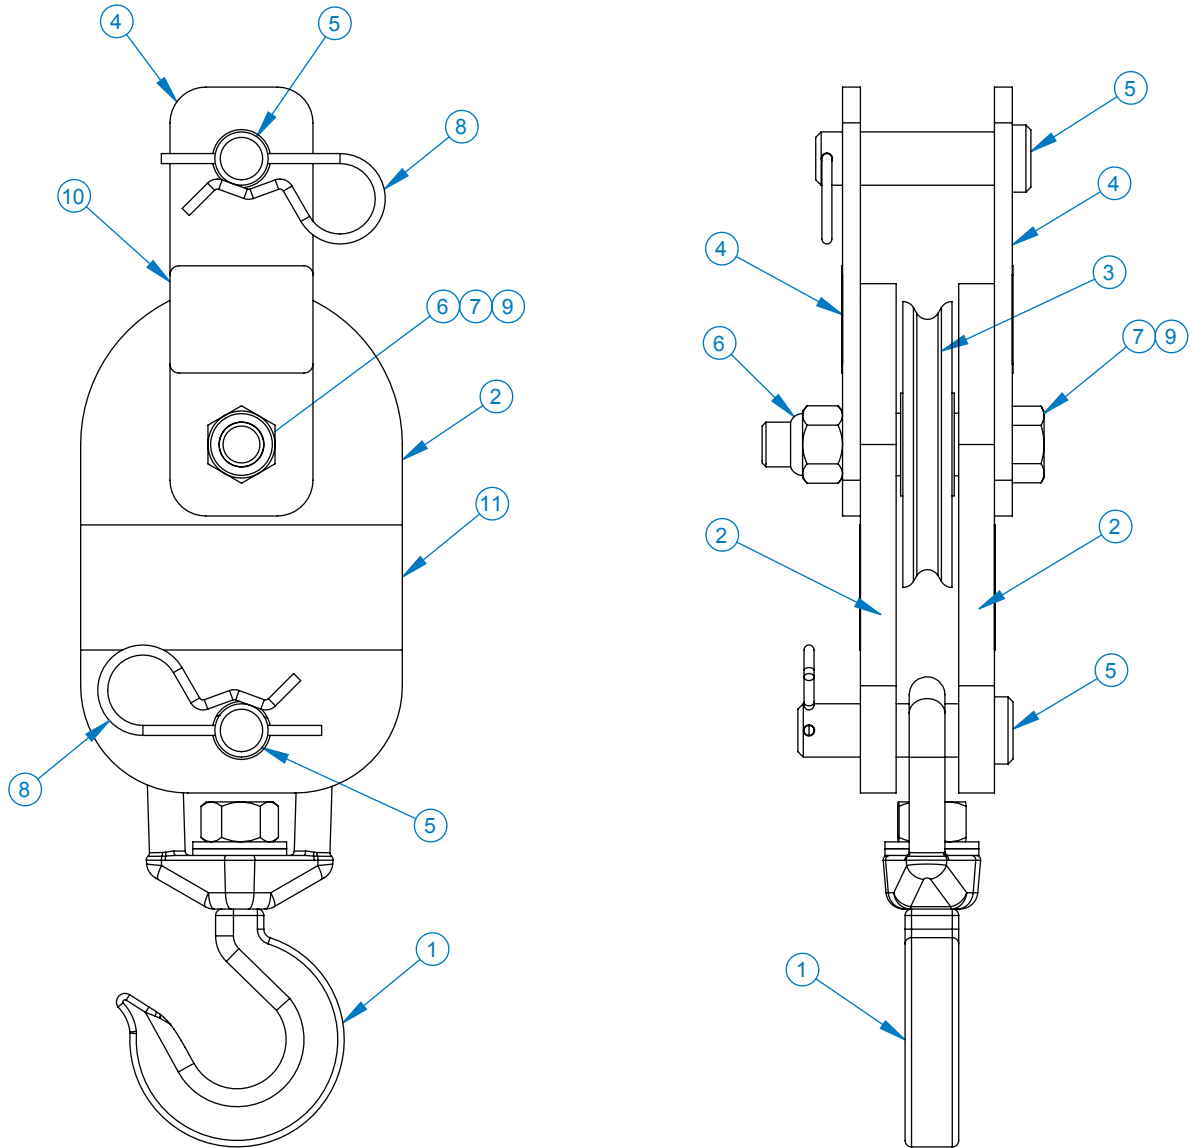


ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	100309000	SWIVEL HOOK ASSY W/LATCH
2	2	320403000	SIDE PLATE, 3203
3	1	200909000	SHEAVE ASSEMBLY
4	2	320404000	BLOCK TRAVELING
5	2	320434001	PIN, 3/4 X 2-3/4LG
6	1	018200000	NUT HX NY LK 5/8-11UNC
7	1	013512000	SCREW HX HD 5/8-11UNC X 3 1/2 LG
8	2	366813000	PIN HITCH
9	2	330100000	WASHER, FL 5/8 X 7/8 OD
10	2	320433100	DECAL, TRAVELING BLOCK 3203
11	2	040518000	DECAL STAY CLEAR OF LOAD

22 Junction Box Assembly P/N: 366520002

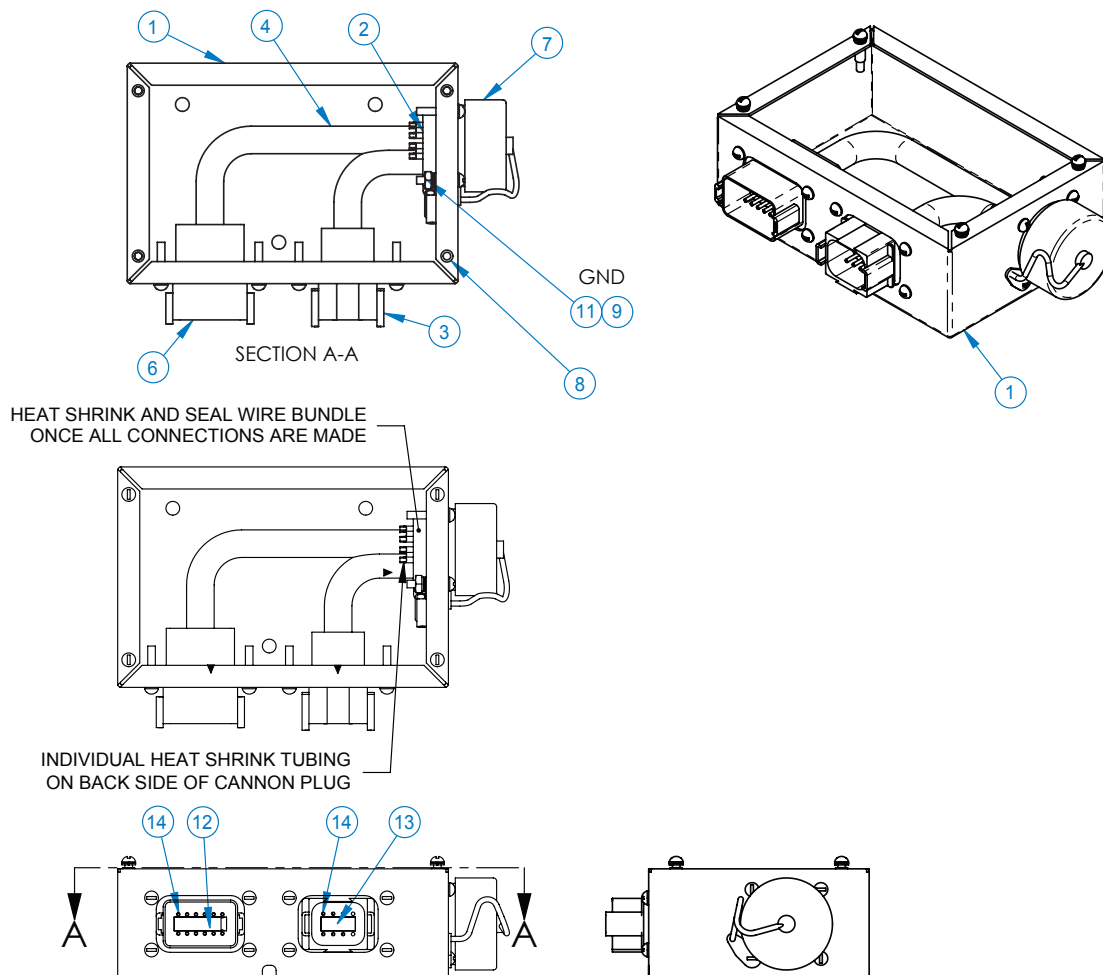



ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	366470000	JUNCTION BOX
2	1	366095000	PLUG, 19 PIN
3	1	366523001	HOUSING, DEUTSCH 8-PIN RECEPTACLE
4	1	480594001	CABLE, PENDANT, 16/10 SO BLACK
5	1	366471000	COVER, JUNCTION BOX
6	1	366524001	HOUSING, DEUTSCH 12-PIN RECEPTACLE
7	1	366097000	CAP W/CHAIN (FOR RECEPTACLE)
8	4	366517000	RIVET NUT, 6-32
9	17	019600000	WASHER SP LK #6
10	16	001004000	SCREW PN HD #6 X 3/4 LG
11	13	015400000	NUT HX #6-32 UNC
12	1	366524002	WEDGE, DEUTSCH RECEPTACLE, 12 PIN
13	1	366523002	WEDGE, DEUTSCH RECEPTACLE, 8 PIN
14	18	366376003	CONTACT, DEUTSCH
15	3	000101000	TERMINAL RING, 5/32, 14-16 GA
16	1	366469001	DECAL, JUNCTION BOX WIRING

Hydraulic Control Valve P/N: 320989420 23

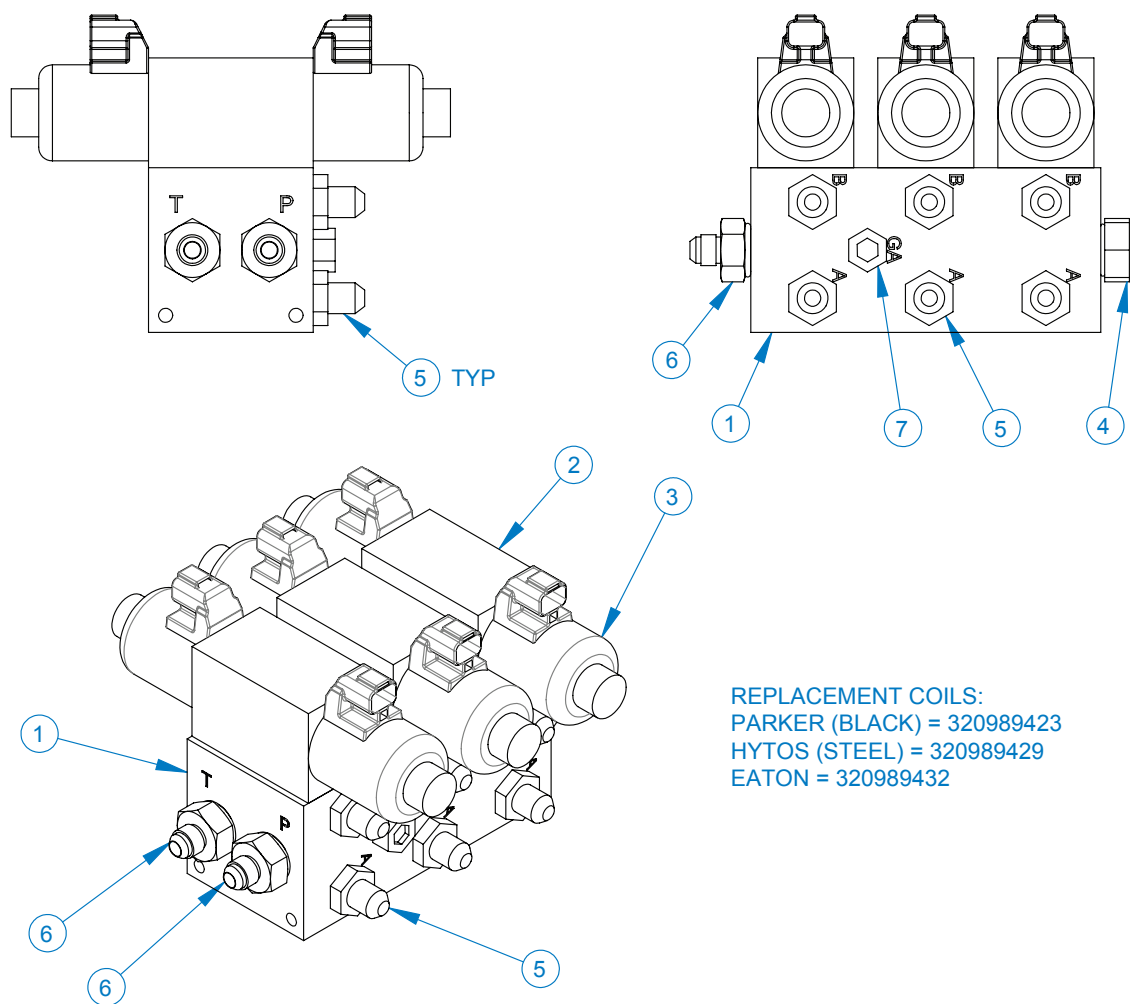

ITEM NO.	EATON QTY.	HYTOS QTY.	PARKER QTY.	AUTO CRANE PART NO.	DESCRIPTION
1	1	-	-	320989430	MANIFOLD BLOCK
	-	1	1	320989430	MANIFOLD BLOCK, DO3
2	-	-	1	320989422	VALVE, DO3 STACK TYPE, PARKER
	-	3	3	320989428	VALVE, DO3 STACK TYPE, HYTOS
	3	-	-	320989431	VALVE, DO3 STACK TYPE, EATON
3	-	-	6	320989423	COIL, 12V-2.5A PARKER, FOR 320989420
	-	6	-	320989429	COIL, 12V-2.7A HYTOS, FOR 320989420
	6	-	-	320989432	COIL, 12V-2.5A EATON, FOR 320989420
4	2	2	2	330072000	PLUG, #10 SAE
5	6	6	6	202756000	FITTING 6-8 STRAIGHT
6	2	2	2	202755000	FITTING, -10 SAE/-6 JIC, STR
7	1	1	1	751034000	PLUG, -6ORB

24 Manual Override Procedure

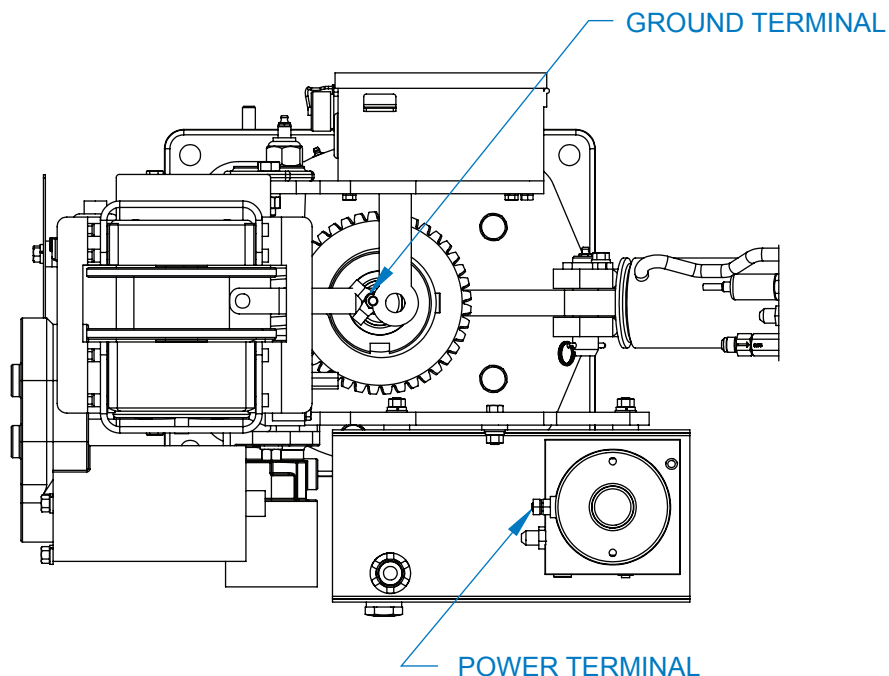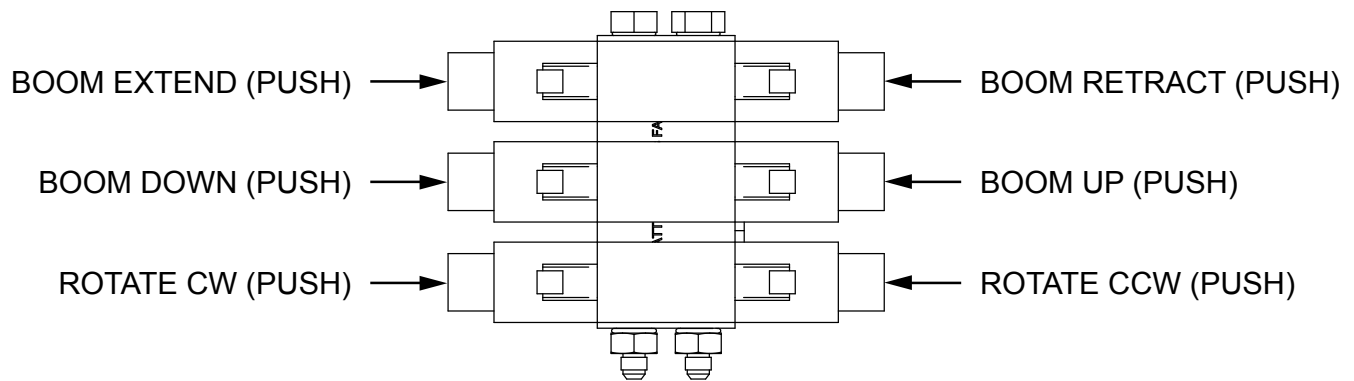


Manual Override Procedures

1. Apply 12VDC from battery to pump power terminal.
2. Apply ground from battery to grounding connection.
3. Select the function desired, then push in override located on the end of the coil using a punch or other small object.




Manually overriding crane bypasses all safety features. During operation make sure load does not exceed crane capacity and the traveling block does not come into contact with boom tip.

Hoist Proportional Valve P/N: 320989410 25

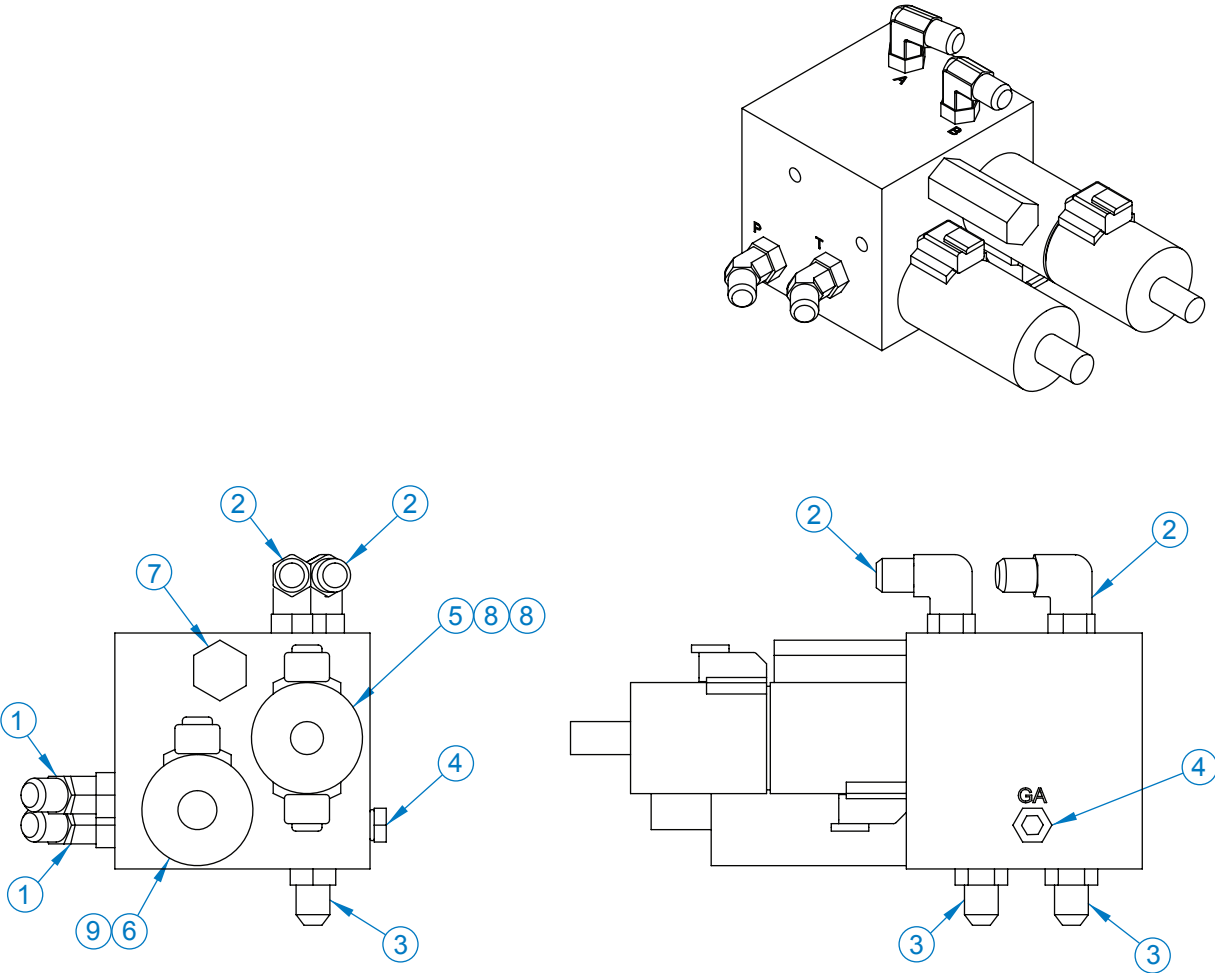


ITEM NO.	QTY	PART NO.	DESCRIPTION
1	2	480195000	FITTING 45 6-SAE/6-JIC
2	2	241175000	FITTING 90 6-SAE/6-JIC
3	2	200876000	FITTING 6 SAE/6 JIC STRAIGHT
4	1	000211000	FTG HYD 4MB-4MJ
5	1	320725001	CART VALVE, SV10-47AM-0-N-00
6	1	320989411	PROP VALVE, PV70-30BM-0-N-00
7	1	320989412	RELIEF VALVE, RV08-21H-0-N-35/21
8	2	460160002	COIL, 4303712
9	1	320989413	COIL, 4303212

26 Electrical Schematic HW P/N: 320989303

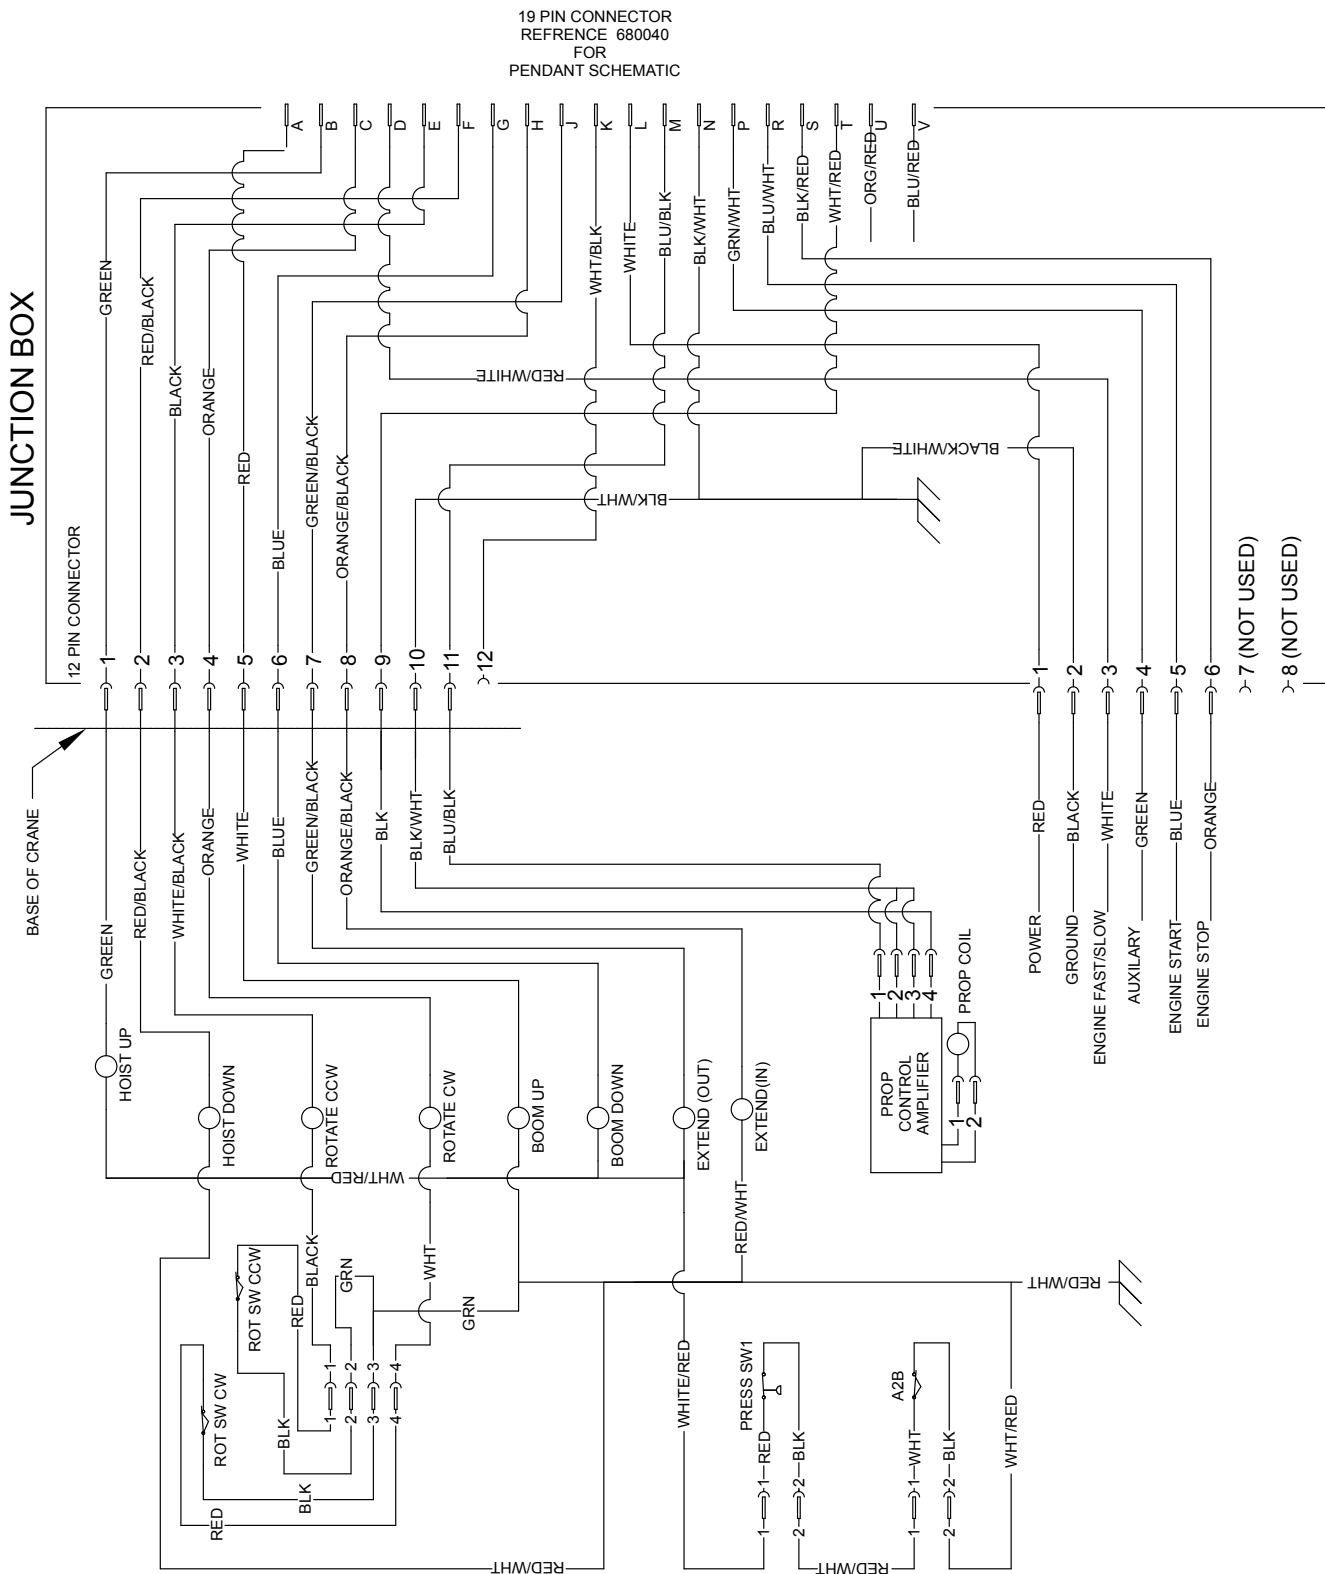


Main Wiring Harness HW P/N: 320989302 27

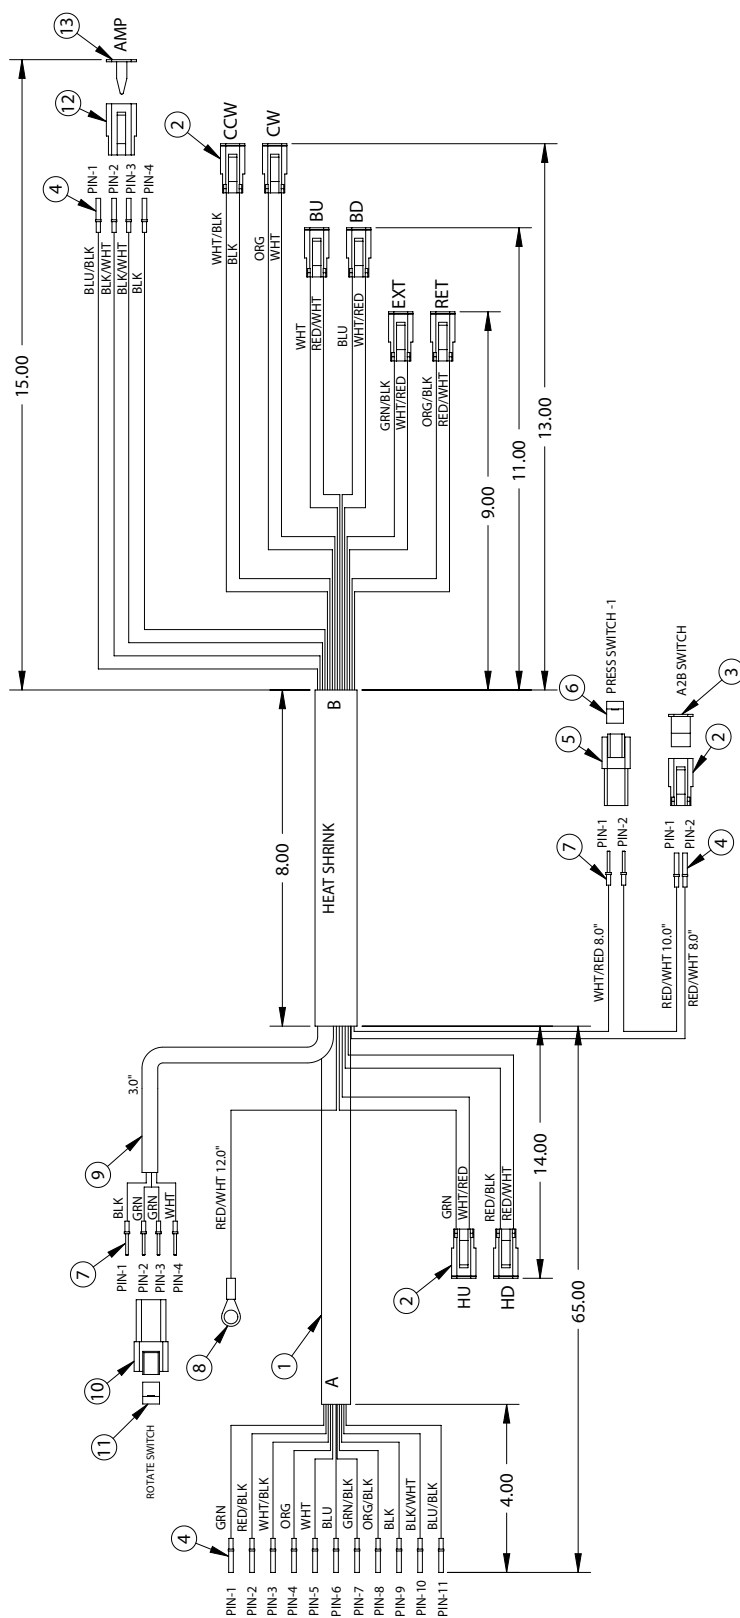


27 Main Wiring Harness HW P/N: 320989302

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	REF	REF	CABLE, 18/11 GRAY PVC JACKET
2	9	366367001	HOUSING, DEUTSCH 2-PIN PLUG
3	9	366367002	WEDGE, DEUTSCH PLUG, 2 PIN
4	37	366367003	CONTACT, DEUTSCH SOCKET
5	1	360769001	HOUSING, DEUTSCH 2-PIN RECEPTACLE
6	1	360769002	WEDGE, DEUTCH 2-PIN RECEPTACLE
7	6	366376003	CONTACT, DEUTSCH
8	1	000501000	TERMINAL RING, 5/16, 14-16 GA
9	REF	800628000	WIRE, 3 CONDUCTOR
10	1	366376001	DEUTSCH DT04-4P
11	1	366376002	WEDGE, DEUTCH 4-PIN RECEPTACLE
12	1	320931001	HOUSING, DEUTSCH 4-PIN PLUG
13	1	320931002	WEDGE DEUTSCH 4-PIN PLUG

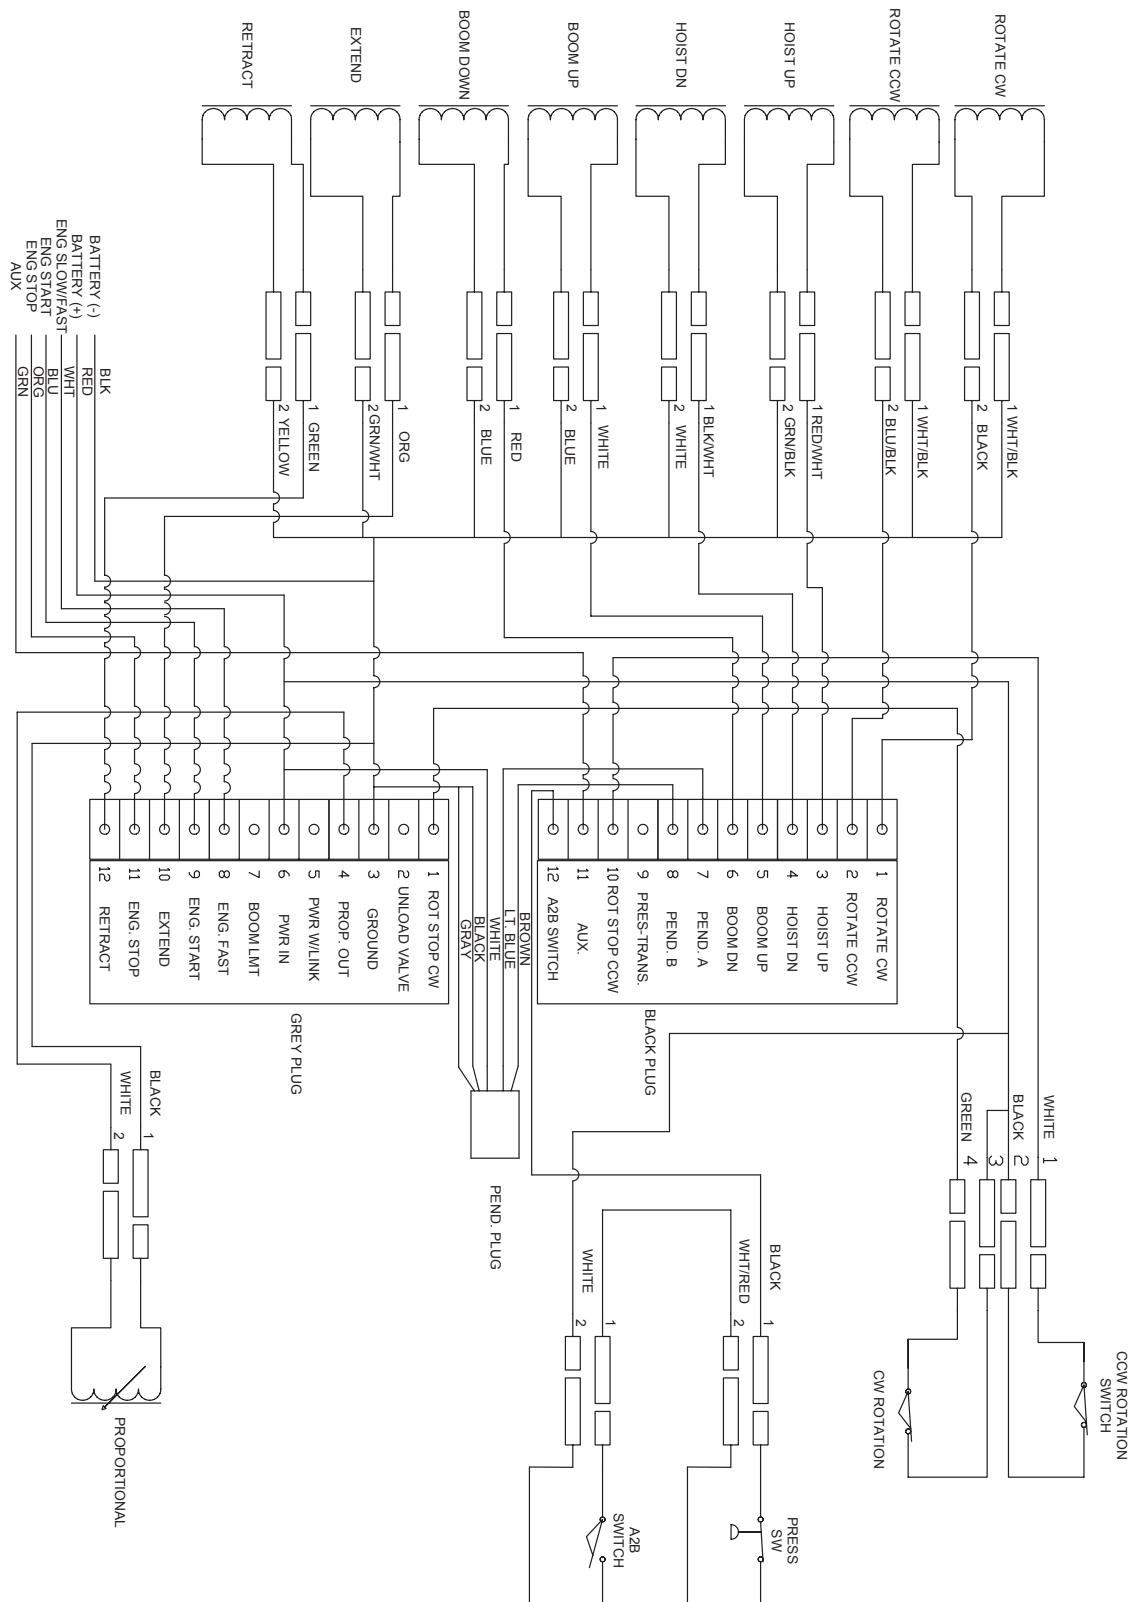

29 Main Wiring Harness FM P/N: 320989304

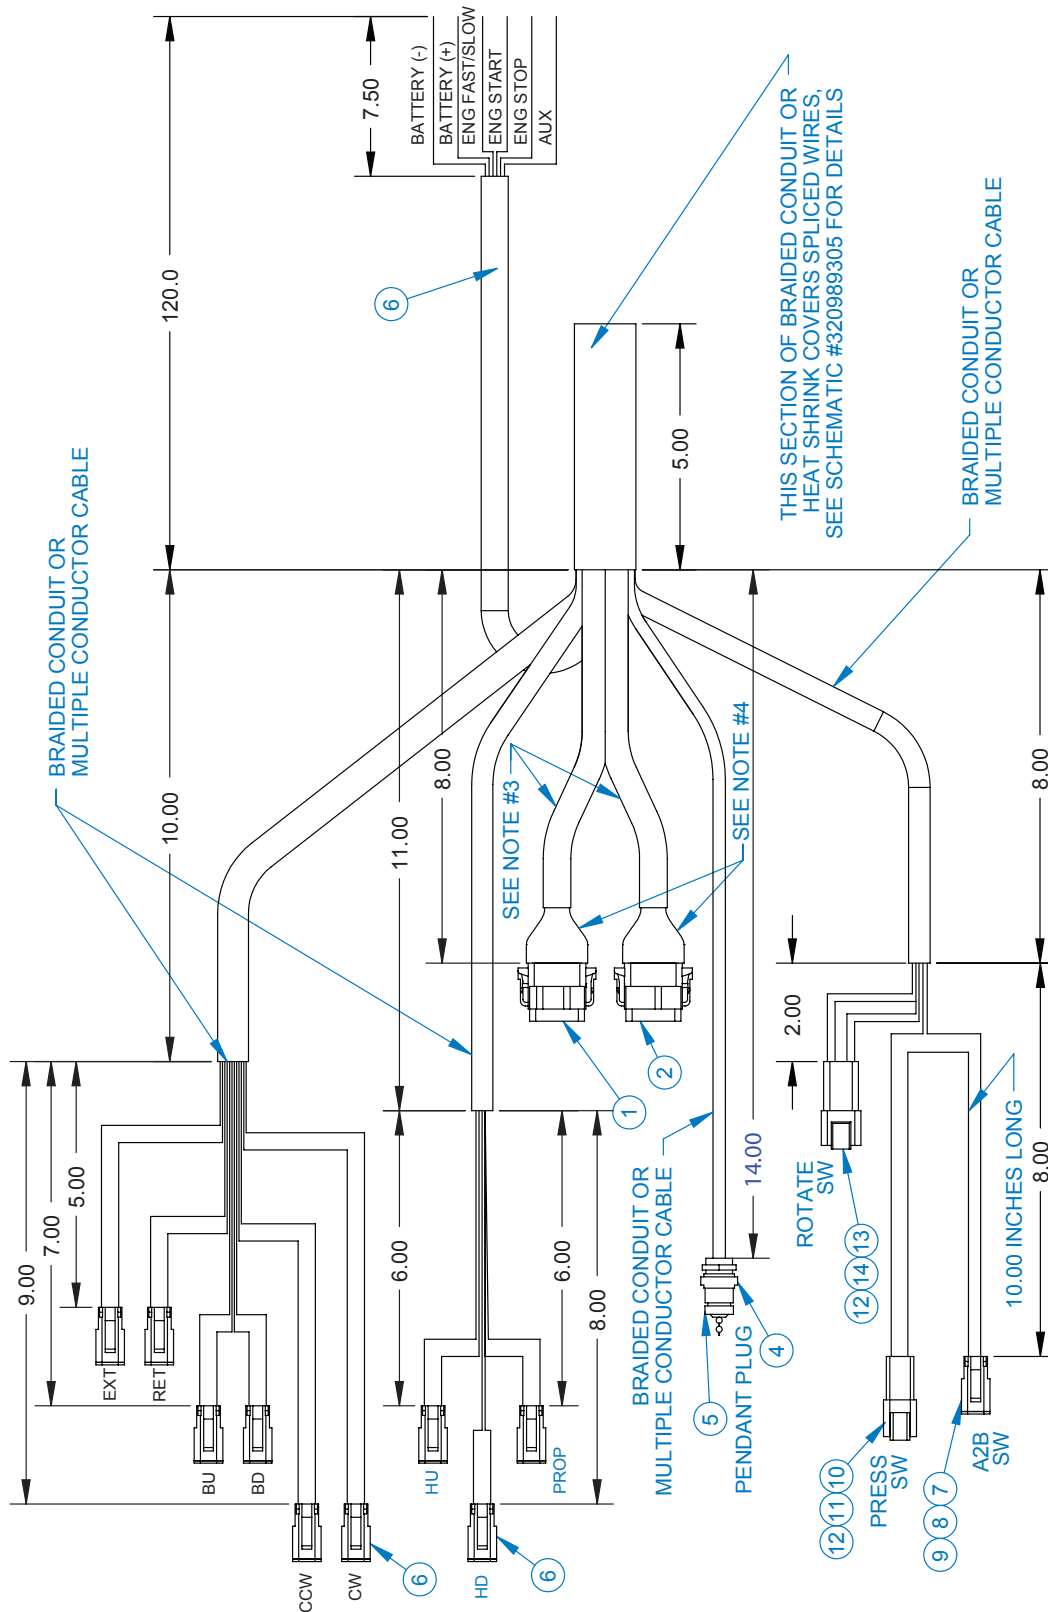

Main Wiring Harness FM P/N: 320989304 29

ITEM NO.	QTY	PART NO.	DESCRIPTION
1	1	680163000	HOUSING, CONNECTOR DEUTSCH 12 PIN (GRAY)
2	1	680163002	HOUSING, CONNECTOR DEUTSCH 12 PIN
3	20	680163001	CONTACT, DEUTSCH (FORMED)
4	1	680164000	PENDANT PLUG (OMNEX)
5	1	680164001	COVER, RECEPTACLE PEND. PLUG (OMNEX)
6	-	-	-
7	10	366367001	HOUSING, DEUTSCH 2-PIN PLUG
8	10	366367002	WEDGE, DEUTSCH PLUG, 2 PIN
9	24	366367003	CONTACT, DEUTSCH SOCKET
10	1	360769001	HOUSING, DEUTSCH 2-PIN RECEPTACLE
11	1	360769002	WEDGE, DEUTCH 2-PIN RECEPTACLE
12	6	366376003	CONTACT, DEUTSCH
13	1	366376001	DEUTSCH DT04-4P
14	1	366376002	WEDGE, DEUTCH 4-PIN RECEPTACLE


ANNEX A

RECOMMENDED OPERATING TEMPERATURE

- 1. In applications where low oil temperatures may exist (below -20° F), an external heating system may be required.
- 2. A symptom of excessively low temperatures is hydraulic motor/PTO operation but no fluid flow from tank.

CAUTION Hydraulic reservoir oil temperature must not exceed 180° F or damage to crane may occur. This may affect crane warranty.

OIL TEMPERATURE

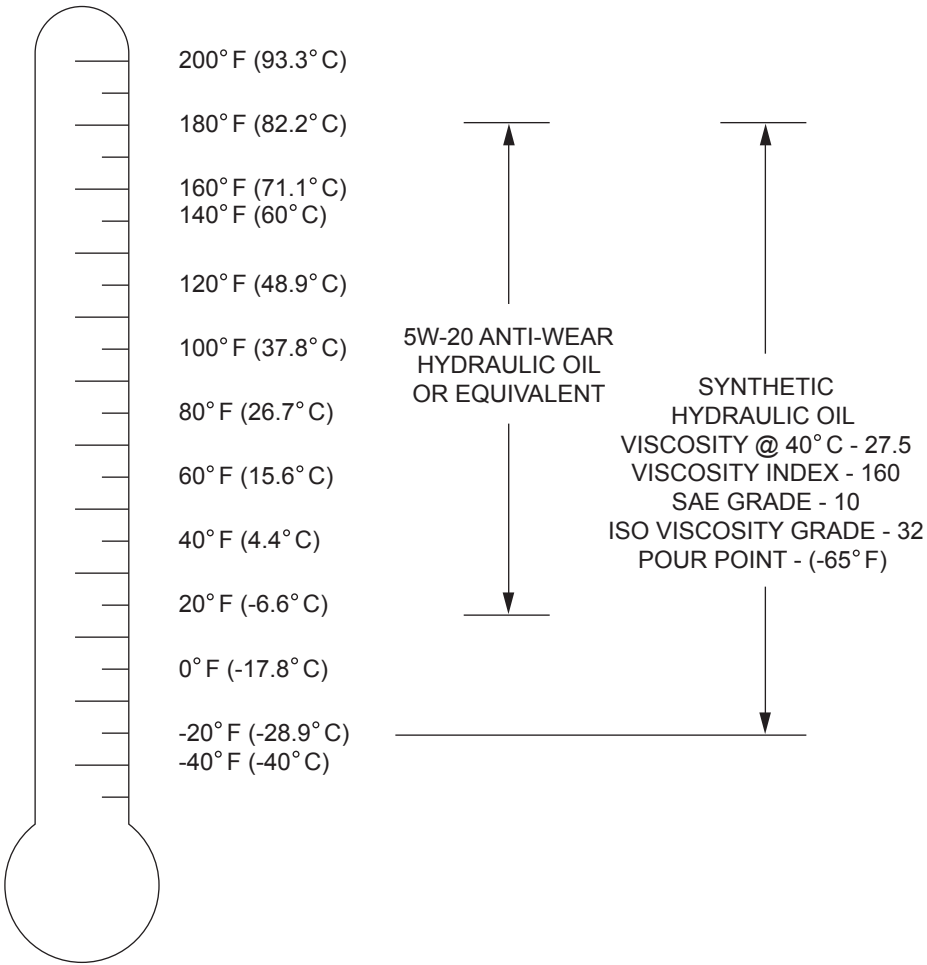

**AUTO CRANE NEW CRANES
LIMITED WARRANTY**

1.1 Scope of Warranty Coverage. Upon the terms and subject to the conditions set forth in this limited warranty:

(a) AUTO CRANE (referred to herein as “**AUTO CRANE**” or the “**Manufacturer**”) warrants to each initial end user customer (a “**Purchaser**”) of a new crane together with any accessories manufactured and sold directly from AUTO CRANE (the “**Product**”) that the Product shall be free from defects in material and workmanship, under normal working and service conditions, for a period of eighteen (18) months from the date the Product is shipped from AUTO CRANE. (the “**Warranty Term**”). A Purchaser shall be eligible for an additional eighteen (18) months of coverage in addition to the Warranty Term (also referred to as the “**Standard (+) PLUS benefit**”) only if the Purchaser (i) complies with Section 1.2(a) and (ii) registers the Product during the Warranty Term at myproduct.autocrane.com.

(b) Notwithstanding the foregoing, this warranty does not cover components damaged by accident, abuse, misuse, neglect, untrained operators, collision, overloading, modification, disassembly, rework, misapplication, improper installation, lack of lubrication or maintenance, or improper service. This warranty does not cover the paint or material finish, removal or reinstallation of the crane or components, or normal wear and tear and loss of functionality due to aging of the Product (which may include but is not limited to bearings, bushings, seals, O-rings, gaskets, brake material, motor brushes, electrical cables and more).

1.2 Eligibility of Warranty Coverage.

(a) A Purchaser shall be eligible for warranty coverage under this Limited Warranty during the Warranty Term only if:

(i) Prior to placing a Product in service, and throughout use of the Product during the Warranty Term, the Purchaser provides (or causes to be provided) proper storage such that foreign objects (e.g. rain or debris) cannot enter any Product through entry ports which are normally closed during operation.; and

(ii) The Purchaser maintains, or causes to be maintained, the Product according to commercially reasonable standards and utilizes the Product for the purposes for which it was created; and

(iii) No repairs or alterations have been made by any party other than AUTO CRANE, including Purchaser, unless otherwise authorized in writing by AUTO CRANE.

1.3 Transferability of Warranty.

(a) This warranty is transferable only from the Purchaser to the first subsequent transferee (the “**Transferee**”) of the Product from Purchaser upon (i) written notification to AUTO CRANE and (ii) registration of the transfer, both within 30 days of such Product transfer.

(b) Upon satisfaction of transfer requirements set forth in Section 1.3(a), the Transferee shall succeed to all the rights and obligations of the Purchaser set forth in this Limited Warranty.

1.4 Certain Limitations on Scope of Warranty Service.

(a) Any obligation of AUTO CRANE under this warranty, statutory or otherwise, is limited to the repair of the Product, at its factory or Authorized Service Centers. Notwithstanding the foregoing, if field service or repair is performed by AUTO CRANE at the request of the Purchaser and no defect is found with material or workmanship of the Product, the Purchaser shall compensate AUTO CRANE for its time and expenses within thirty (30) days of delivery of an invoice relating to the same. If repair is determined by AUTO CRANE in its sole, absolute and uncontrolled discretion to be impossible or impractical, then AUTO CRANE may satisfy this warranty by replacing the Product. AUTO CRANE will not provide any cash payment or credits for defective materials or workmanship.

(b) Purchaser shall be responsible for any and all freight charges for any Product receiving warranty service under this limited warranty. Any travel time, transportation charges, freight charges, or similar costs incurred by AUTO CRANE in connection with the replacement or repair of defective parts, shall, be the responsibility of the Purchaser. If applicable, AUTO CRANE shall invoice Purchaser for the total amount of such charges within sixty (60) days of fulfilling its duties under this warranty, payable within thirty (30) days of delivery of such invoice. In no event shall AUTO CRANE be liable for bills for service, labor or other expenses that have been incurred by the Purchaser without approval or prior authorization by AUTO CRANE for inspection, maintenance, or repair of the Product.

(c) If a Product is found to be operable upon inspection, the Product, at Purchaser's election, may be either (1) returned to the Purchaser with a service charge from AUTO CRANE for inspection, cleaning, and routine replacement of all rubber components and any other parts that show wear; or (2) AUTO CRANE can dispose of the product safely.

1.5 Limitations of Liability. AUTO CRANE shall in no event be liable for punitive, special or consequential damages relating to the Product or this Warranty. AUTO CRANE makes no warranty in respect to third-party accessories, upgrades, or additions to the Product.

1.6 Improving Product. AUTO CRANE reserves the right to improve the Product through changes in design or materials as it may deem desirable or necessary without being obligated to incorporate, upgrade, or otherwise modify previously manufactured products.

1.7 Limitations of Warranty.

(a) THE WARRANTY SET FORTH ABOVE IS THE ONLY EXPRESS WARRANTY. AUTO CRANE HEREBY DISCLAIMS AND EXCLUDES ANY OTHER EXPRESS, IMPLIED, OR STATUTORY WARRANTIES, ARISING BY OPERATION OF LAW, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE, OF TRADE, OR OTHERWISE, INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND INTELLECTUAL PROPERTY RIGHTS OF A THIRD PARTY.

(b) ANY IMPLIED WARRANTY WHICH BY LAW MAY NOT BE EXCLUDED IS LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE OF THE PRODUCT.

(c) This warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

(d) This warranty is valid only in the U.S.A. and Canada. For warranty outside the U.S.A. and Canada contact your nearest AUTO CRANE Distributor.

1.8 No Modifications to Warranty. No AUTO CRANE dealer, distributor, agent or employee is authorized to make any modification, extension or addition to this warranty.

1.9 How to Apply for Warranty Coverage.

All claims are handled by contacting your nearest Auto Crane Dealer. For questions, please contact customer support: accustomersupport@ramseyindustries.com.

Visit [Dealer Locator - Auto Crane](#) for Auto Crane Dealer locations and contact information.

Additional warranty, service support, product information, and parts information can be found on www.autocrane.com.

